





INSTALLATION INSTRUCTIONS




Freelander 1

LR0-FREE-5-A

 Parts List

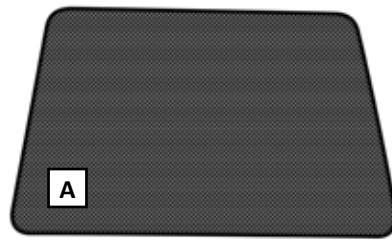

x2

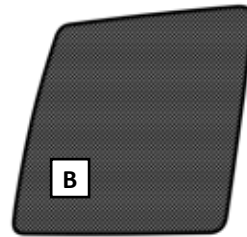

x2



x6



x4

INSTALLATION INSTRUCTIONS - LRO-FREE-5-A

