


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	MK	KB	2950	04/05/23	Replaced SA393 with SA460 and replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					





GA3PR/FL KammBar

Instructions

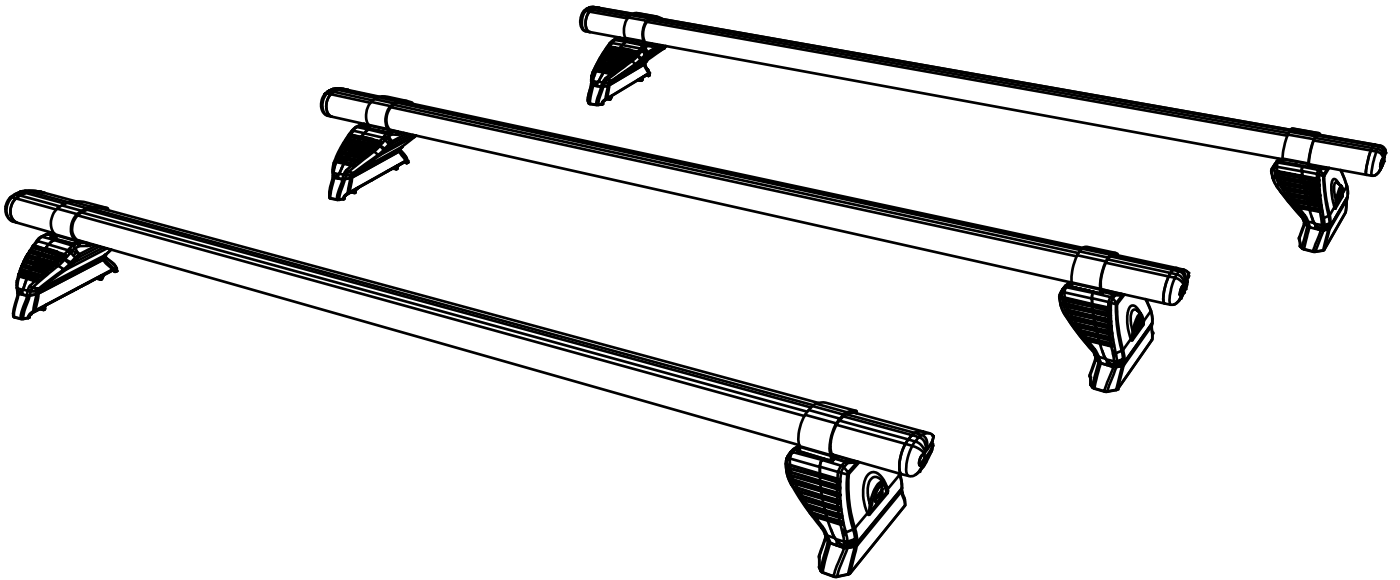


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

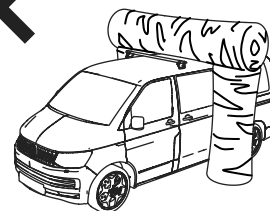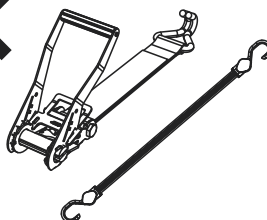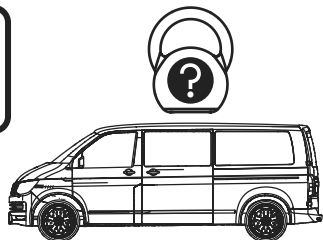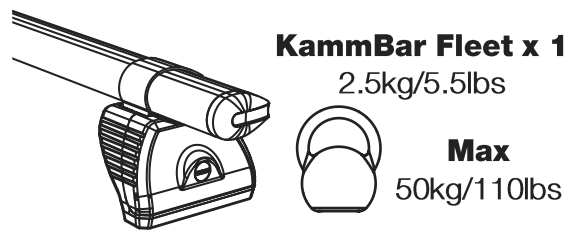


KammBar Pro

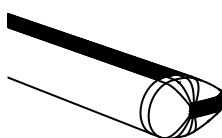


SA419 x 3 ☐

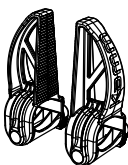

KLS2 x 1 ☐

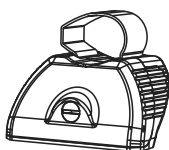


SA397 x 3 ☐

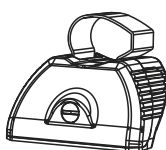


SA398 x 3 ☐


KammBar Fleet

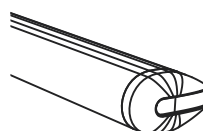


SA460 x 3 ☐



C04 x 3
optional upgrade

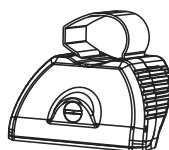


SA397 x 3 ☐

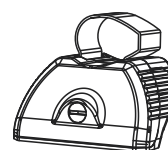


SA398 x 3 ☐


Fitting Kit



PS175 x 2 ☐




PS176 x 2 ☐




PS047 x 6 ☐




FT01 x 1 ☐

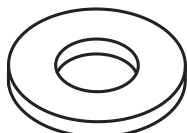

FW002 (M8) x 6

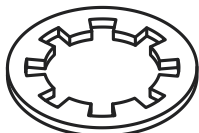


FW009 (M8) x 6



**FS091
(M8 x 60) x 2**




**FS101
(M8 x 45) x 2**




**FS062
(M8 x 25) x 2**



1.

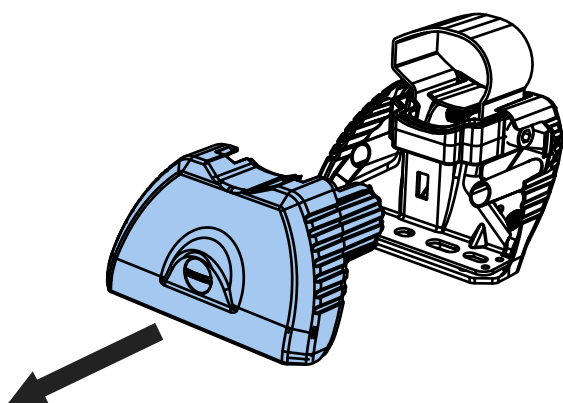

2.

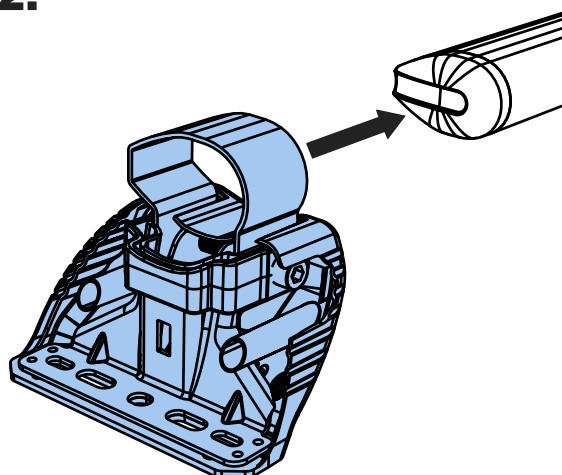

3.




SA397
PS176



SA397



SA397
PS175

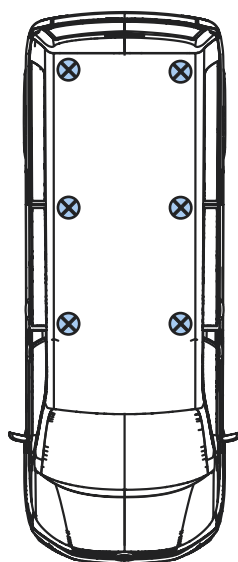

SA398
PS176




SA398



SA398
PS175




4.






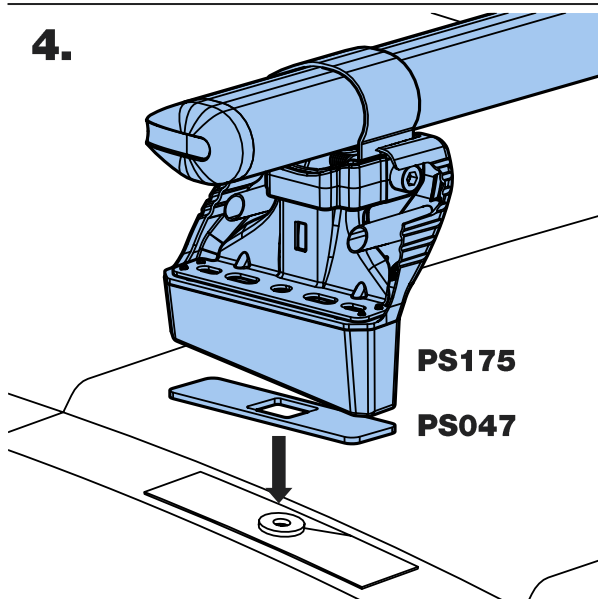


PS175
PS047


5.

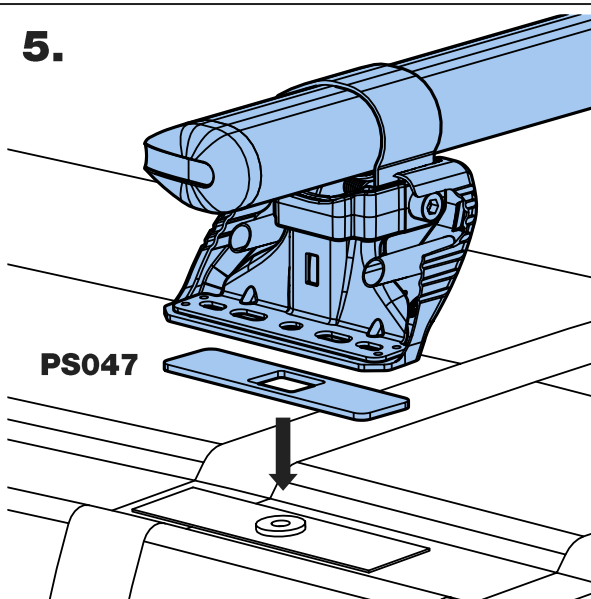


PS047

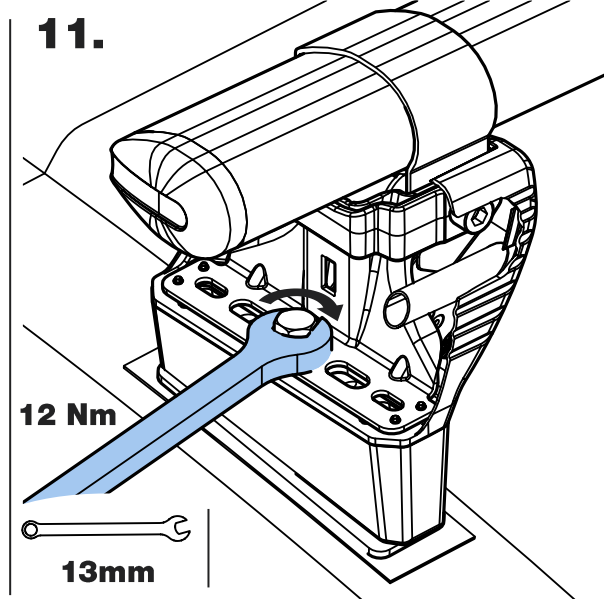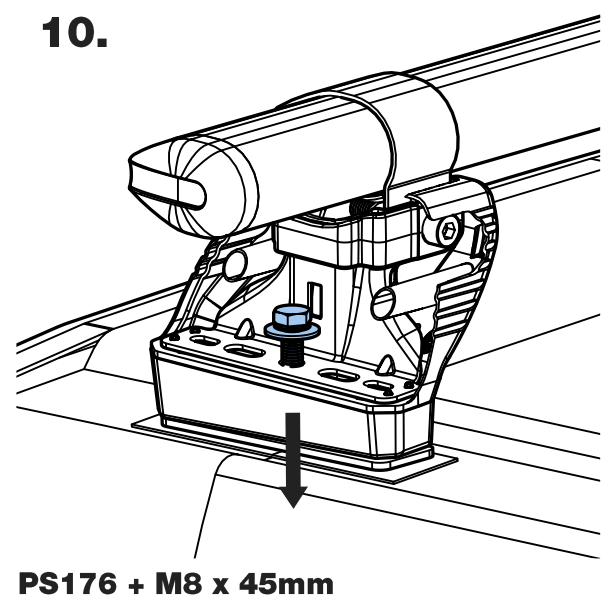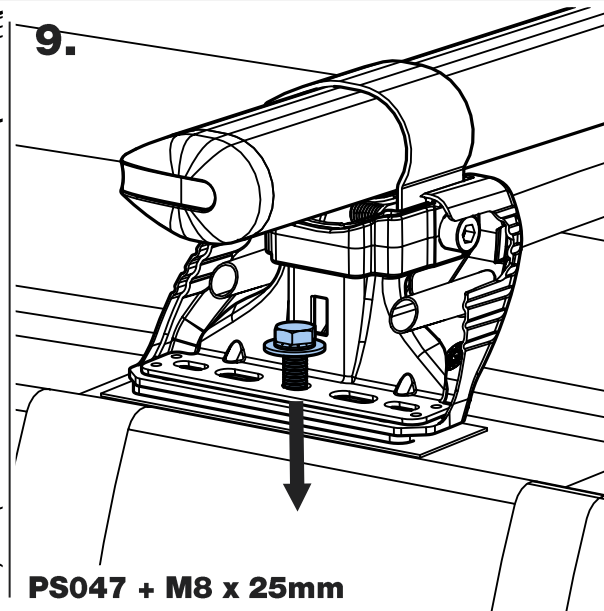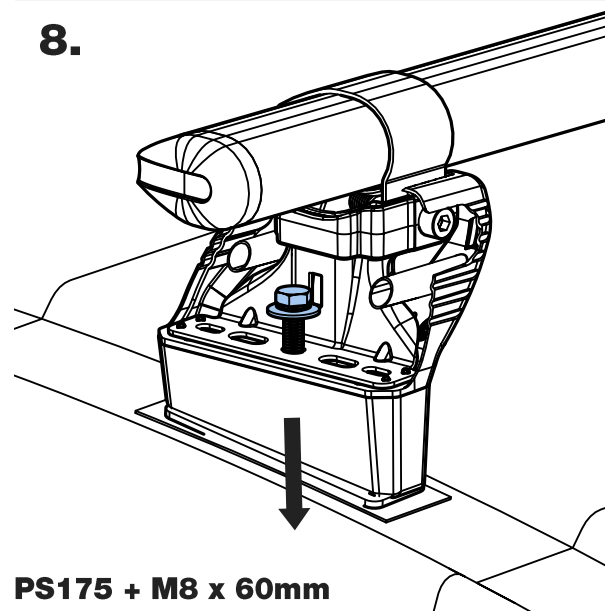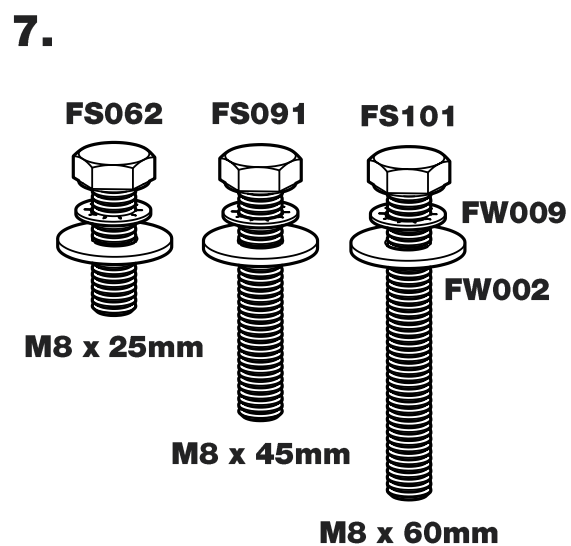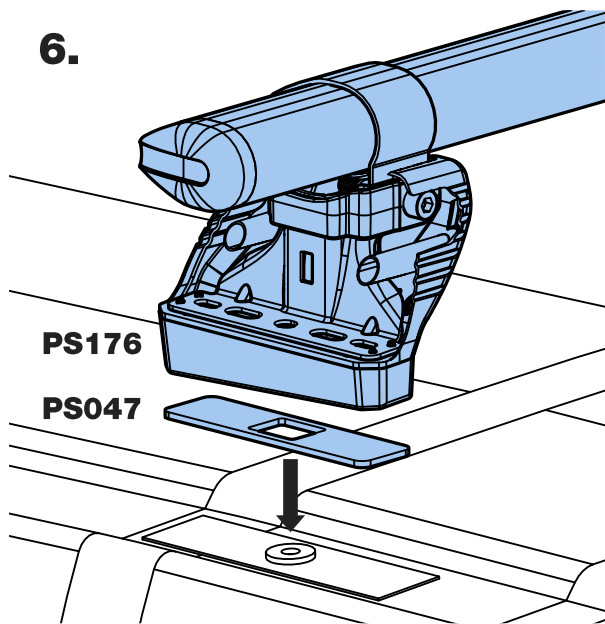


12.

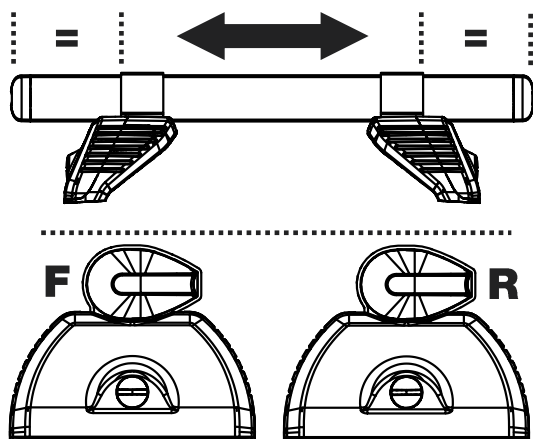

13.

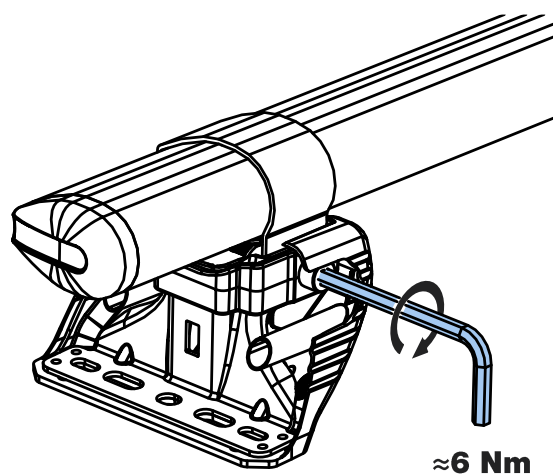

14.

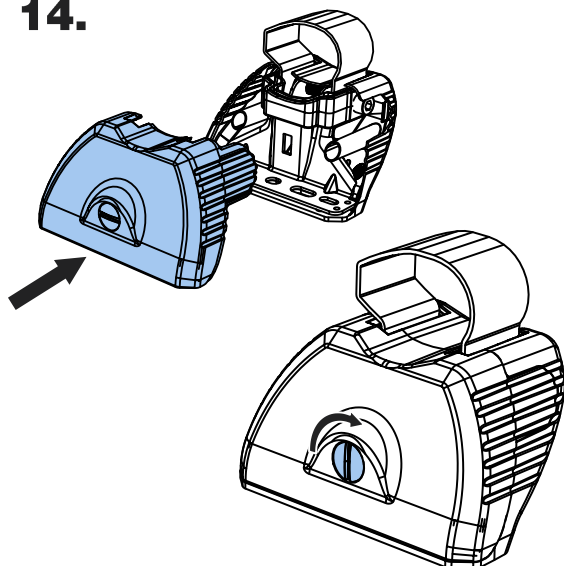

15.

