


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2832	16/11/22	First Issue
b					
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					


MB3FL KammBar

Instructions

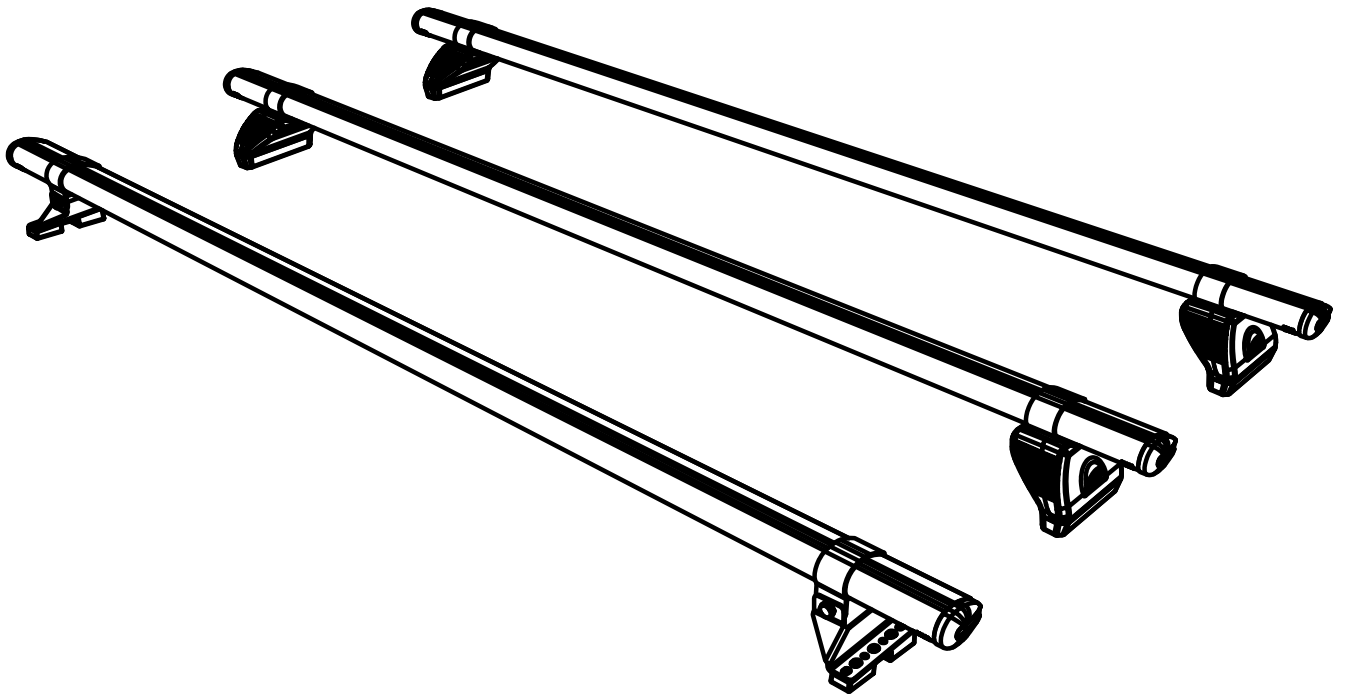

CITY CRASH (✓)




According to ISO/ PAS 11154:2006

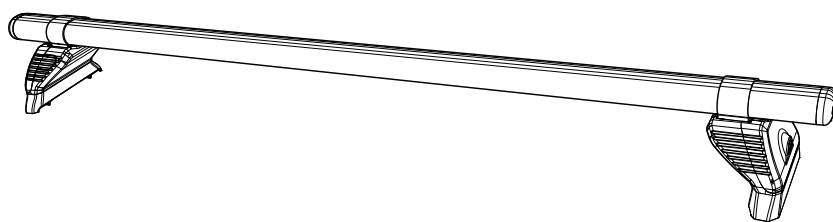


KammBar Fleet x 1
2.5kg/5.5lbs




Max
50kg/110lbs

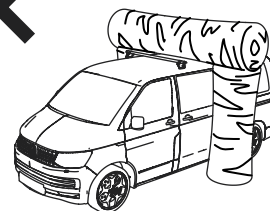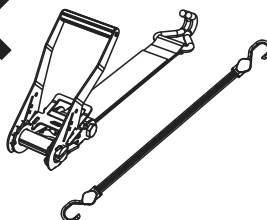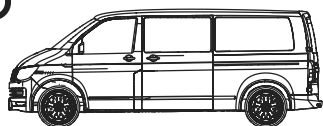


KammBar Fleet

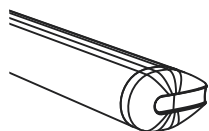


SA395 x 3 ☐

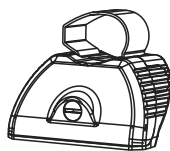


SA397 x 2 ☐

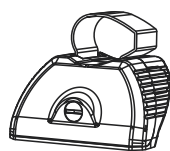

SA398 x 2 ☐

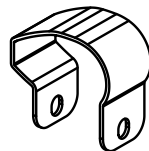


MS1142 x 2 ☐

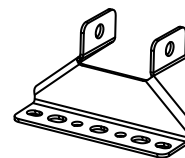

MS1664 x 2 ☐

Fitting Kit




PS183 x 4 ☐




FT01 x 1 ☐



FN020 (M6) x 10 ☐




FS042
(M6 x 40)
x 8 ☐




FW001 (M6) x 10 ☐




FW008 (M6) x 10 ☐




PS024 x 8 ☐




FS001
(M6 x 20)
x 2 ☐



FW002 (M8) x 4 ☐




FN006 (M8) x 2 ☐




PS047 x 2 ☐




FB003 (M8
x 65) x 2 ☐



PS035 x 2 ☐




C04 x 3
optional upgrade




SA070 x 4
optional upgrade


1.

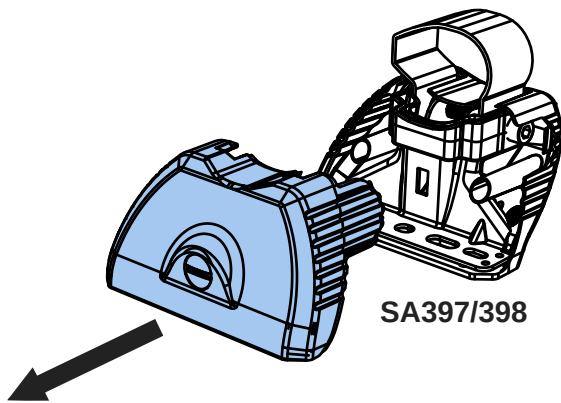


2.

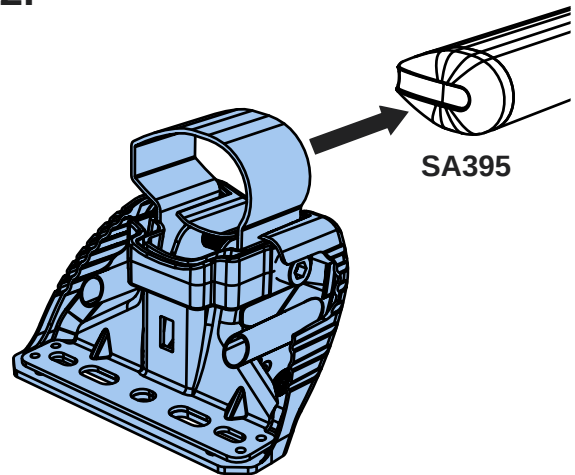


3.

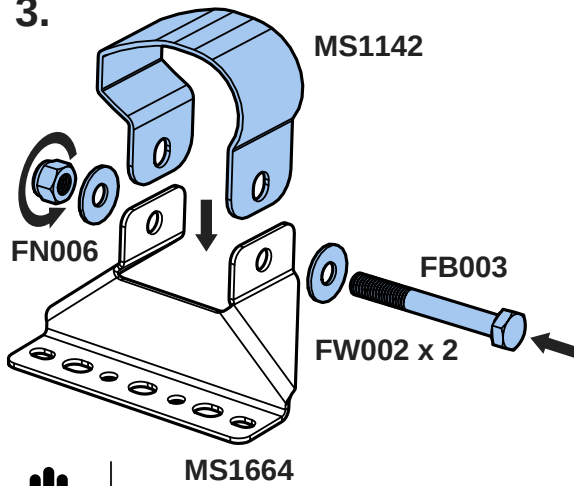

4.

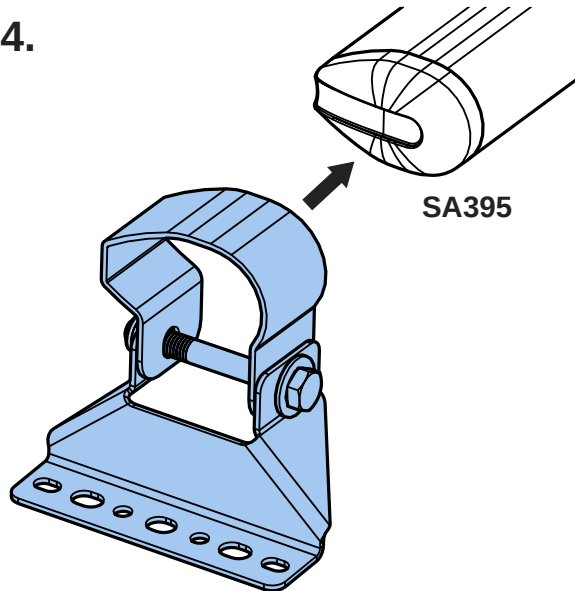


5.




SA397

PS183




SA397

PS183




MS1664

PS035

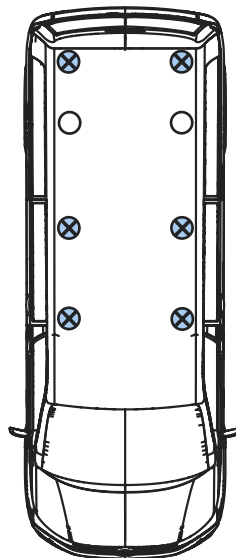


SA398

PS183




SA398







PS183









MS1664

PS035




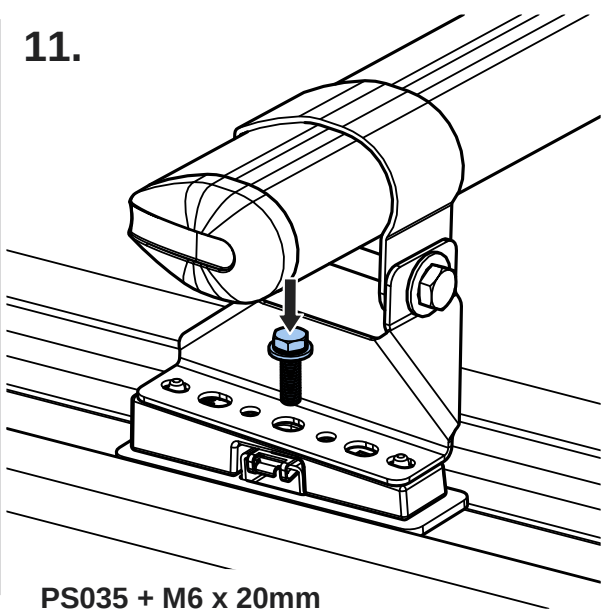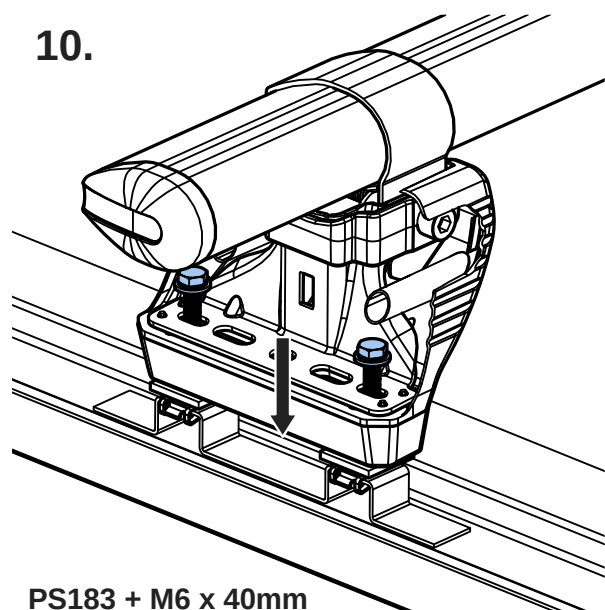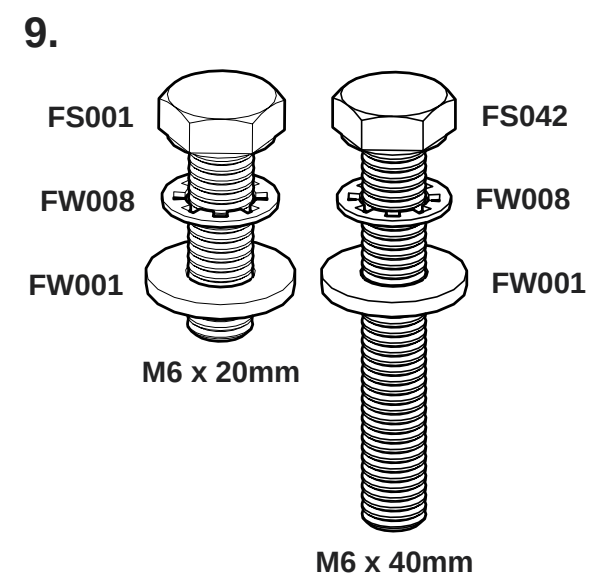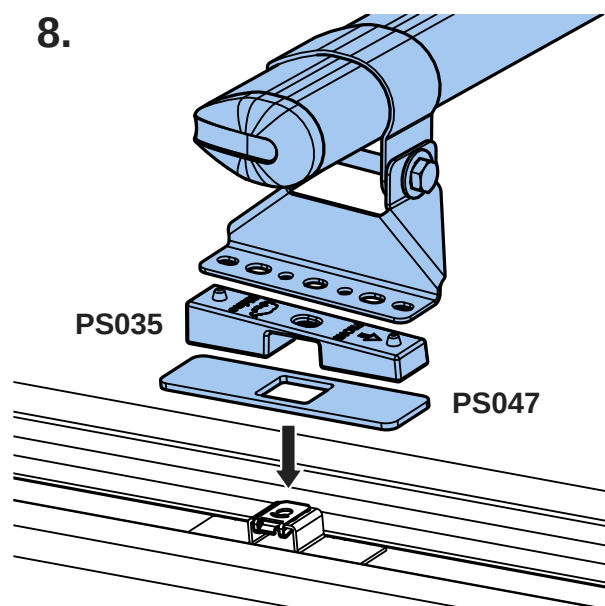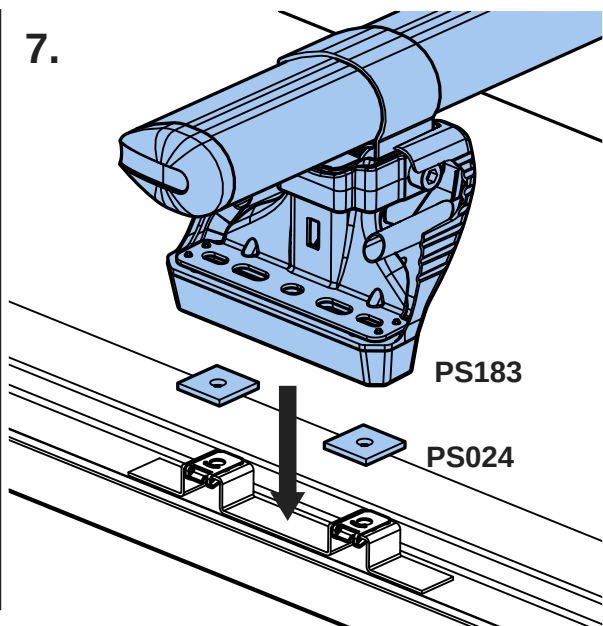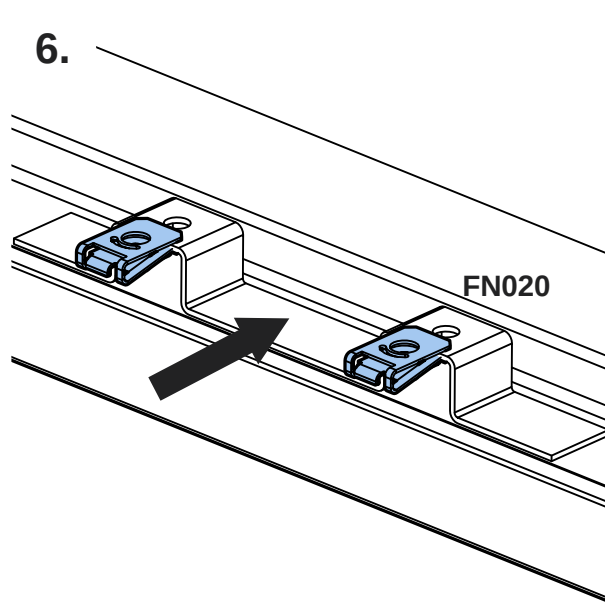

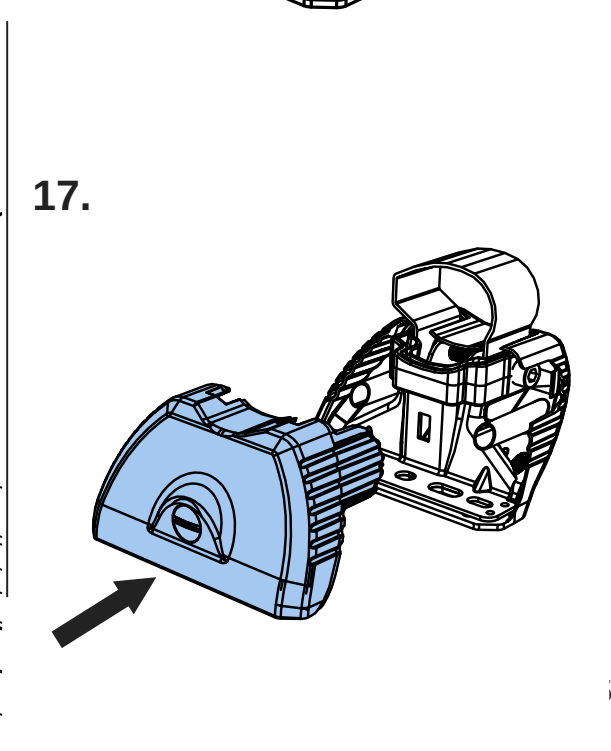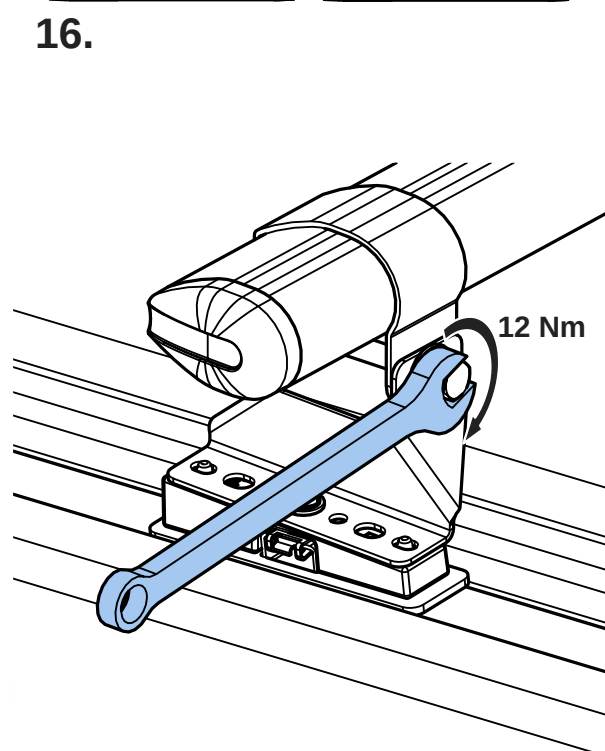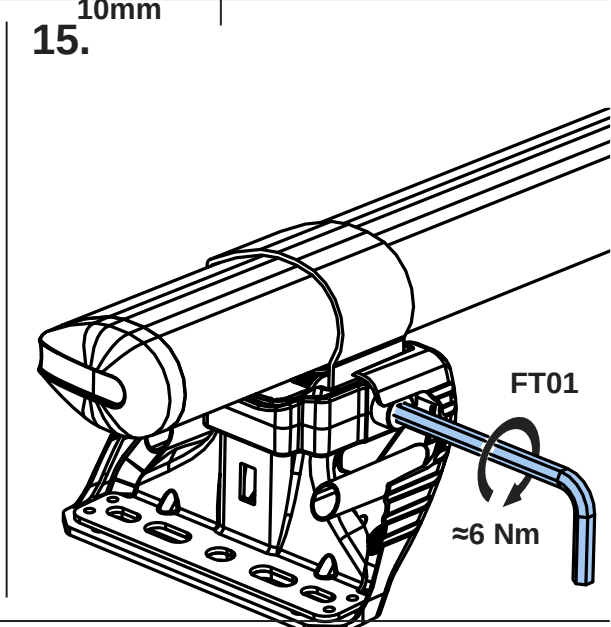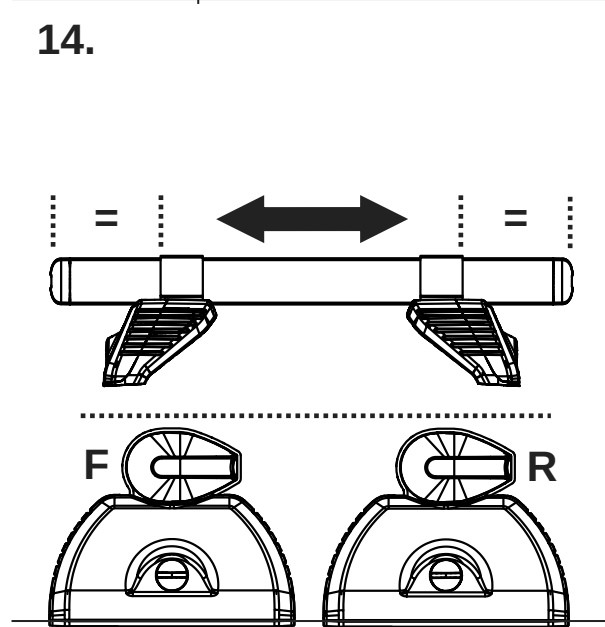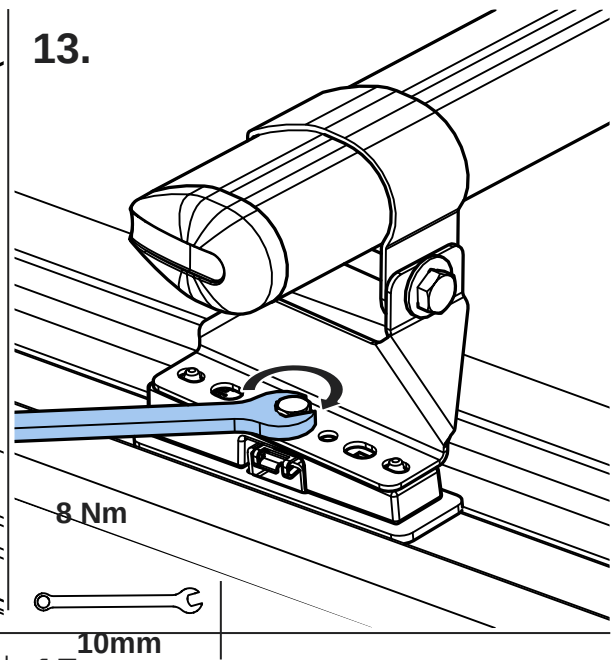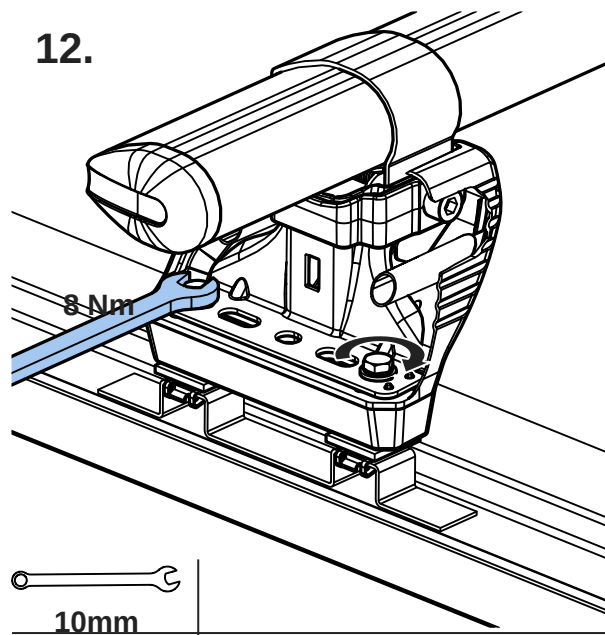

13mm x 2

18.

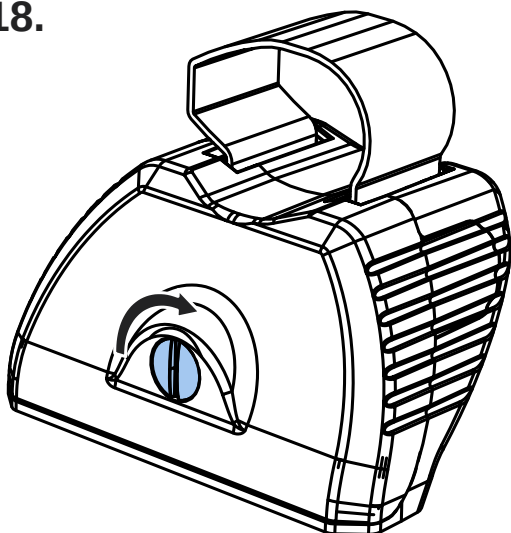

19.

