



FITTING INSTRUCTIONS




FITTING INSTRUCTIONS

FITTING KIT CONTENTS FK889  
(1:1)

FITTING TIME: 30 Minutes

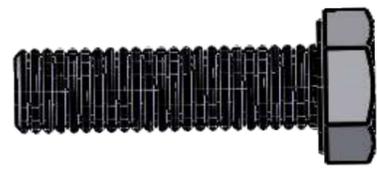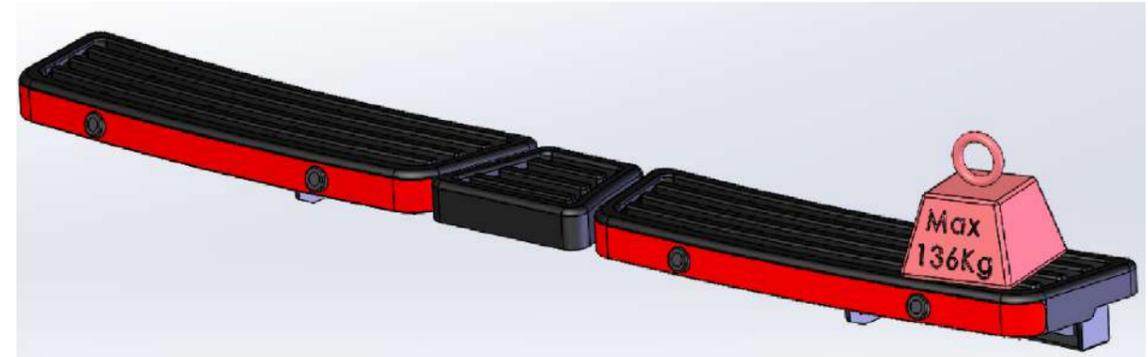


FB006 (M8 x 30) x 4

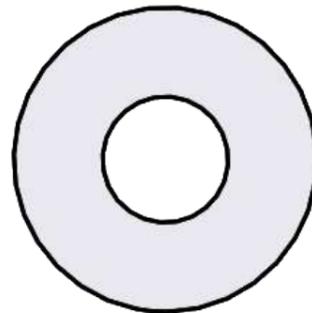


FW026 (M12) x 8



FN006 (M8) x 4

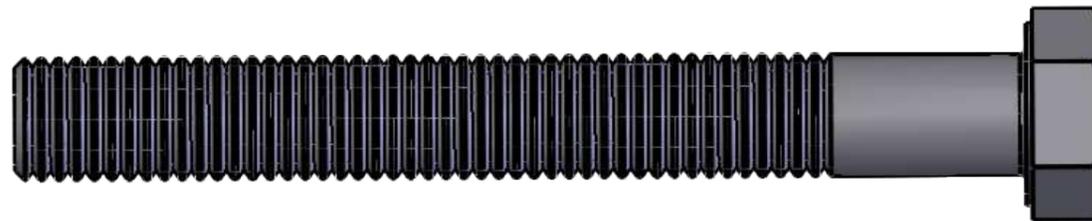


FS085 (M12 x 100) x 4

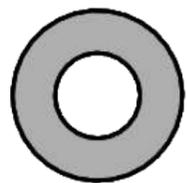





FW021 (M8) x 8




FN034 (M12) x 4

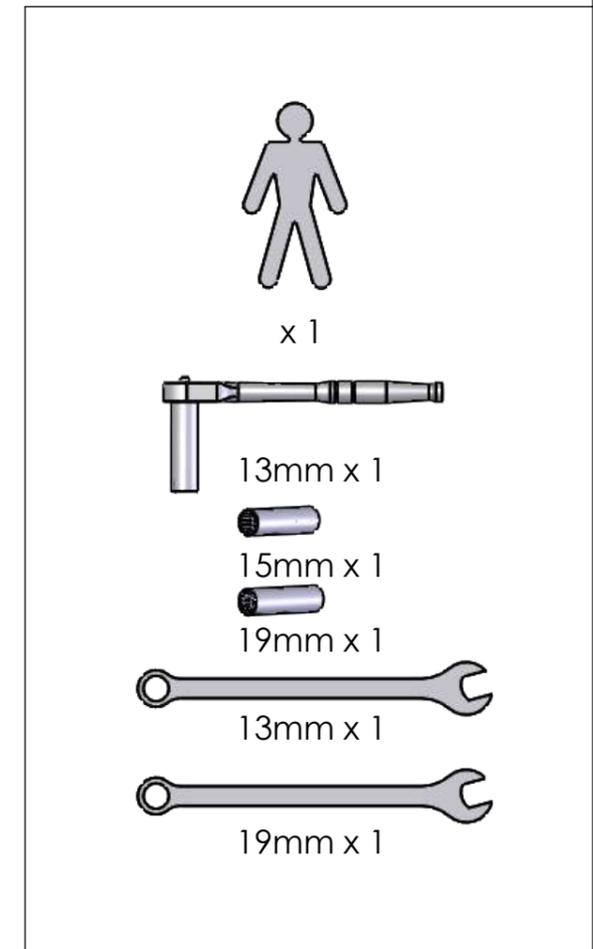



FITTING INSTRUCTIONS

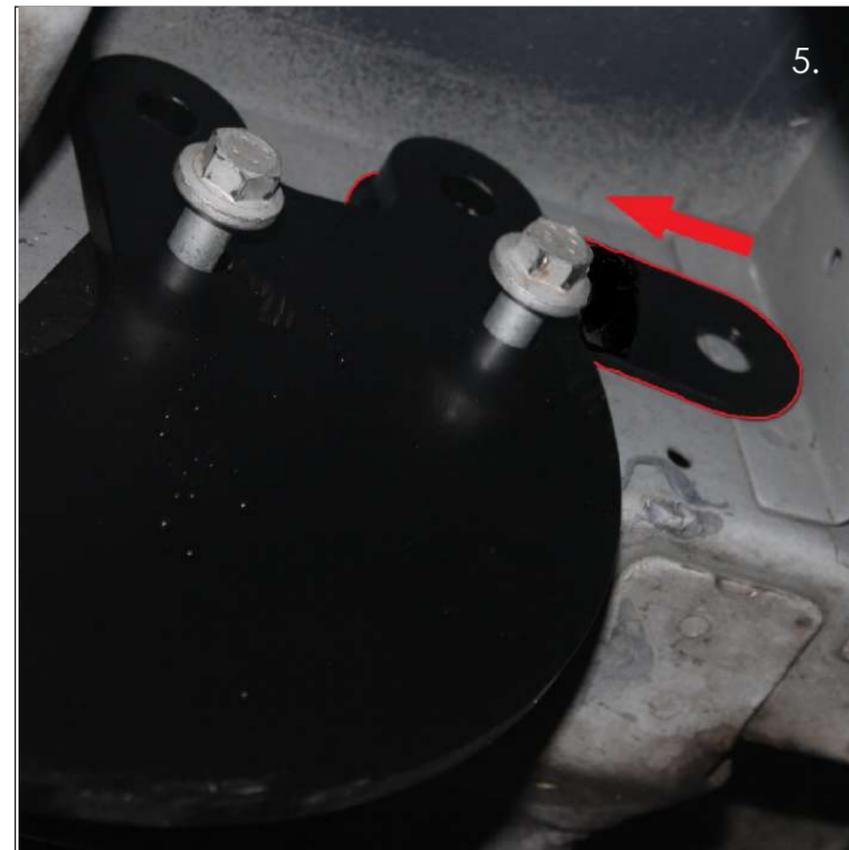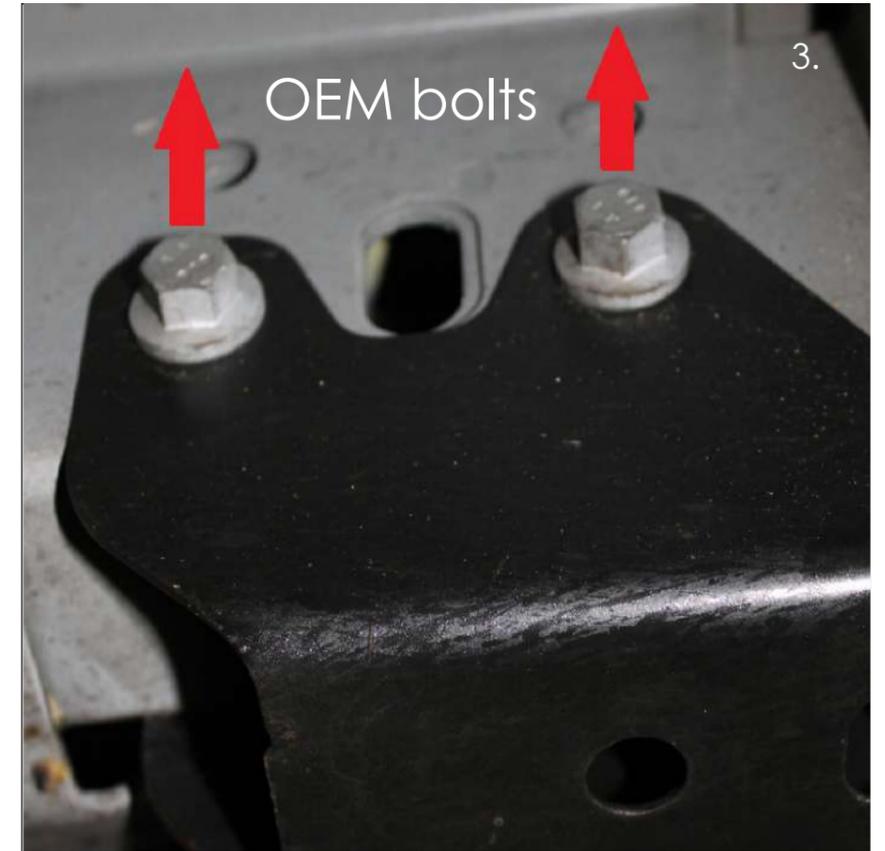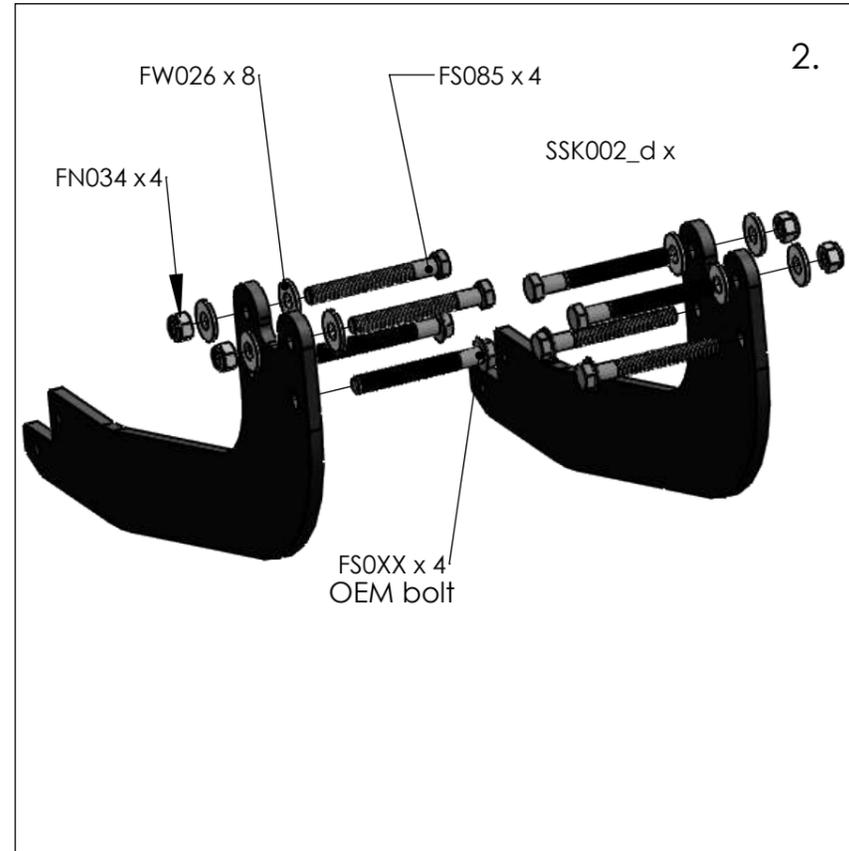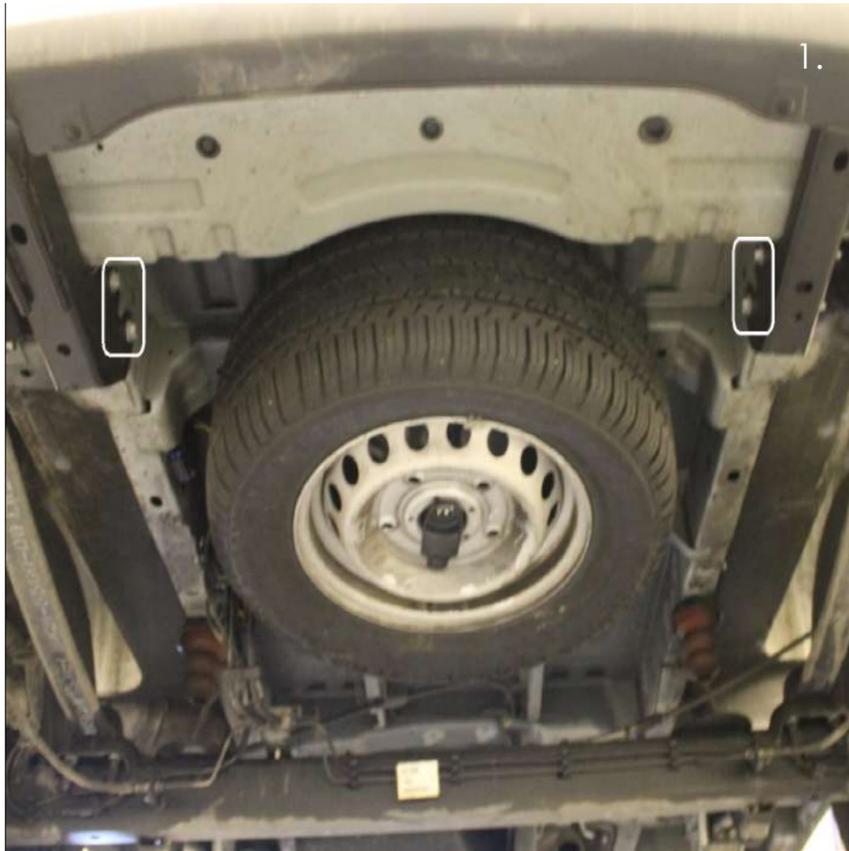

FITTING INSTRUCTIONS

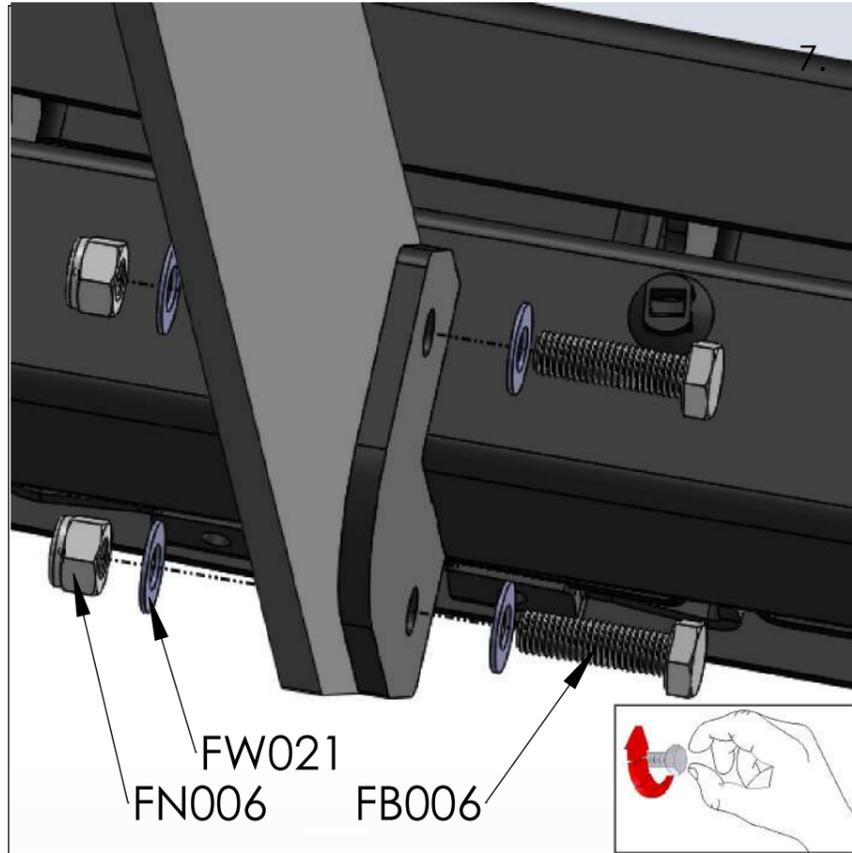

# IMPACT STEP FITTING INSTRUCTIONS

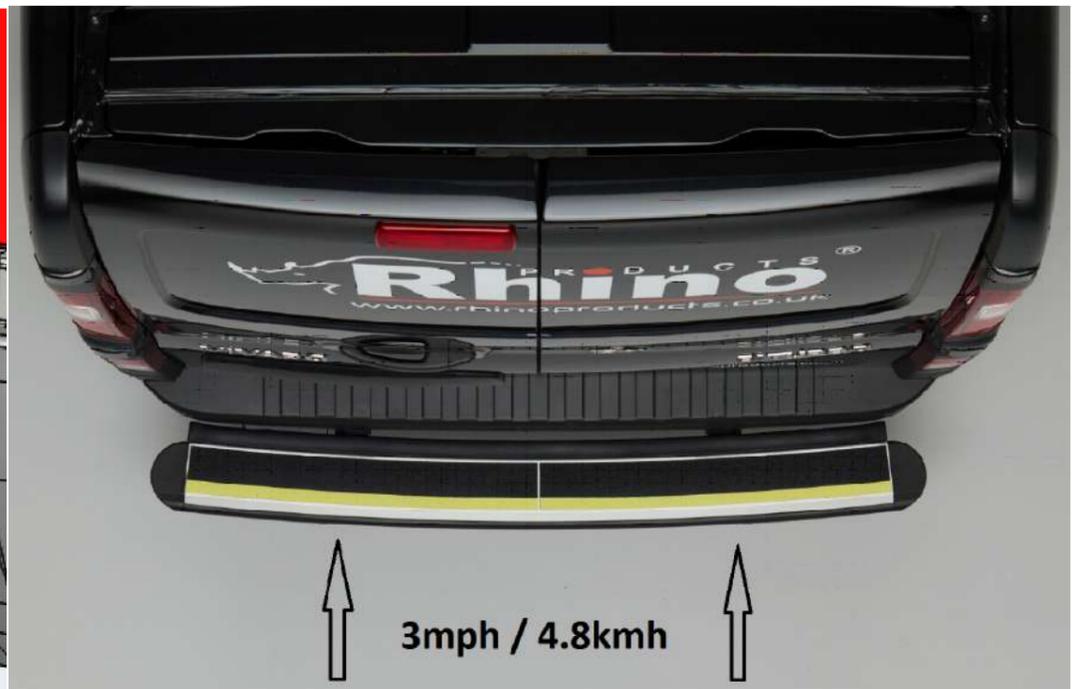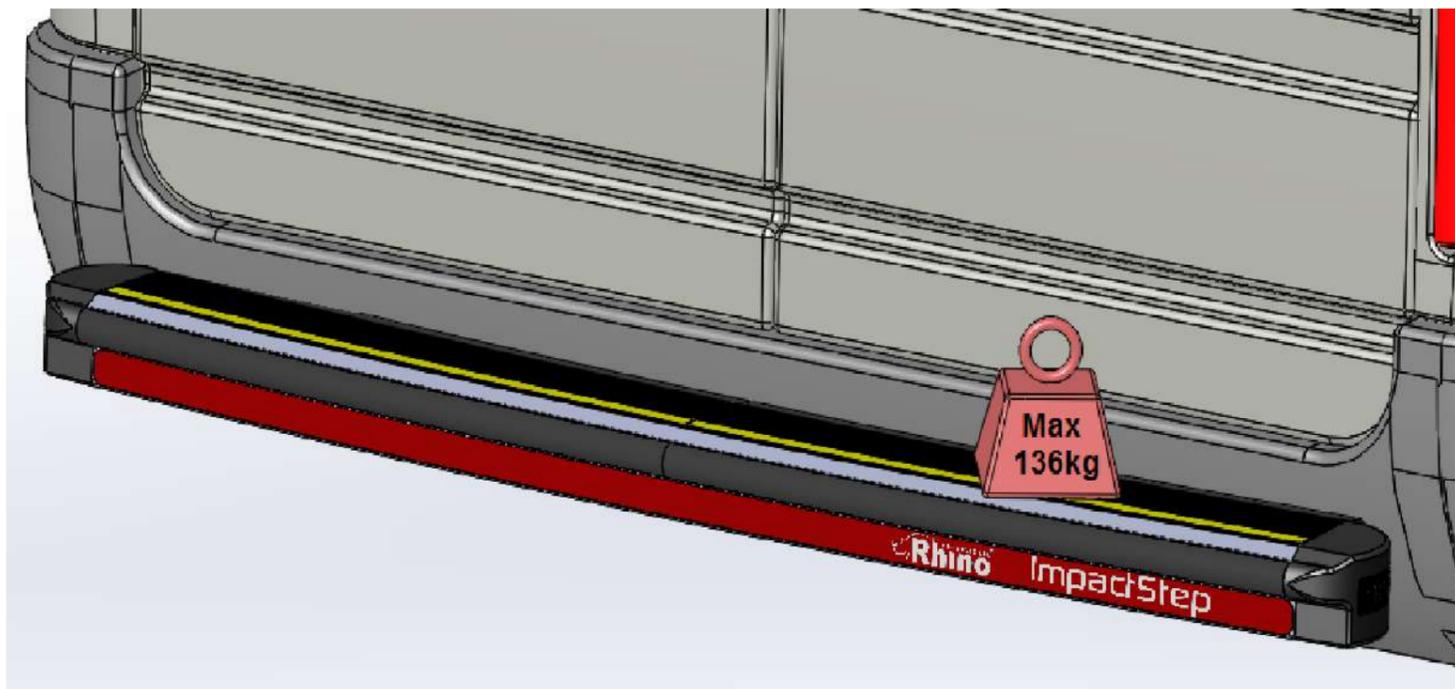

IMPACT STEP FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK889  
(1:1)

FITTING TIME: 30 Minutes




FW020 (M8) x 4

SAFESTEP	✗
IMPACT STEP	✓

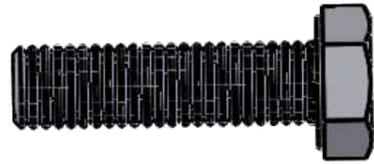

FB006 (M8 x 30) x 4

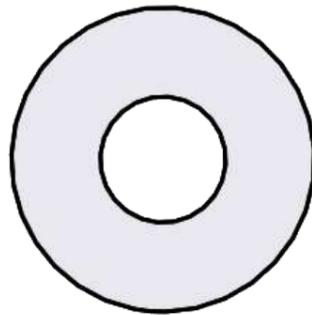


FW026 (M12) x 8




FN006 (M8) x 4

SAFESTEP	✓
IMPACT STEP	✗

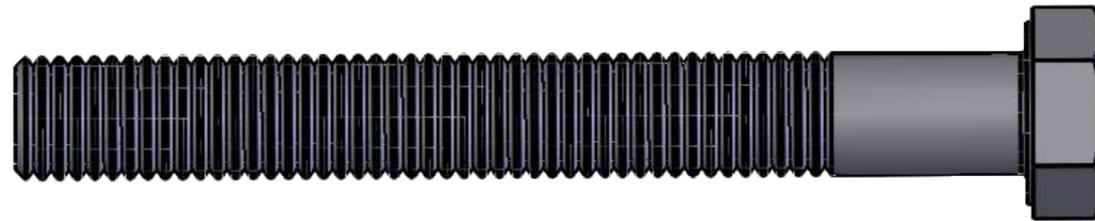

FS085 (M12 x 100) x 4



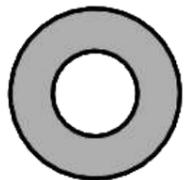


FW021 (M8) x

SAFESTEP	8
IMPACT STEP	4



FN034 (M12) x 4

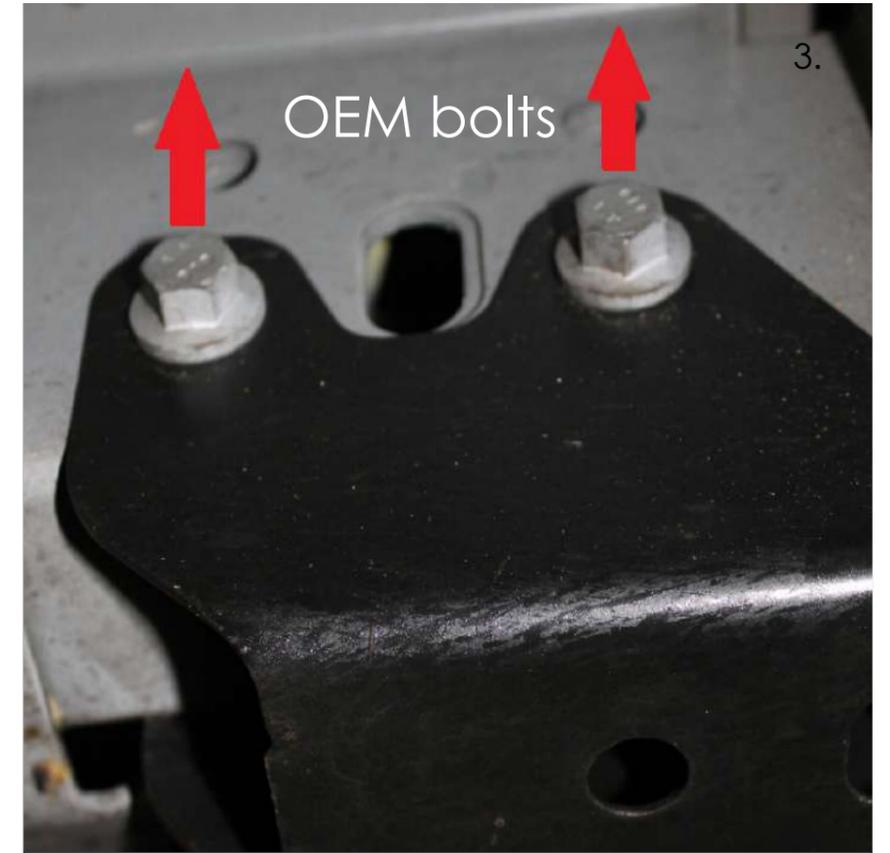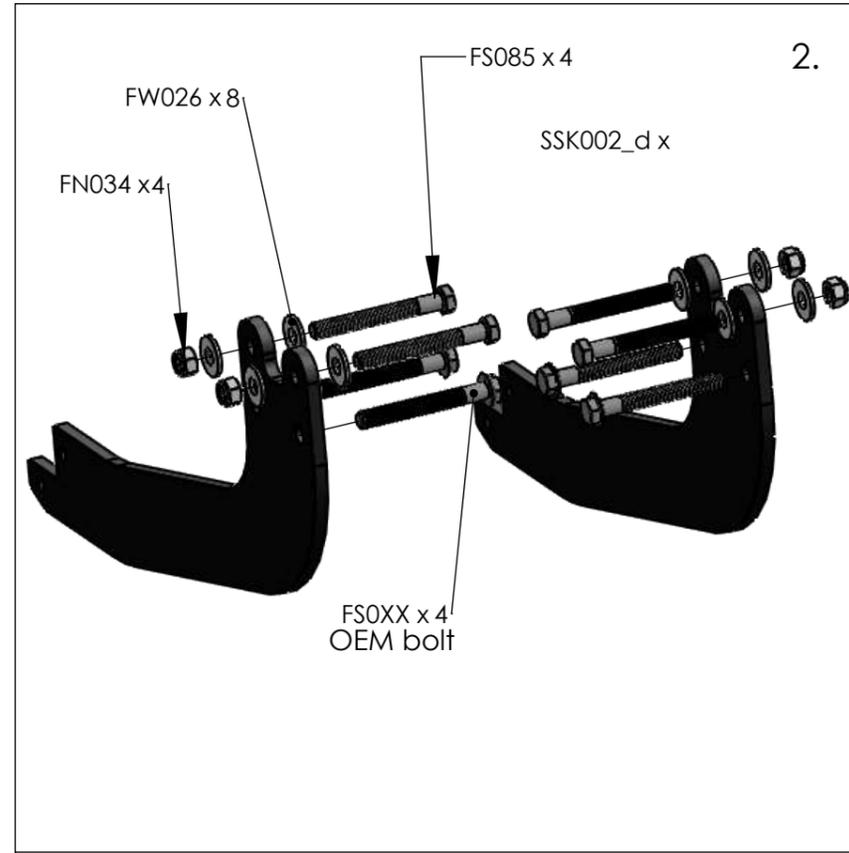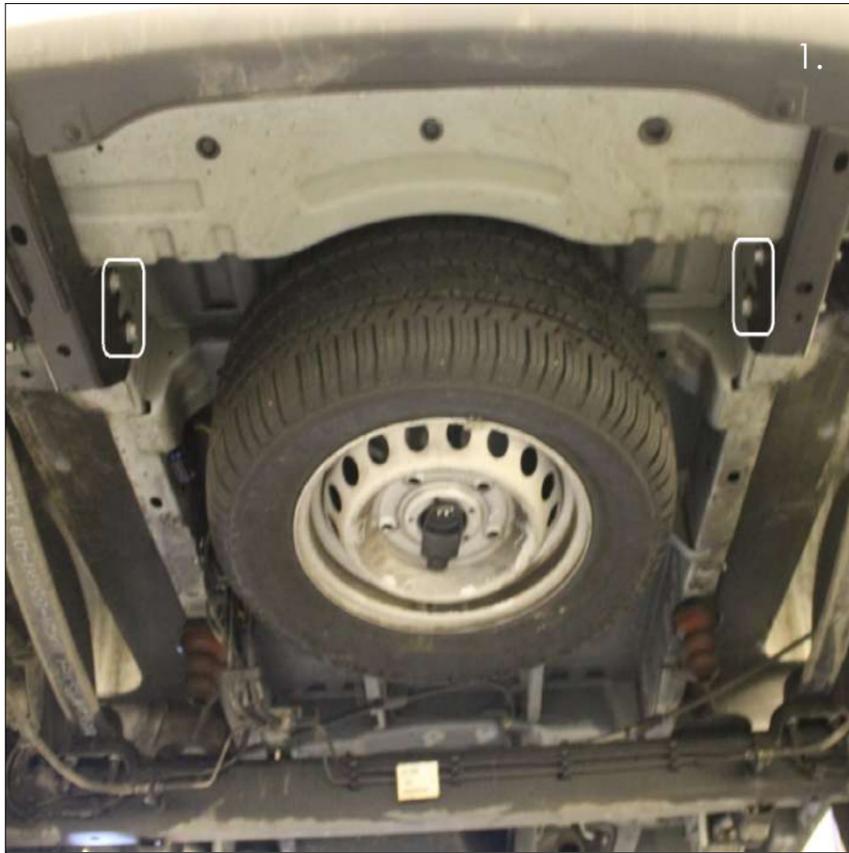

### IMPACT STEP FITTING INSTRUCTIONS

