

SSK005_

Sprinter Outrigger Fitting Kit

FITTING INSTRUCTIONS



FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK952
(1:1)

1.




FW020 (M8) x 4

SAFESTEP	✗
IMPACT STEP	✓

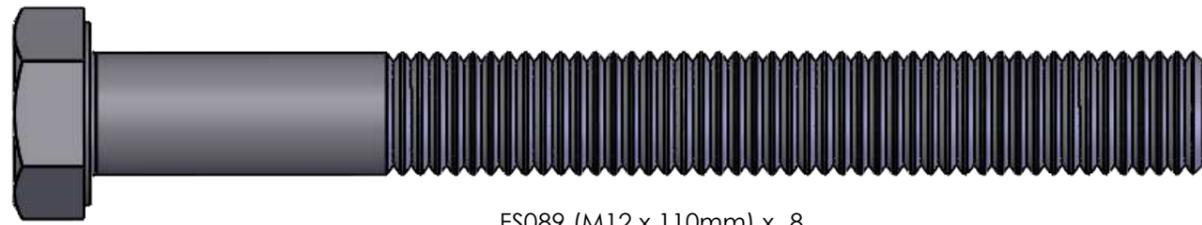


FS089 (M12 x 110mm) x 8

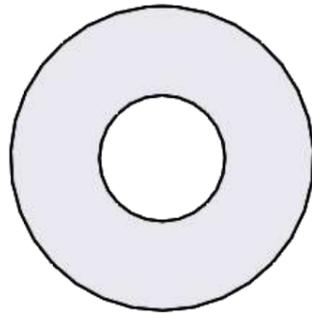


FW026 (M12) x 16



FN034 (M12) x 8

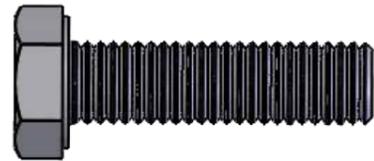

FB006 (M8 x 30mm) x 4

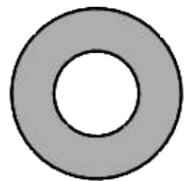


FW021 (M8) x 8



FN006 (M8) x 4

FITTING TIME: 20 Minutes

2.

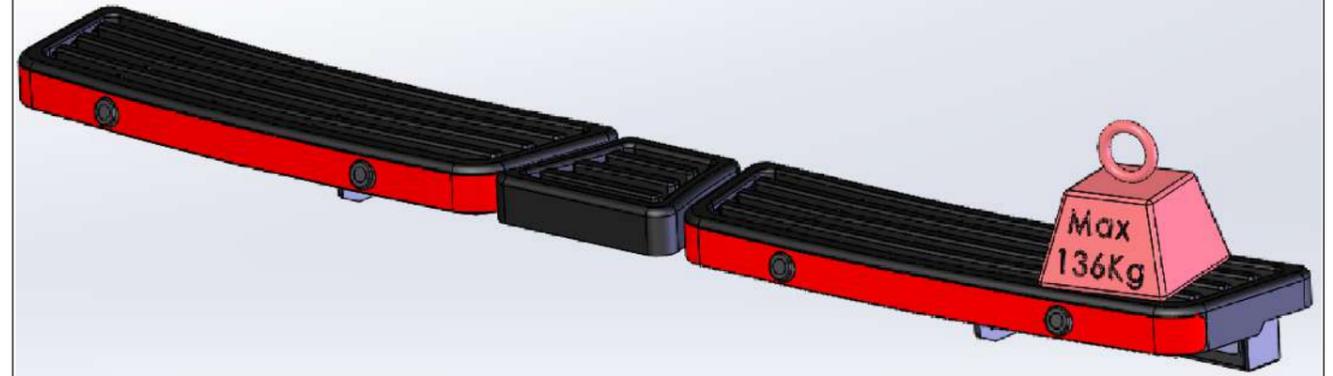

x 1




13mm x 1



19mm x 1



19mm x 1







18mm x 1





13mm x 1

FITTING INSTRUCTIONS

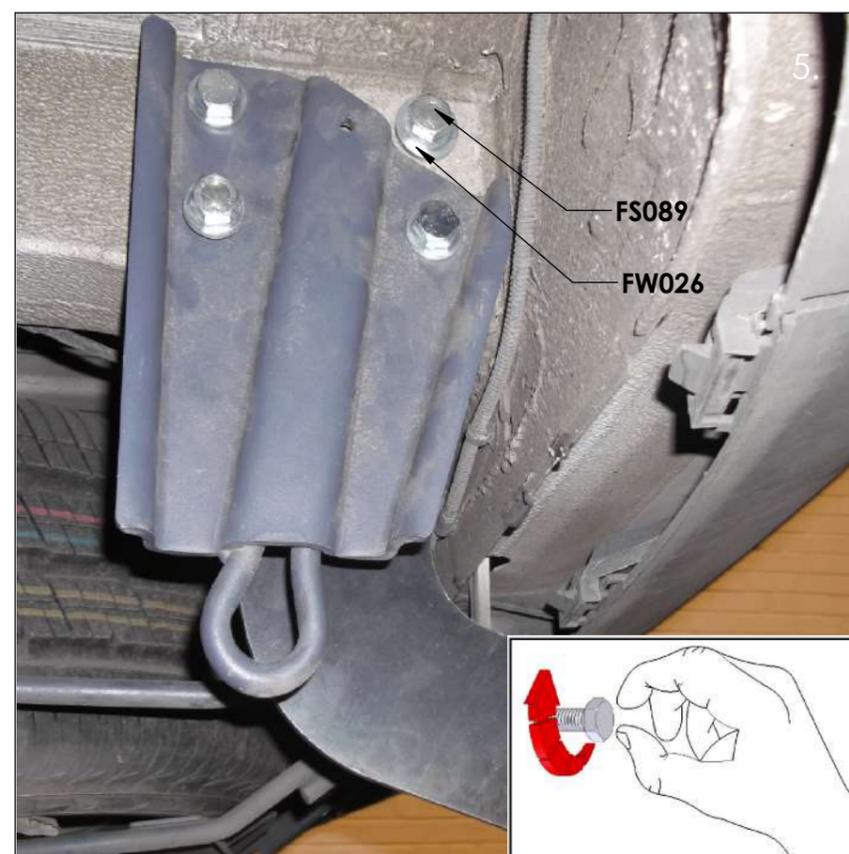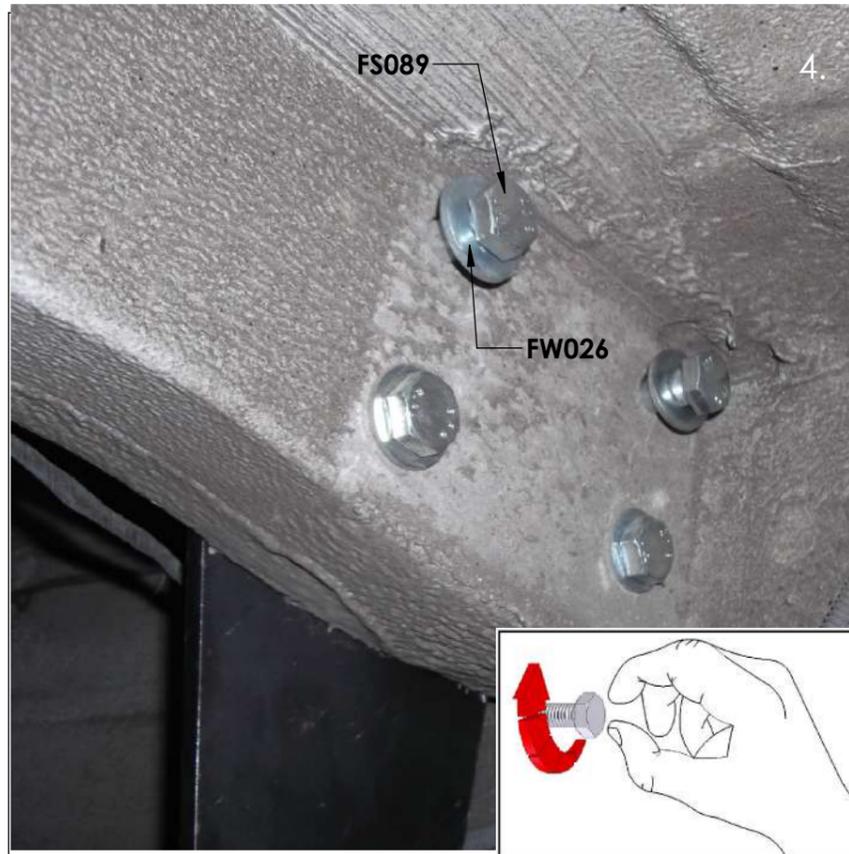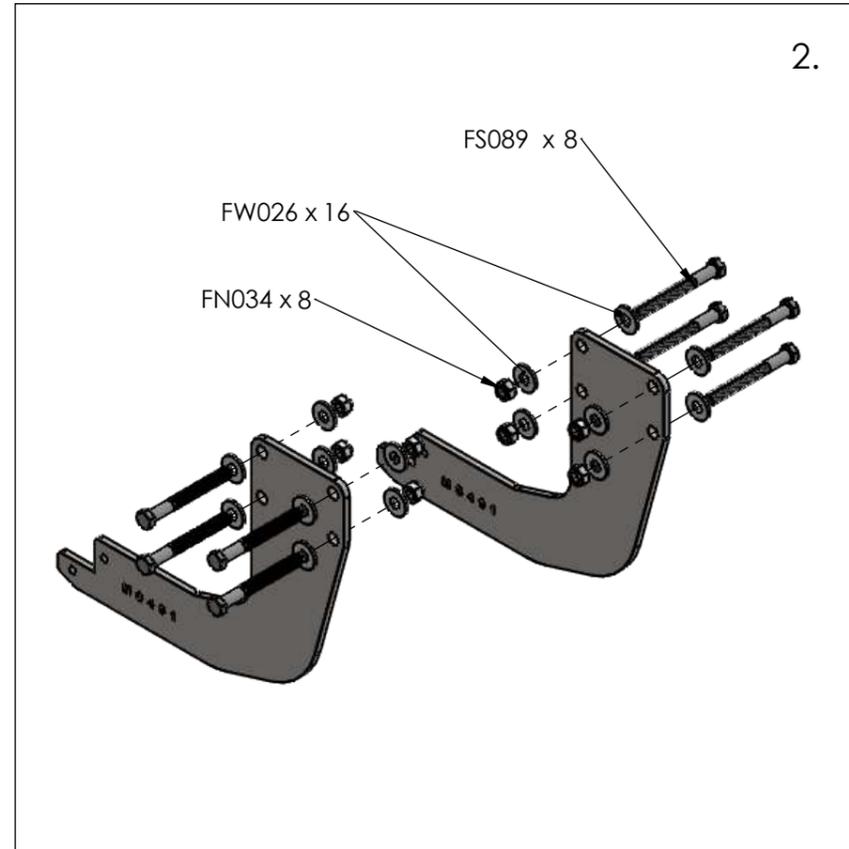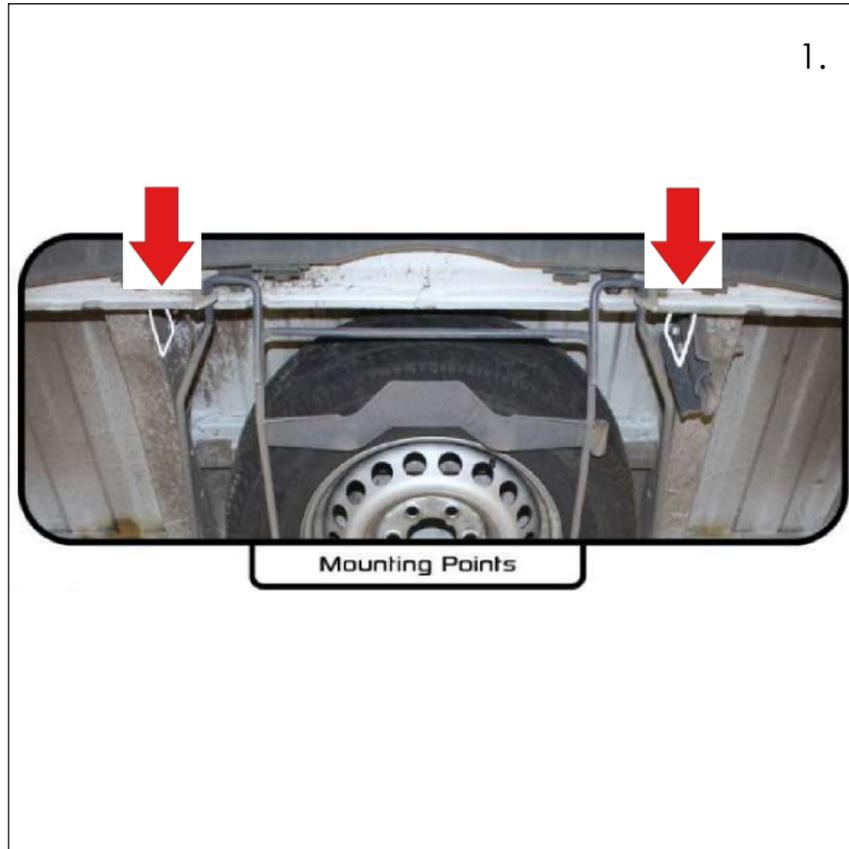

FITTING INSTRUCTIONS

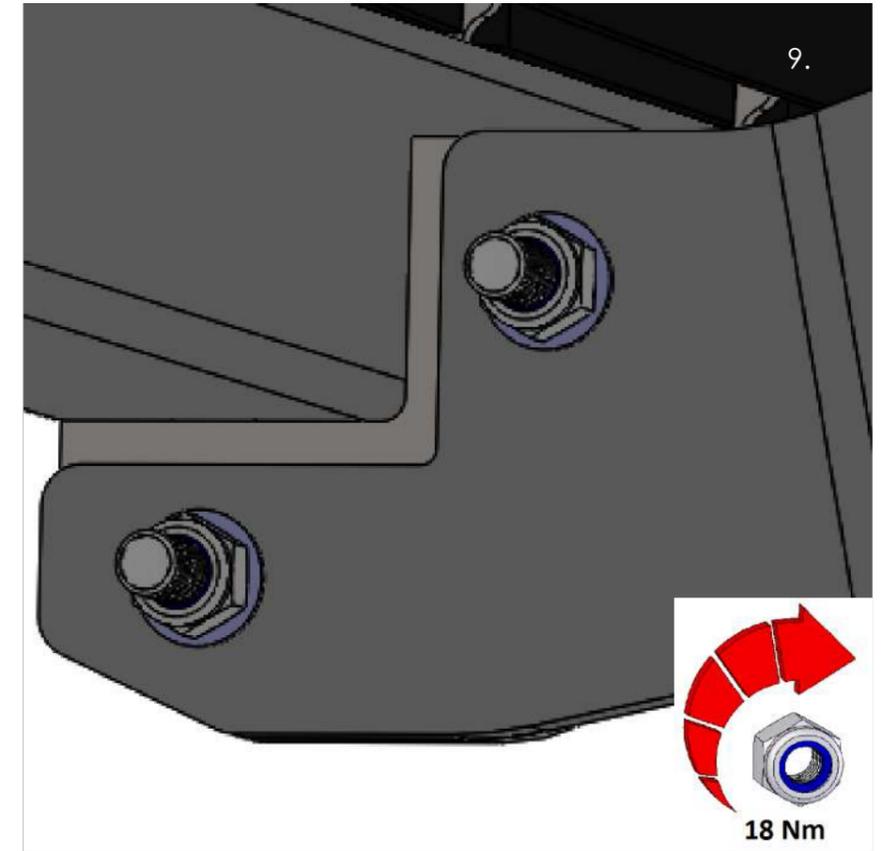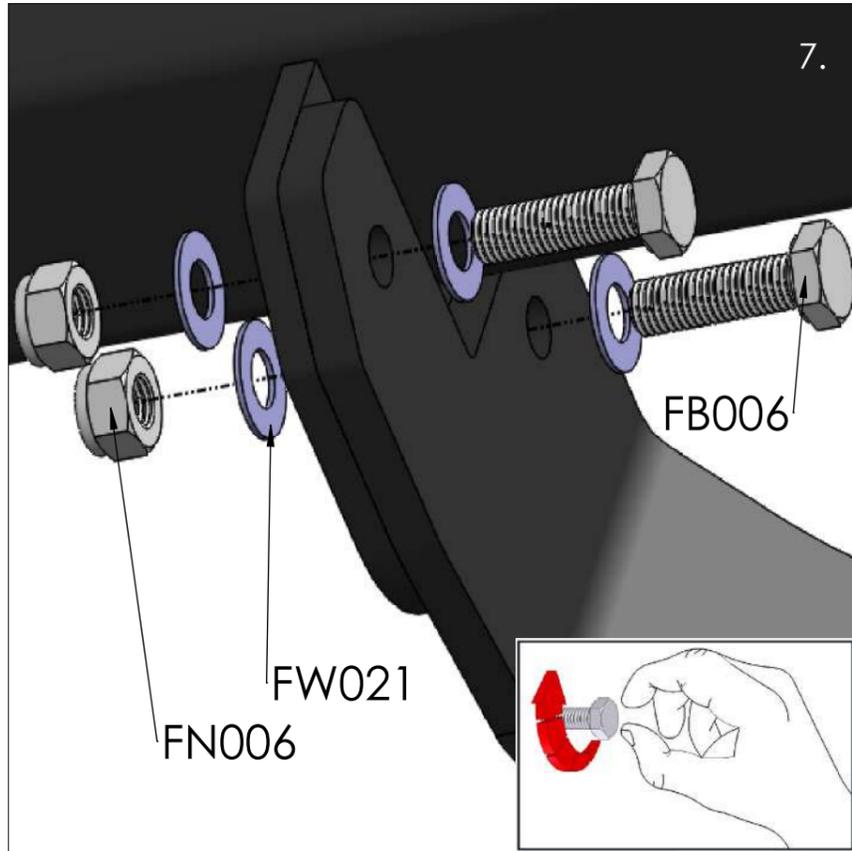

SSK005_ Sprinter Outrigger Fitting Kit

IMPACT STEP FITTING INSTRUCTIONS




IMPACT STEP FITTING INSTRUCTIONS

FITTING KIT CONTENTS FK885 (1:1)


1.



FW020 (M8) x 4

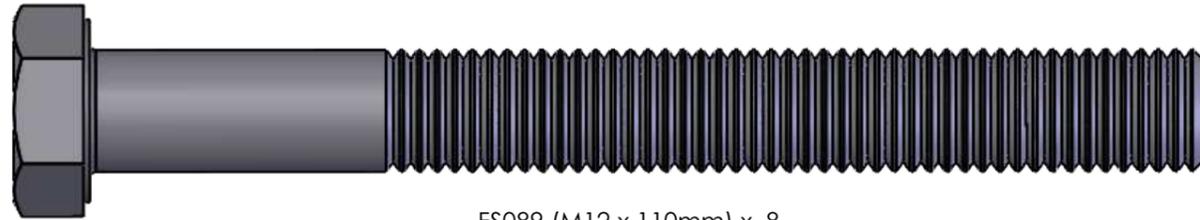


FS089 (M12 x 110mm) x 8

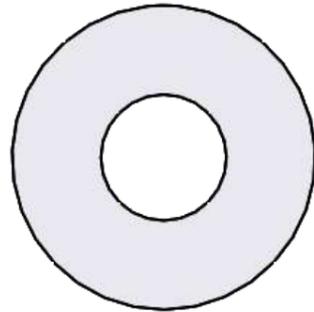


FW026 (M12) x 16



FN034 (M12) x 8

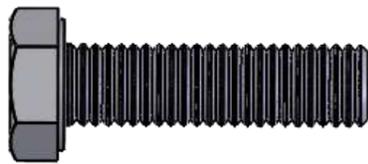

FB006 (M8 x 30mm) x 4

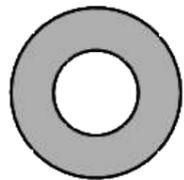

FW021 (M8) x

ACCESSSTEP	8
IMPACT STEP	4





FN006 (M8) x

ACCESSSTEP	✓
IMPACT STEP	✗

FITTING TIME: 40 Minutes

2.

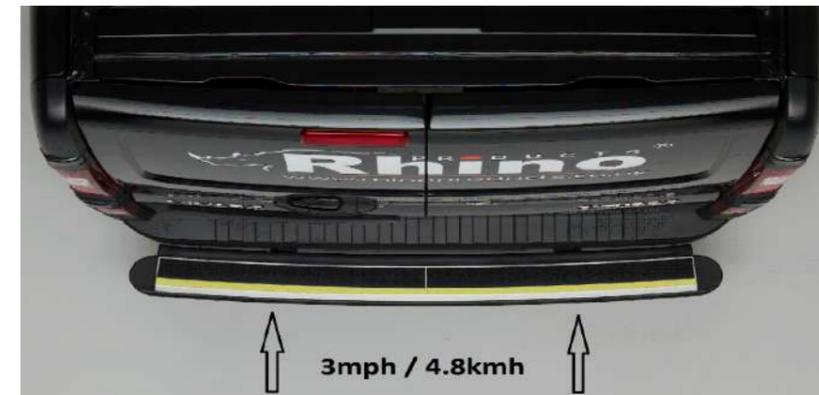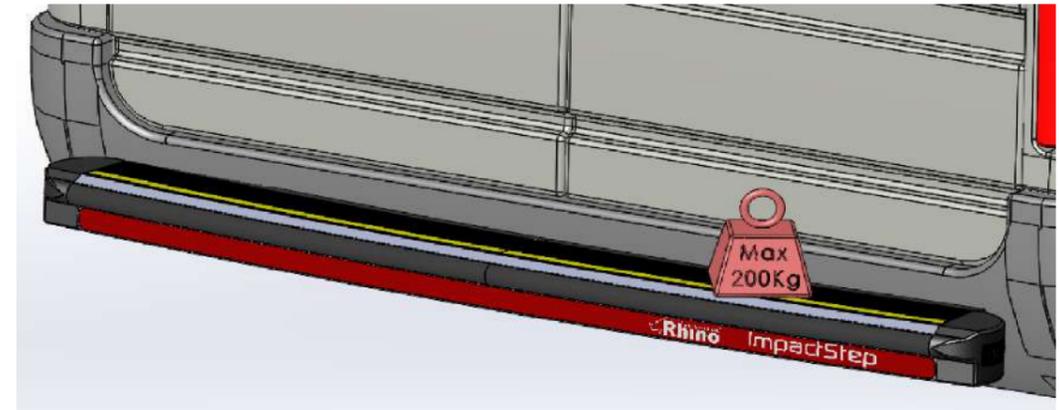

x 1



13mm x 1




19mm x 1



18mm x 1







19mm x 1



18mm x 1

IMPACT STEP FITTING INSTRUCTIONS

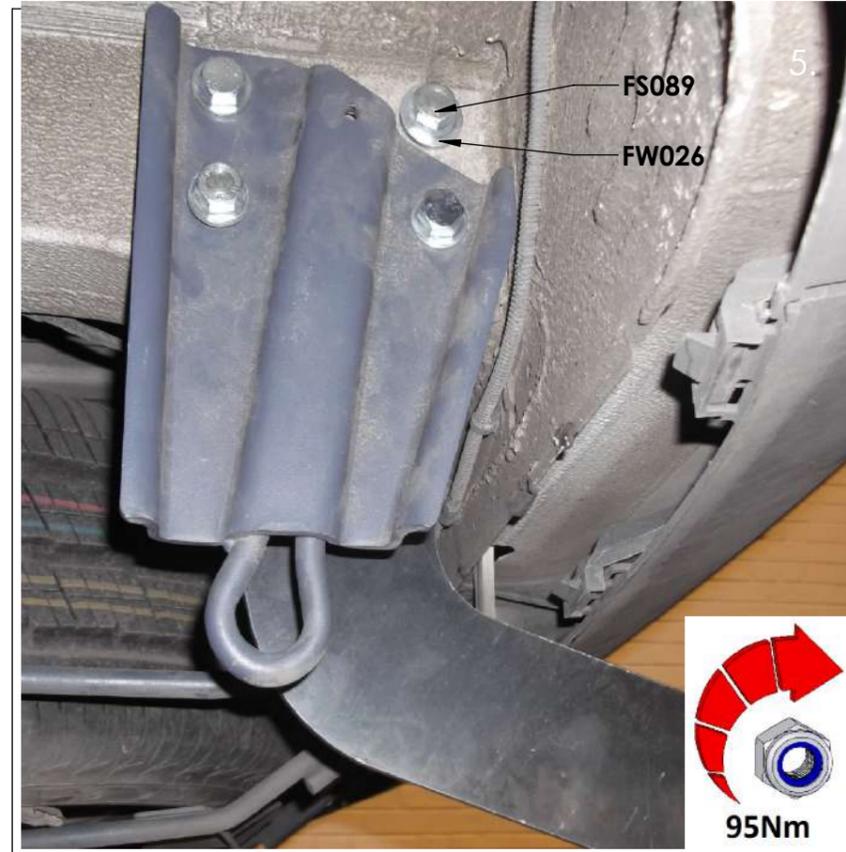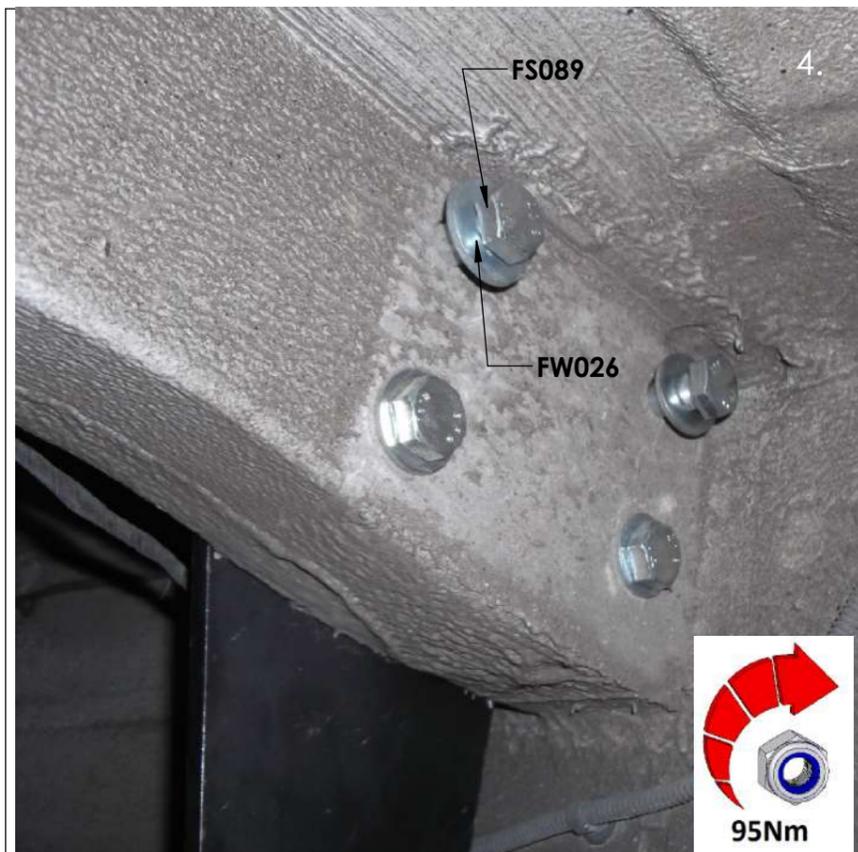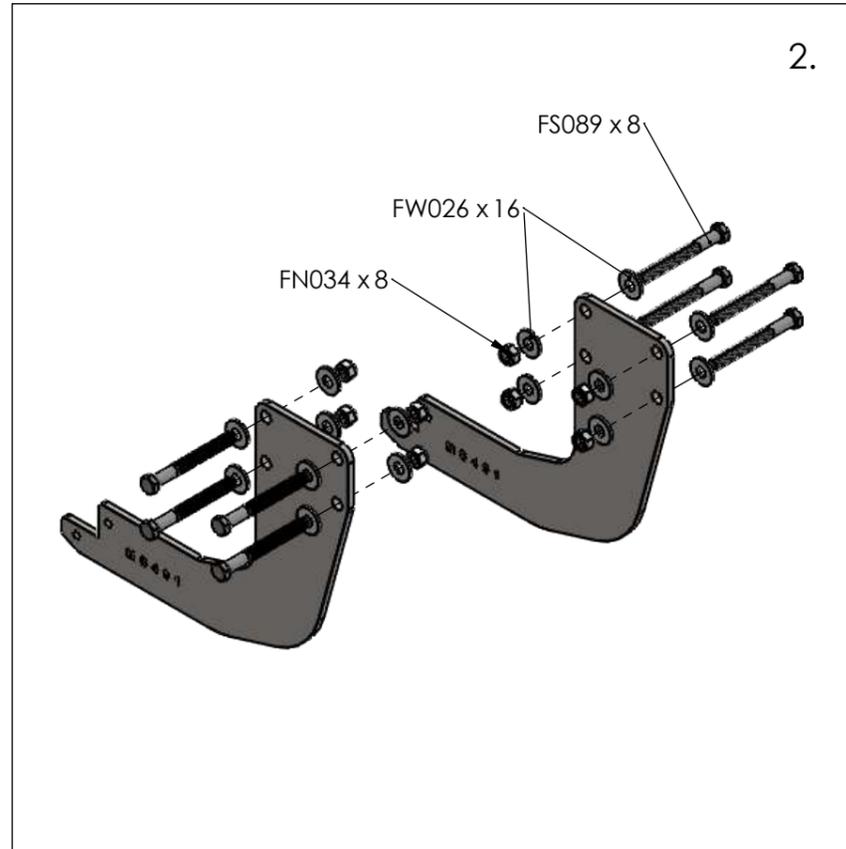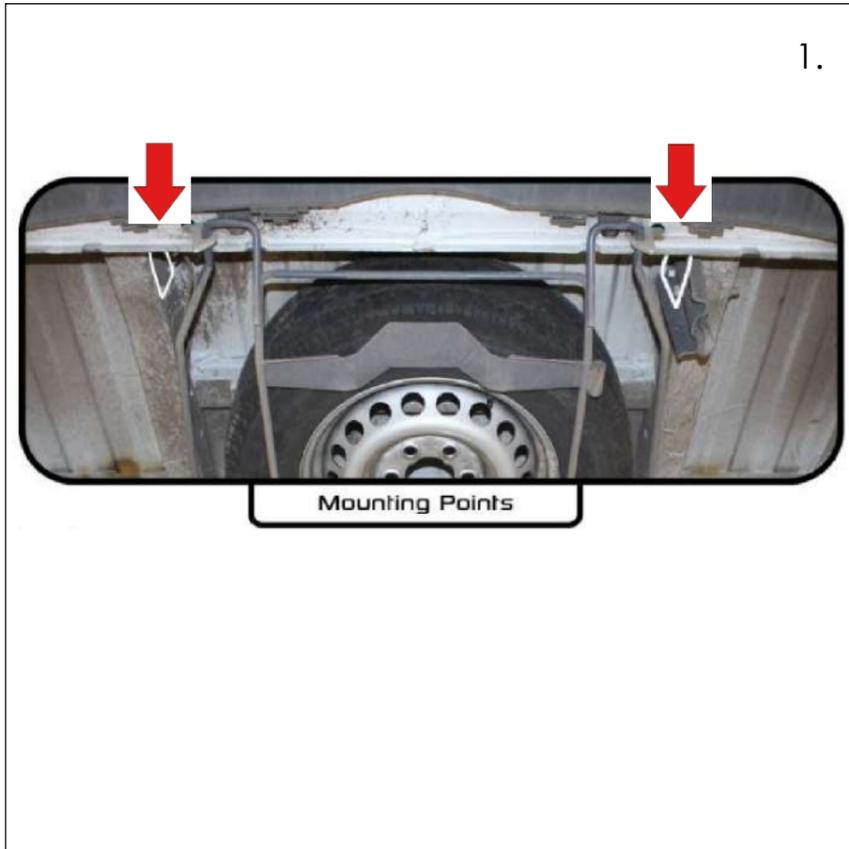

IMPACT STEP FITTING INSTRUCTIONS

