

FITTING INSTRUCTIONS



FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK887  
(1:1)

FITTING TIME: 30 Minutes




FW020 (M8) x 4


ACCESSSTEP	✗
IMPACT STEP	✓

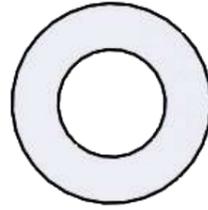

FW006 (M10) x 6

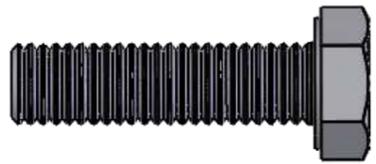


FB006 (M8 x 30) x 4

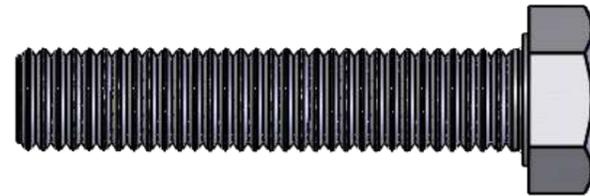


FS097 (M10 x 50) x 2



FN006 (M8) x 4

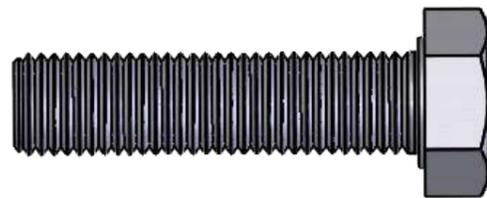


FS096 (M10 x 40) x 2

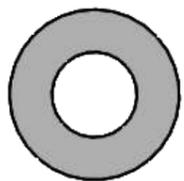


FW021 (M8) x 8





FN008 (M10) x 2

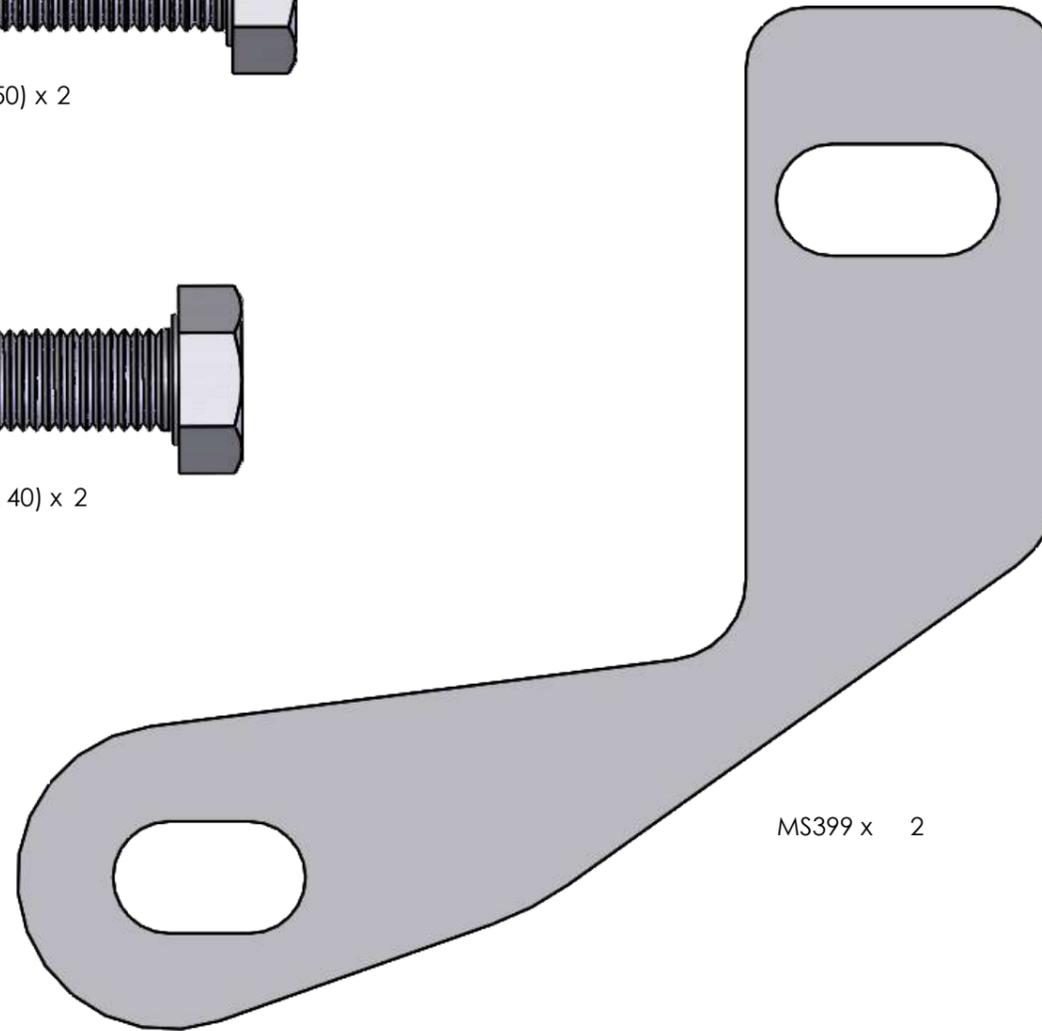





MS399 x 2

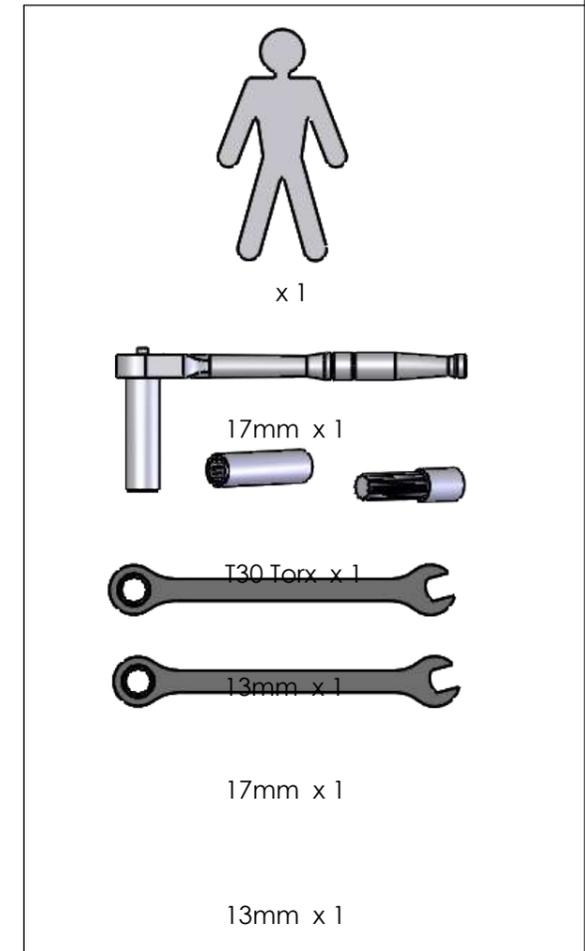



FITTING INSTRUCTIONS

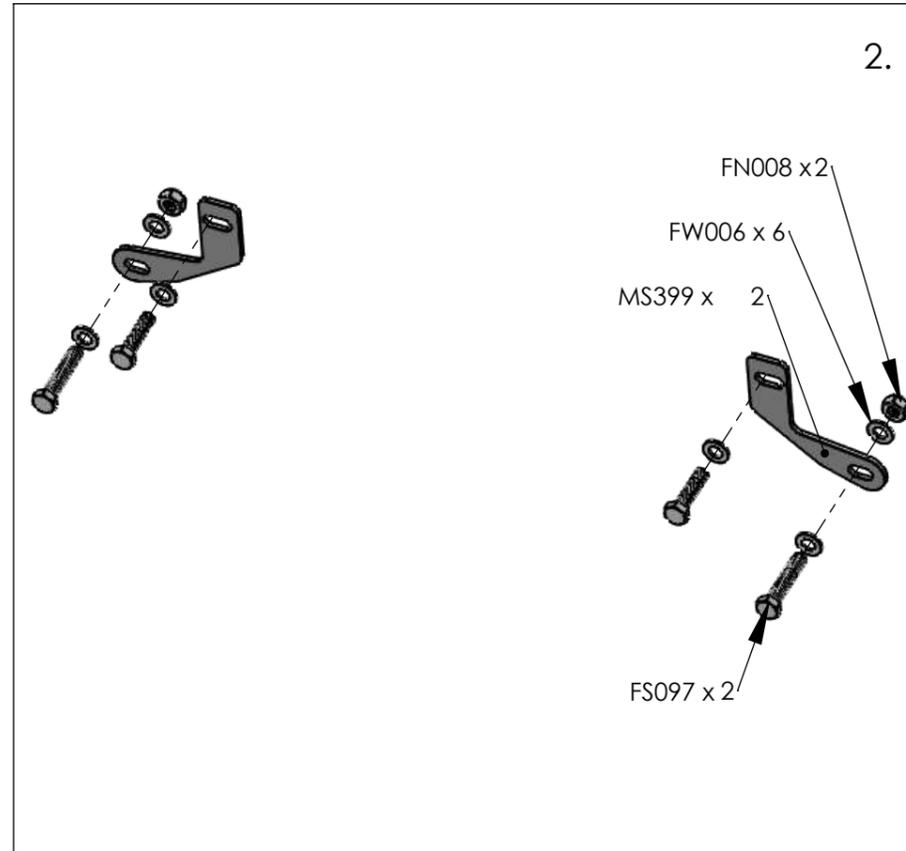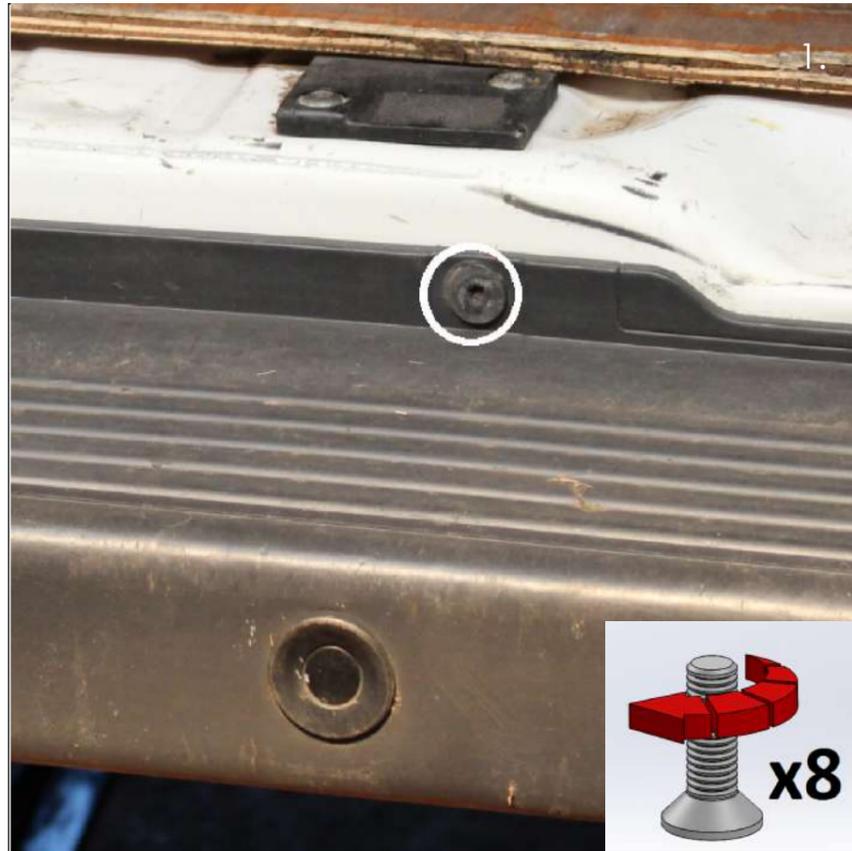

FITTING INSTRUCTIONS

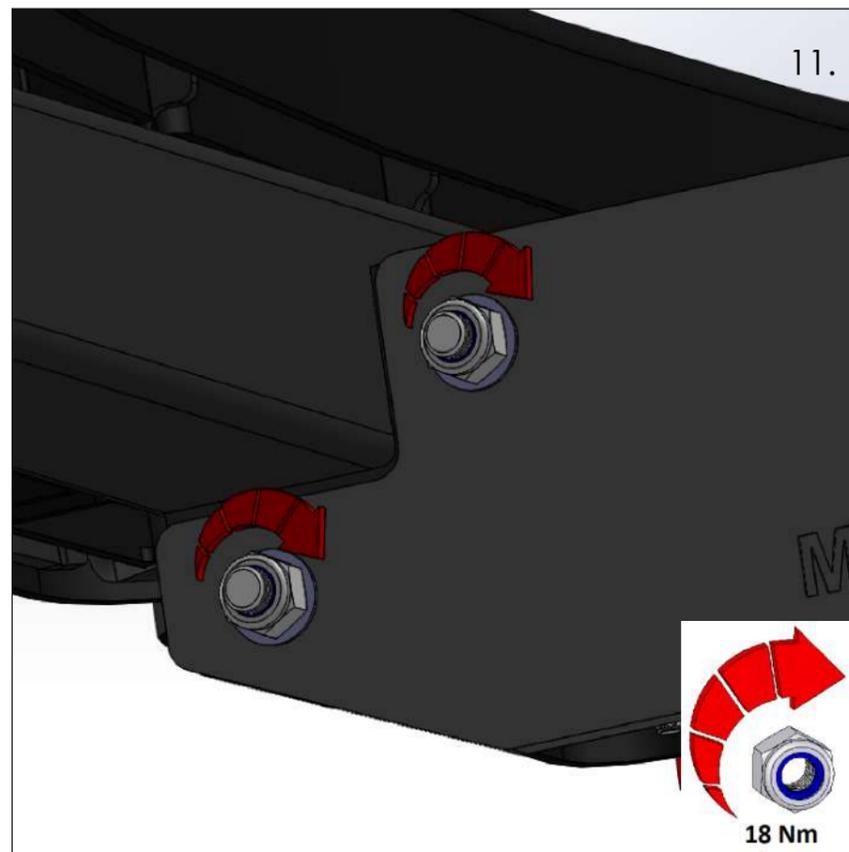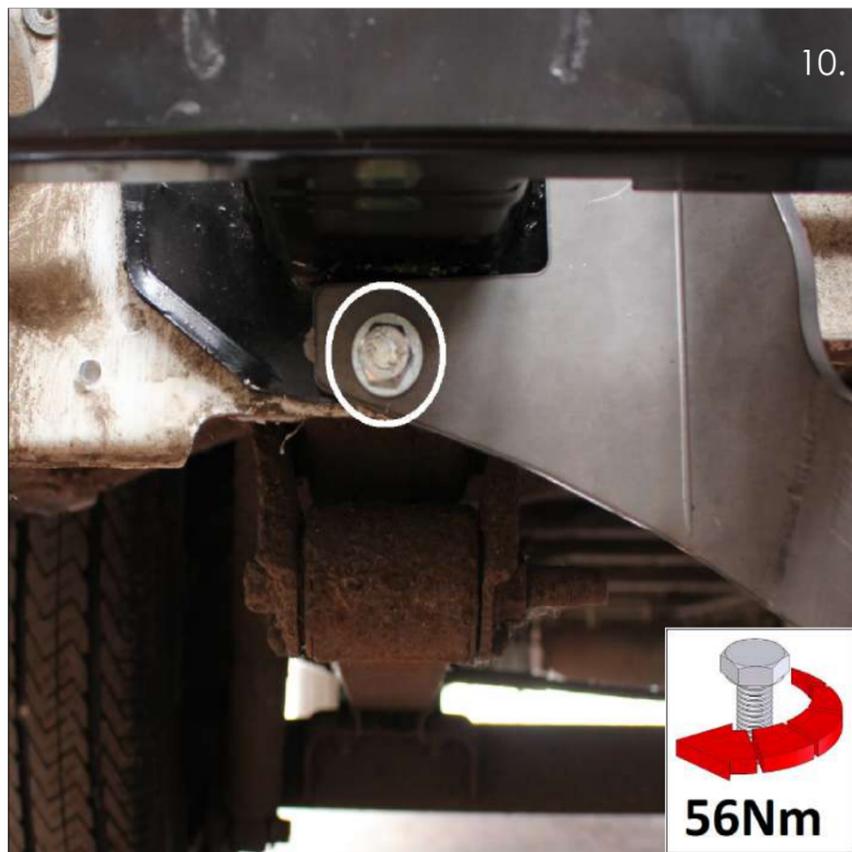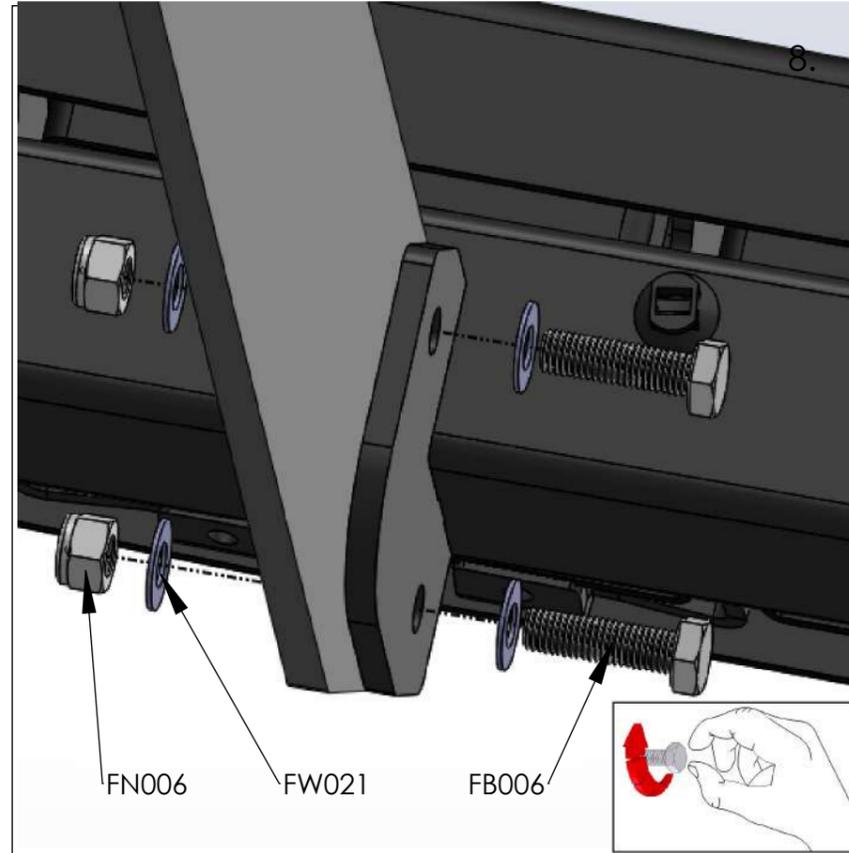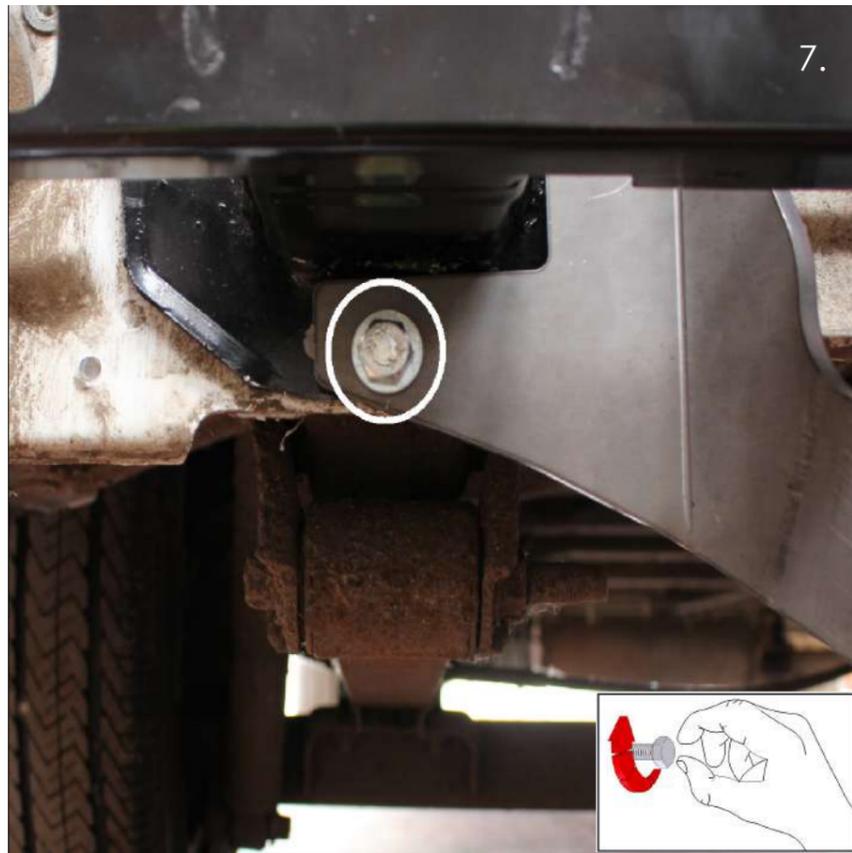

### IMPACT STEP FITTING INSTRUCTIONS

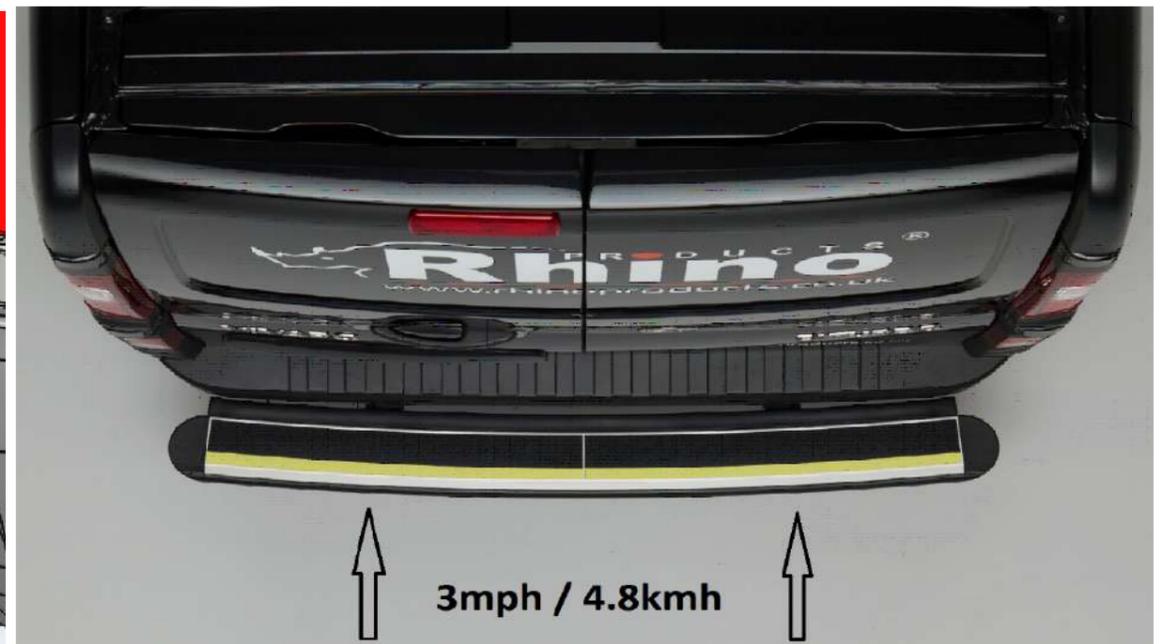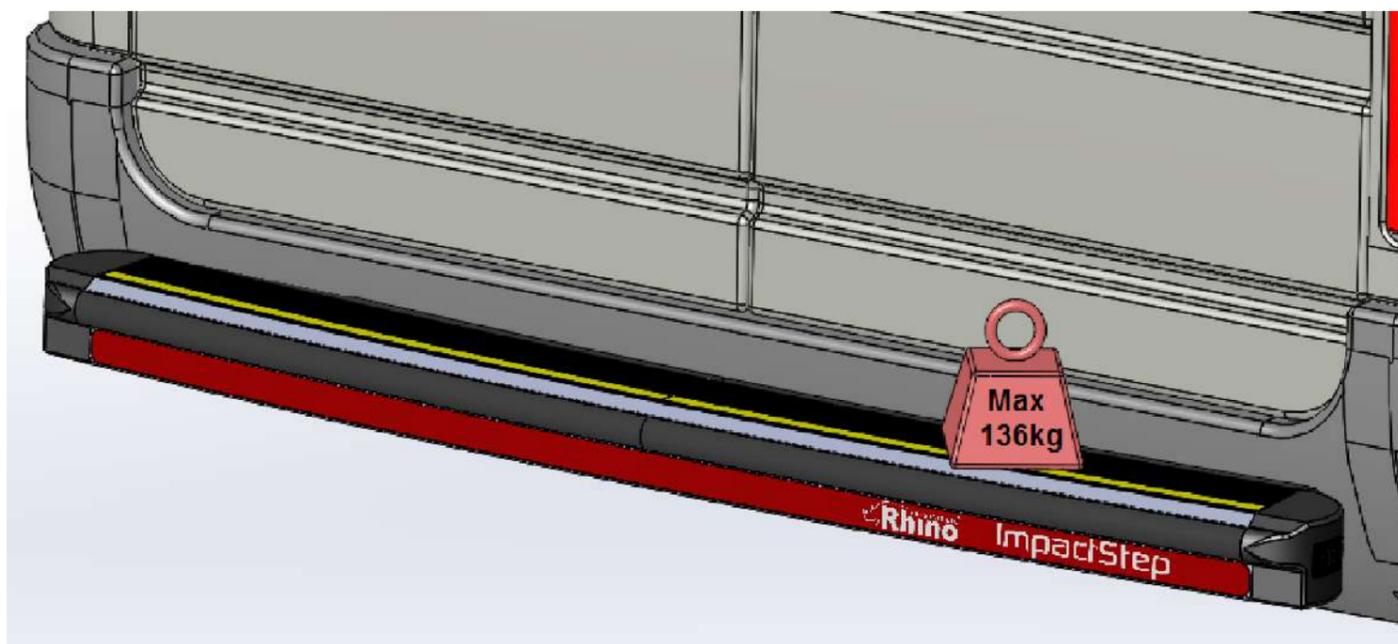

IMPACT STEP FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK887  
(1:1)

FITTING TIME: 40 Minutes




FW020 (M8) x 4

ACCESSSTEP	✗
IMPACT STEP	✓

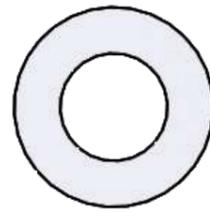

FW006 (M10) x 6

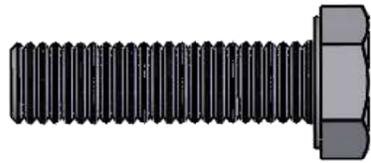

FB006 (M8 x 30) x 4




FS097 (M10 x 50) x 2




FN006 (M8) x 4

ACCESSSTEP	✓
IMPACT STEP	✗

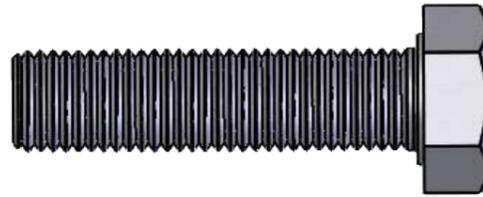

FS096 (M10 x 40) x 2

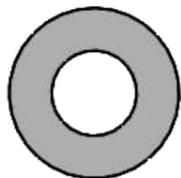


FW021 (M8) x

ACCESSSTEP	8
IMPACT STEP	4



FN008 (M10) x 2

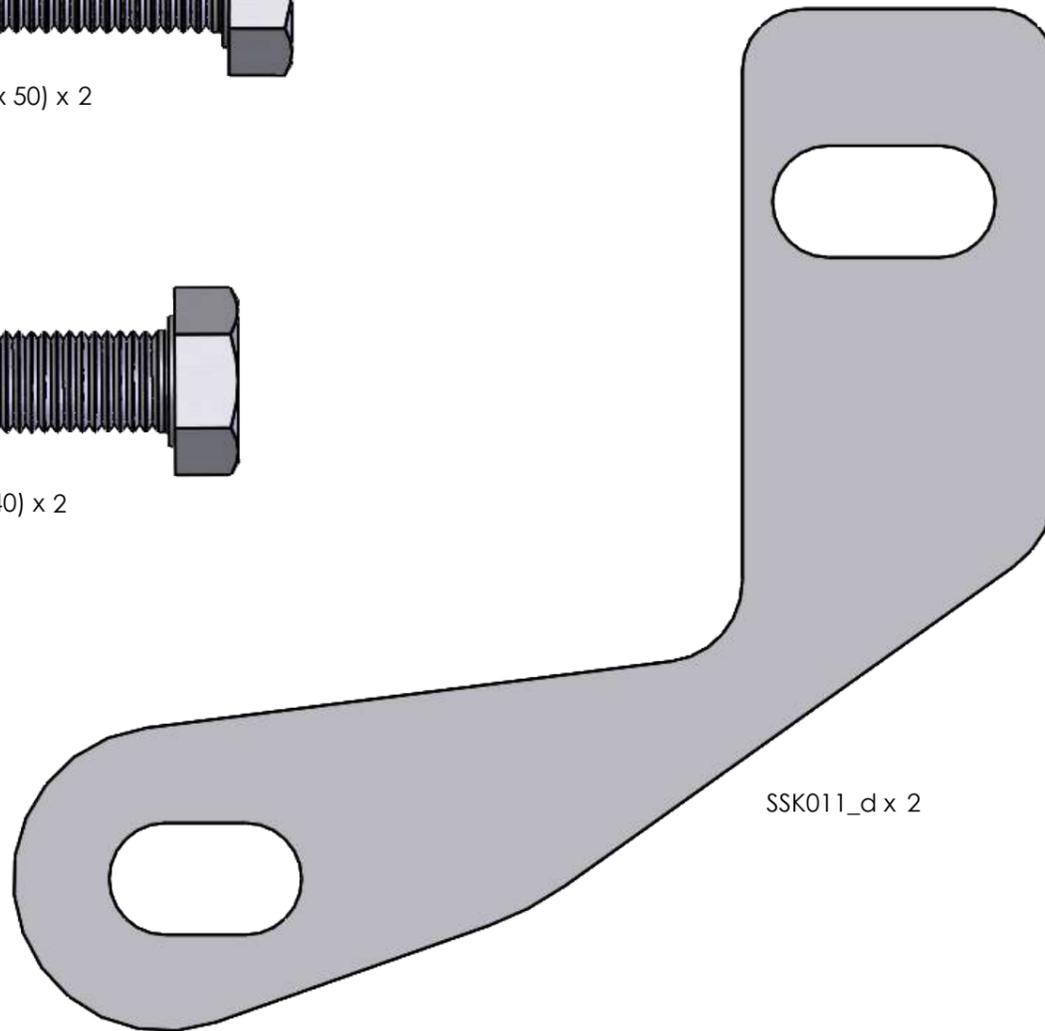

SSK011\_d x 2



x 1



17mm x 1



T30 Torx x 1







13mm x 1








x 1

IMPACT STEP FITTING INSTRUCTIONS

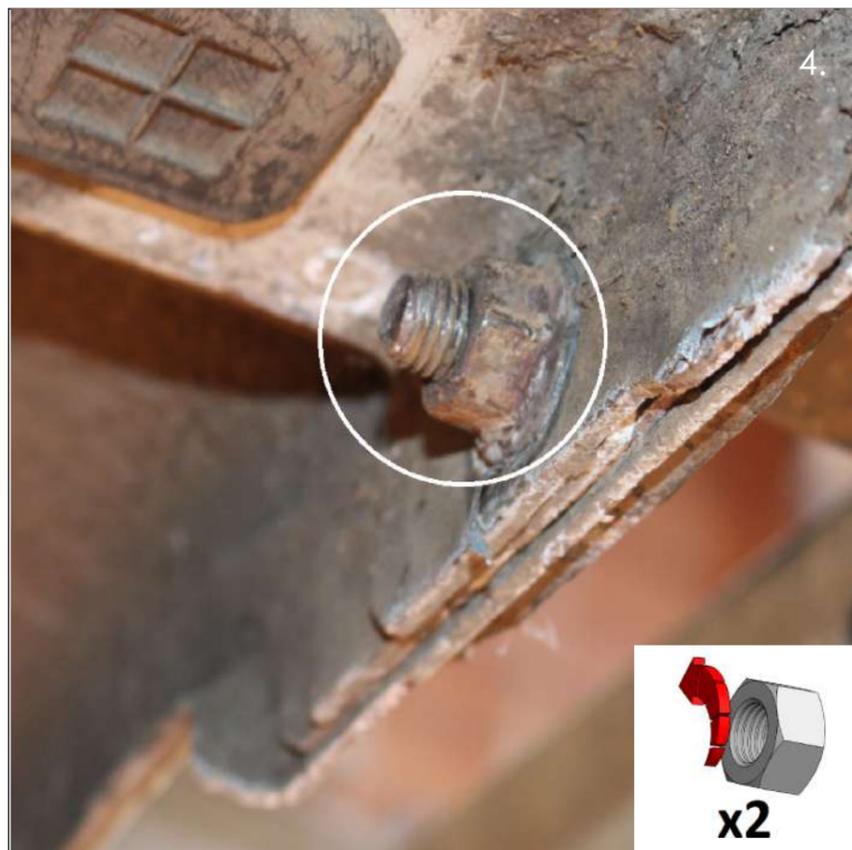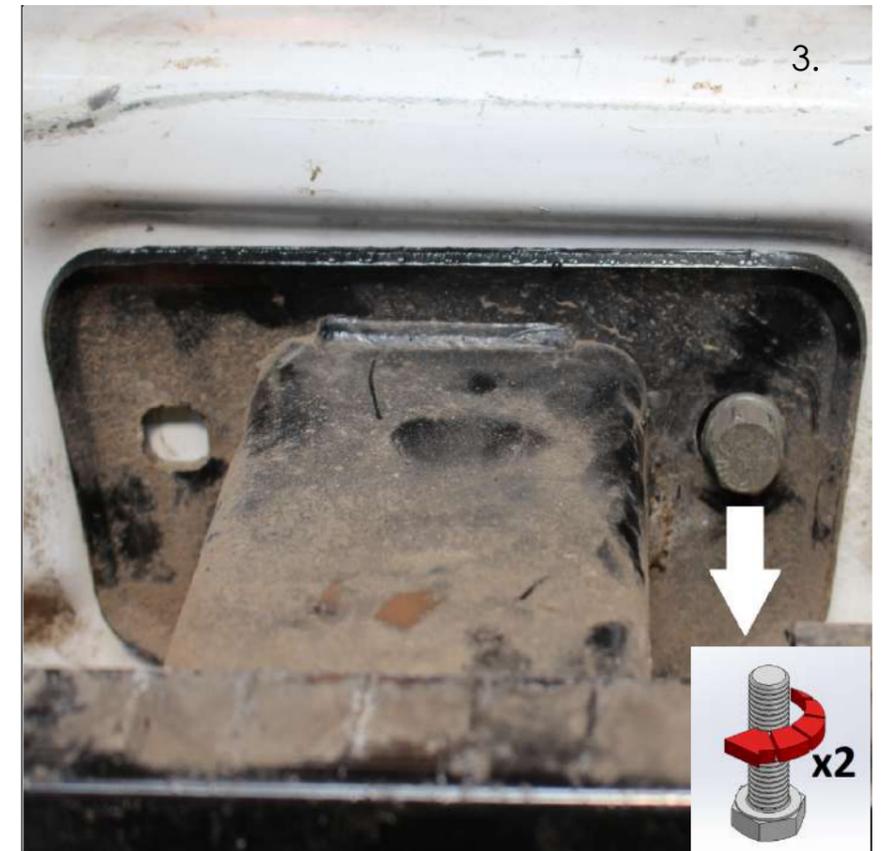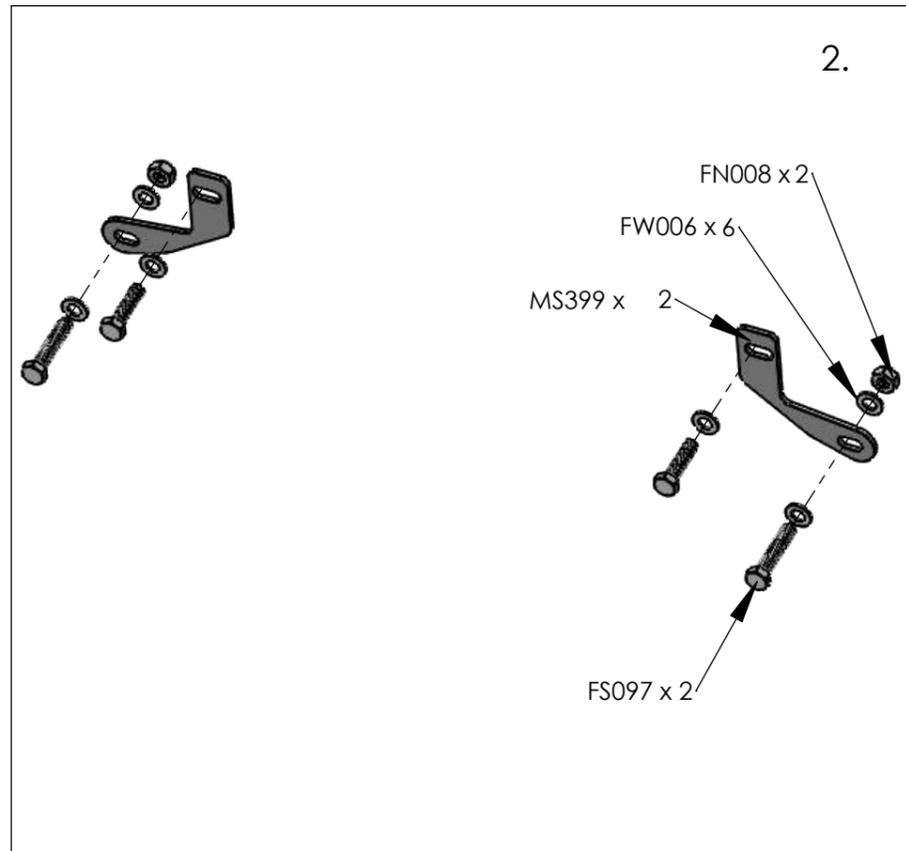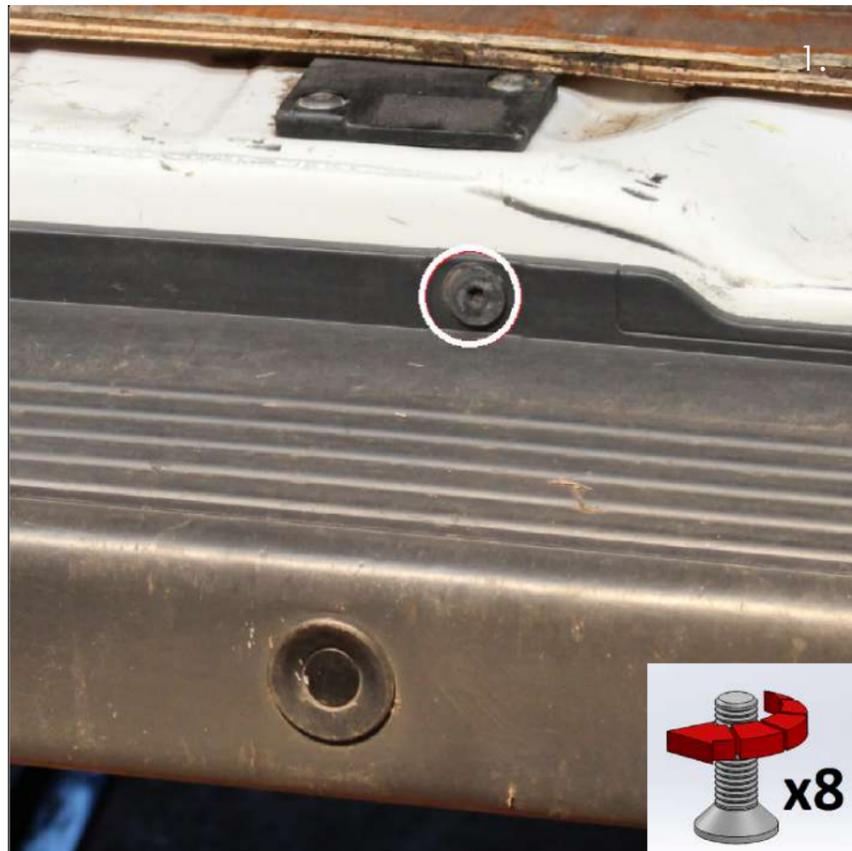

IMPACT STEP FITTING INSTRUCTIONS

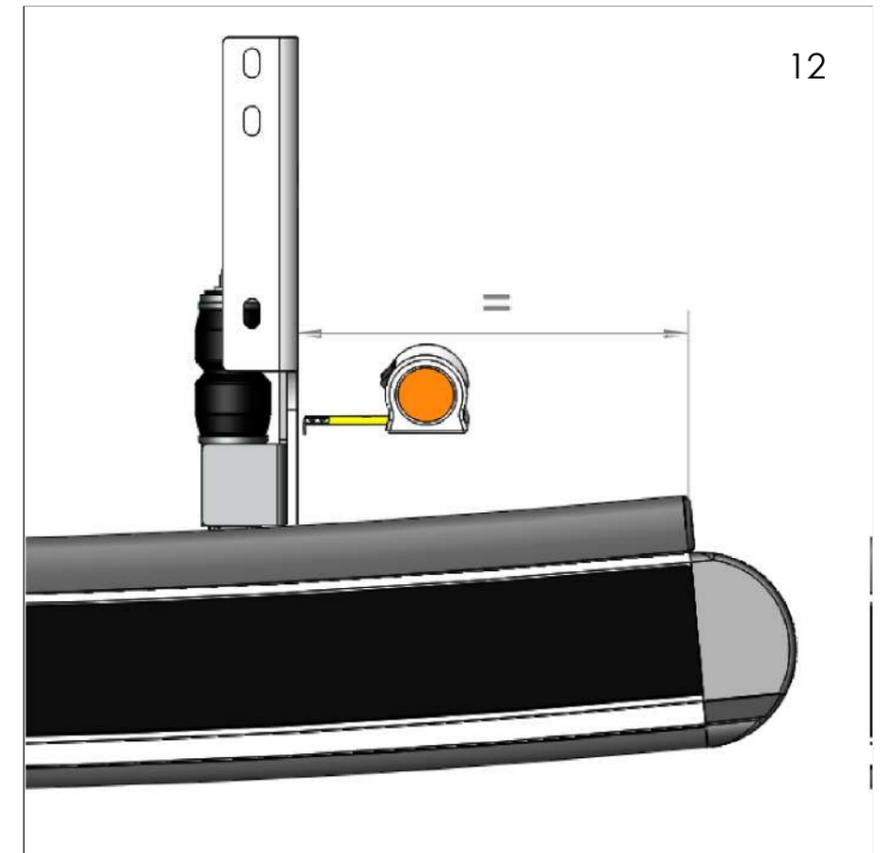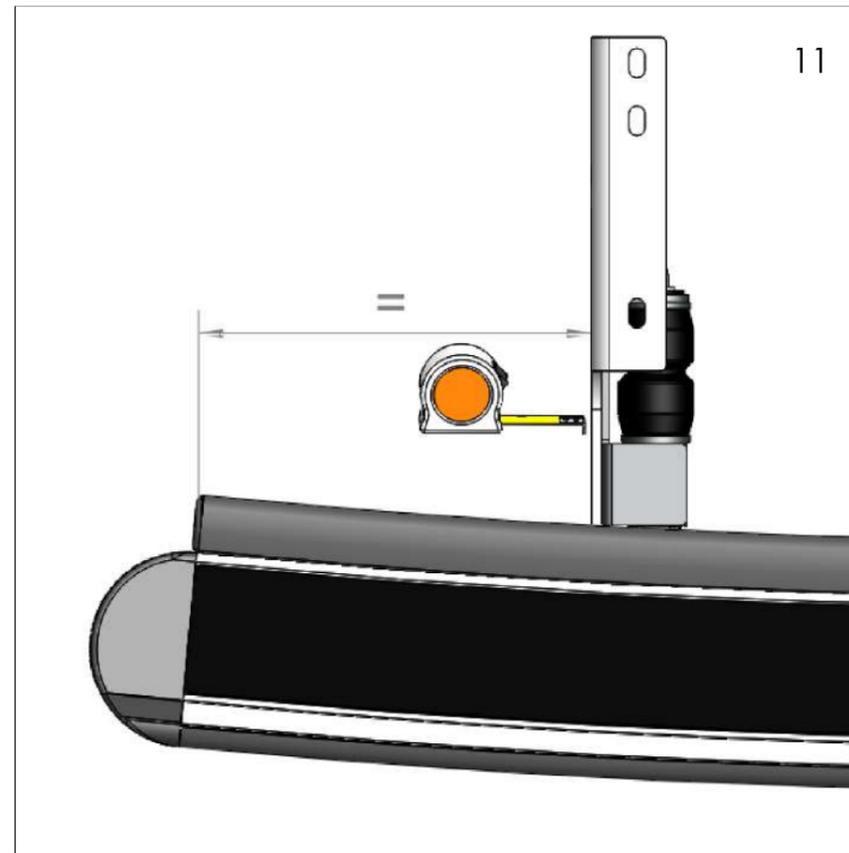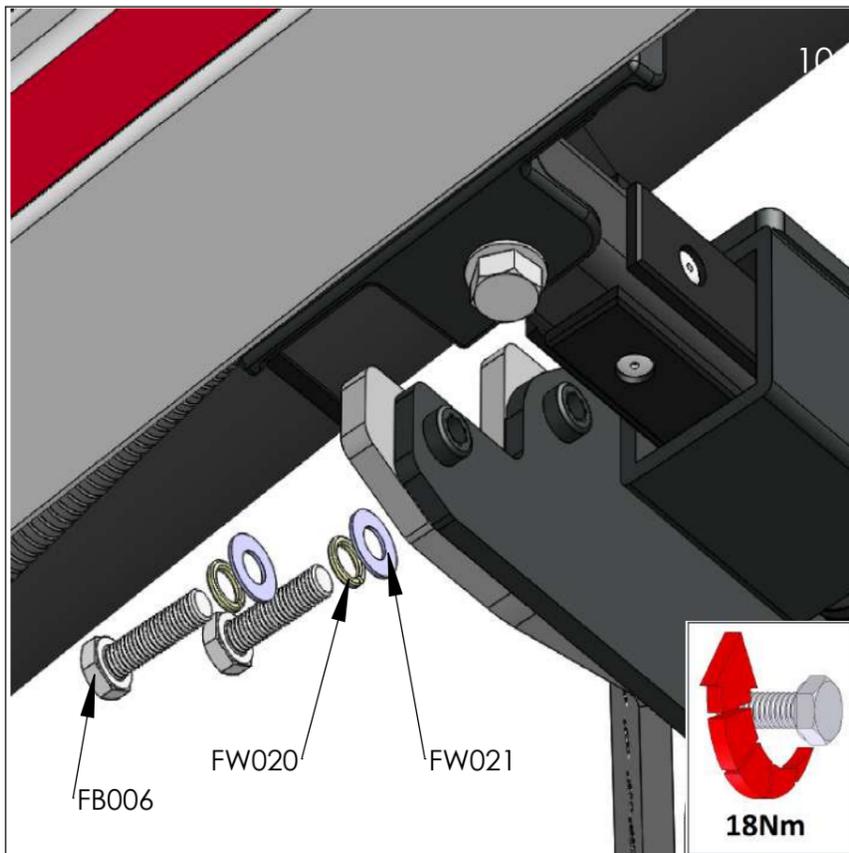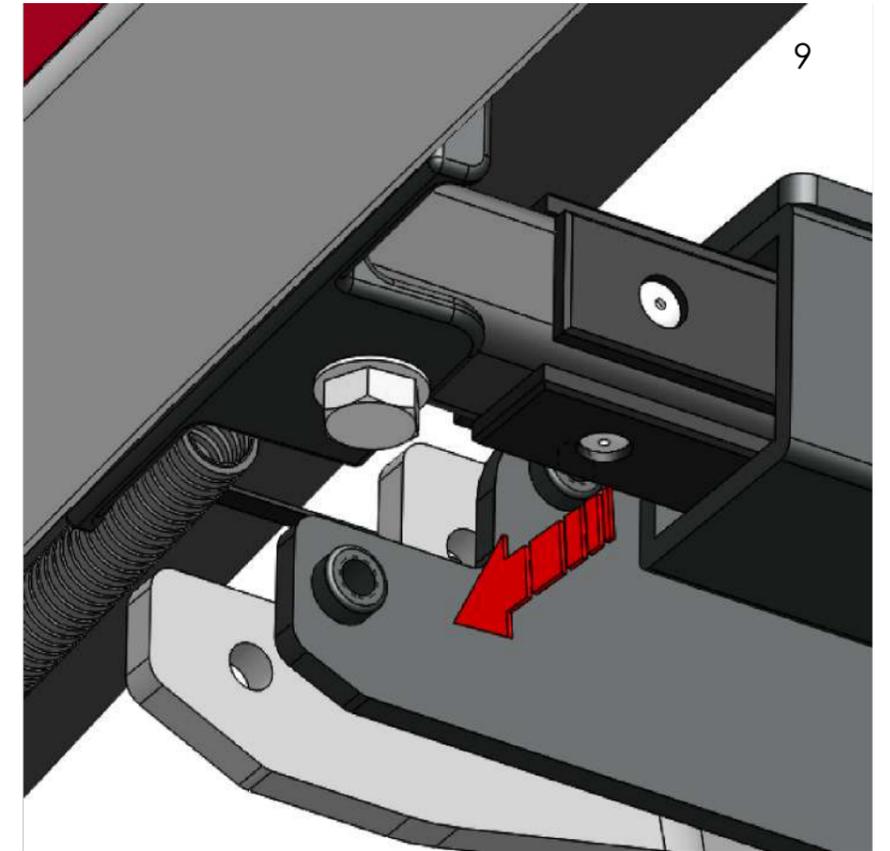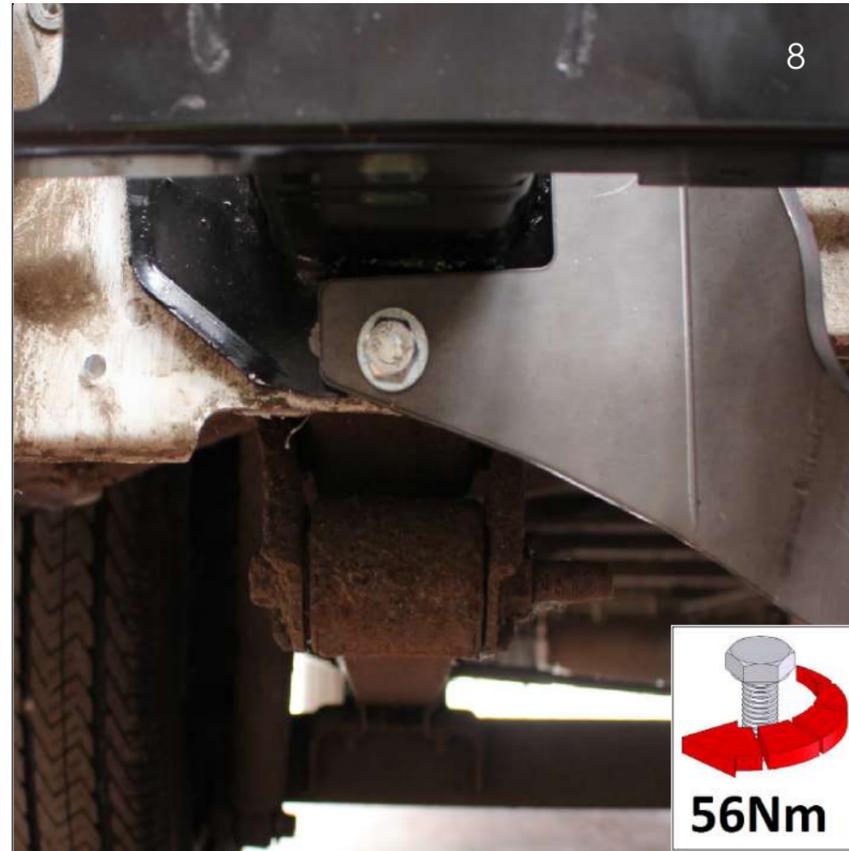

IMPACT STEP FITTING INSTRUCTIONS

