

FITTING INSTRUCTIONS



FITTING INSTRUCTIONS

FITTING KIT CONTENTS FK884
(1:1)

1.




FW020 (M8) x 4


ACCESSSTEP	✗
IMPACT STEP	✓




FB006 (M8 x 30) x 4

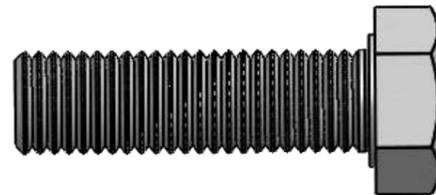

FS088 (M10 x 35) x 6

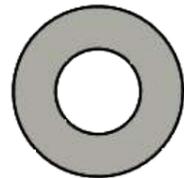

FW021 (M8) x 8

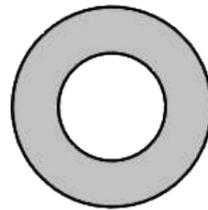

FW006 (M10) x 12





FN006 (M8) x 4



FN008 (M10) x 6

FITTING TIME: 20 Minutes

2.

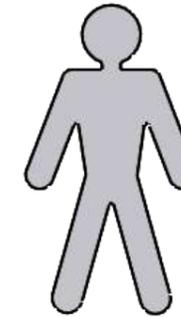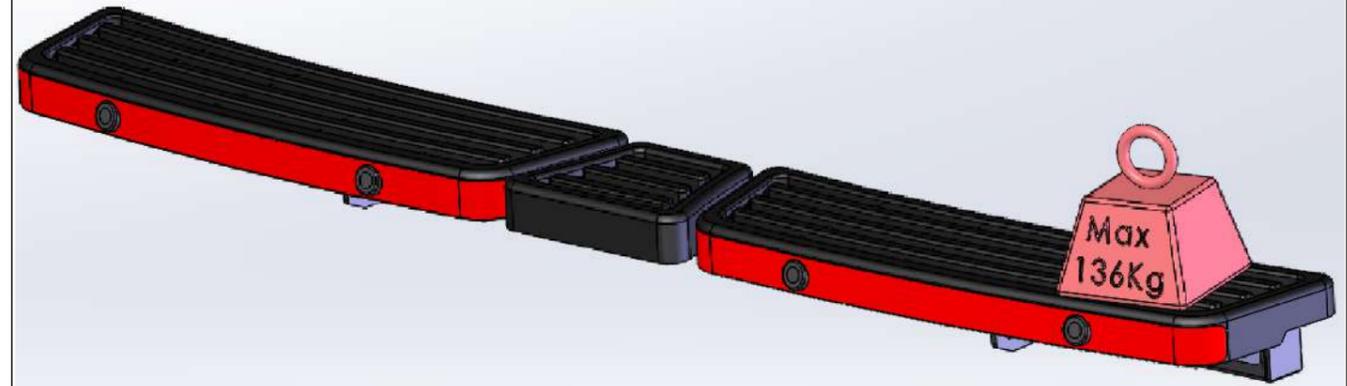


x 1



17mm x 1



13mm x 1









13mm x 1






17mm x 1



FITTING INSTRUCTIONS

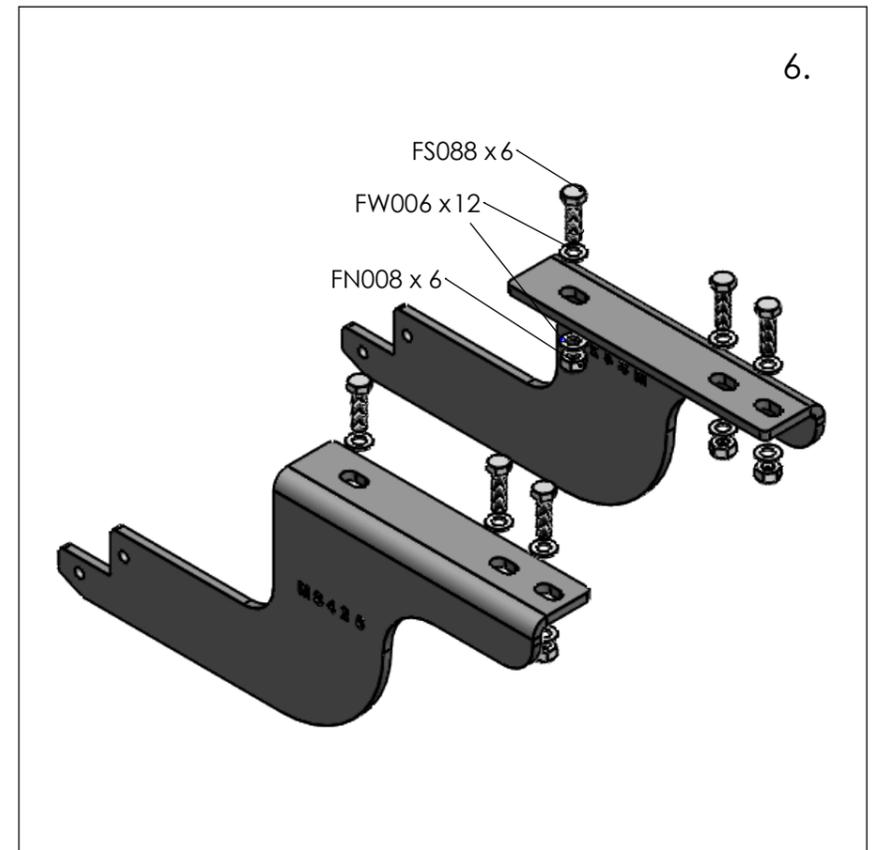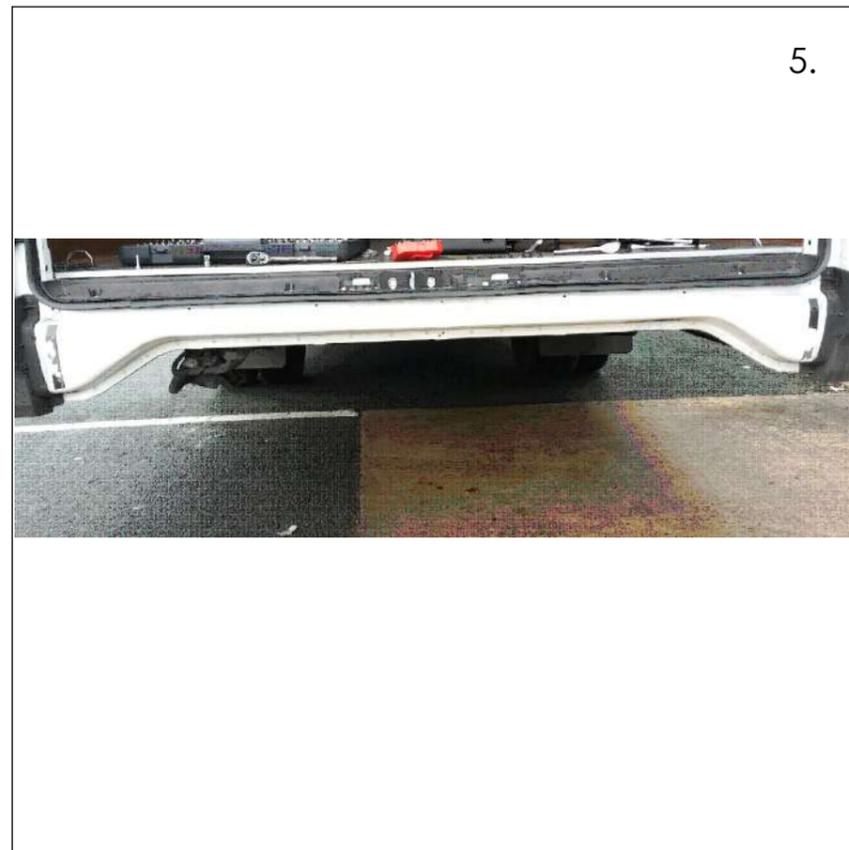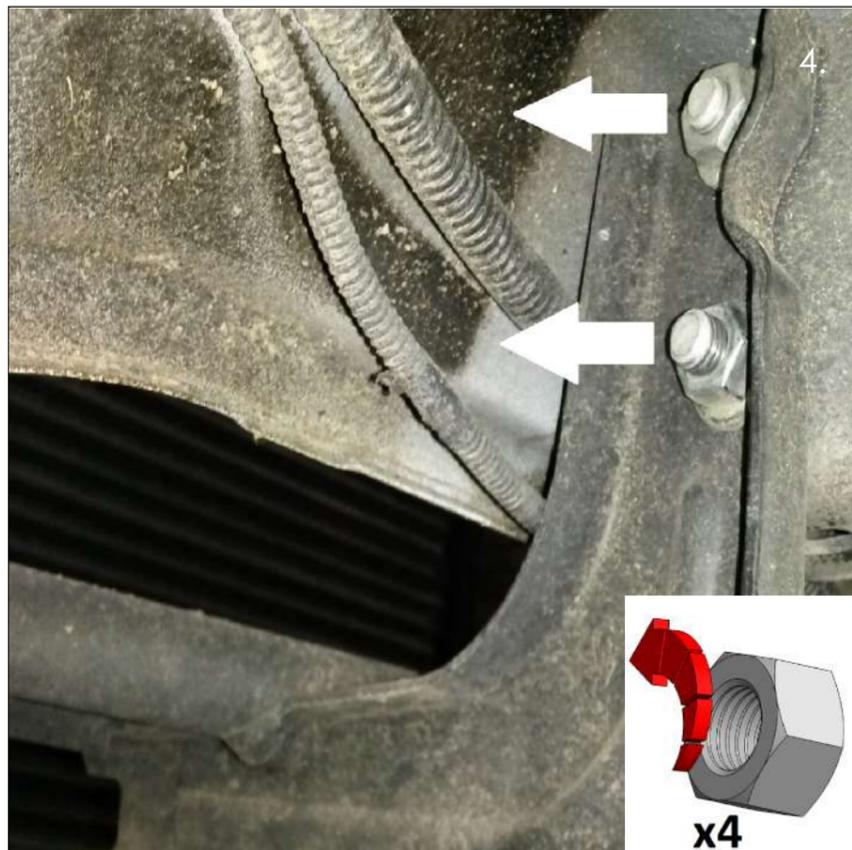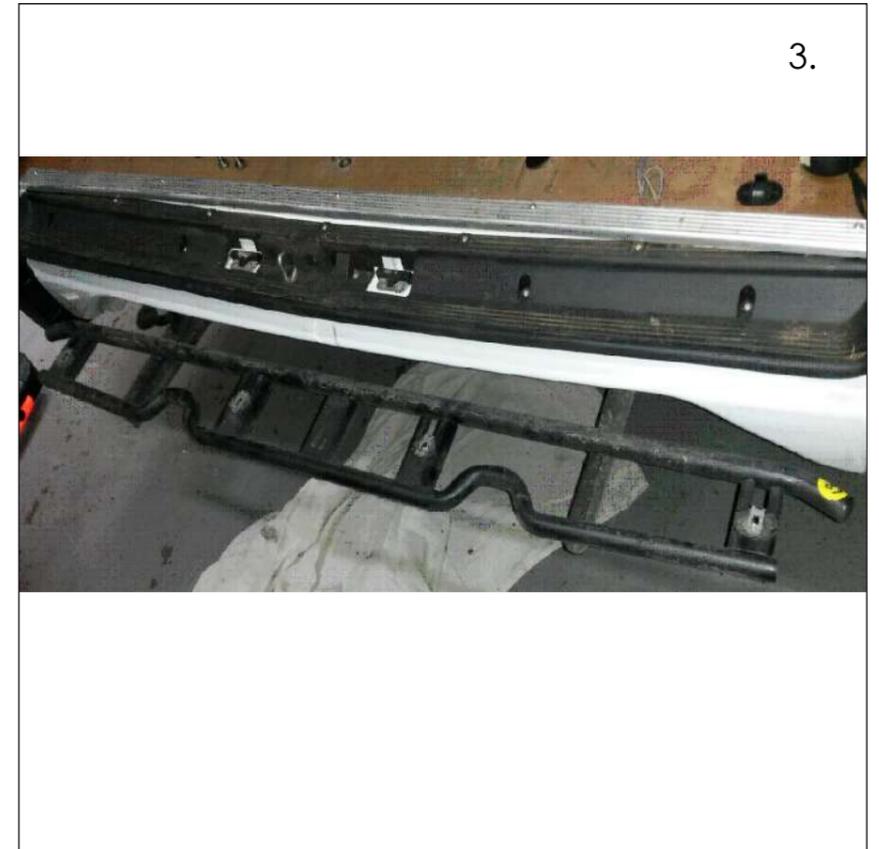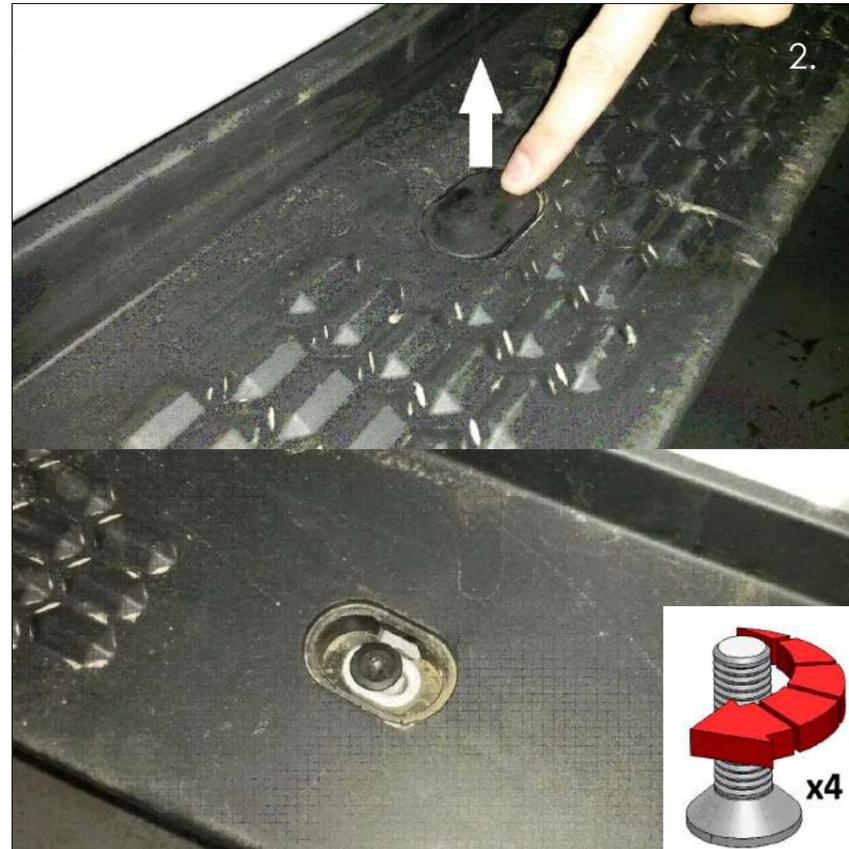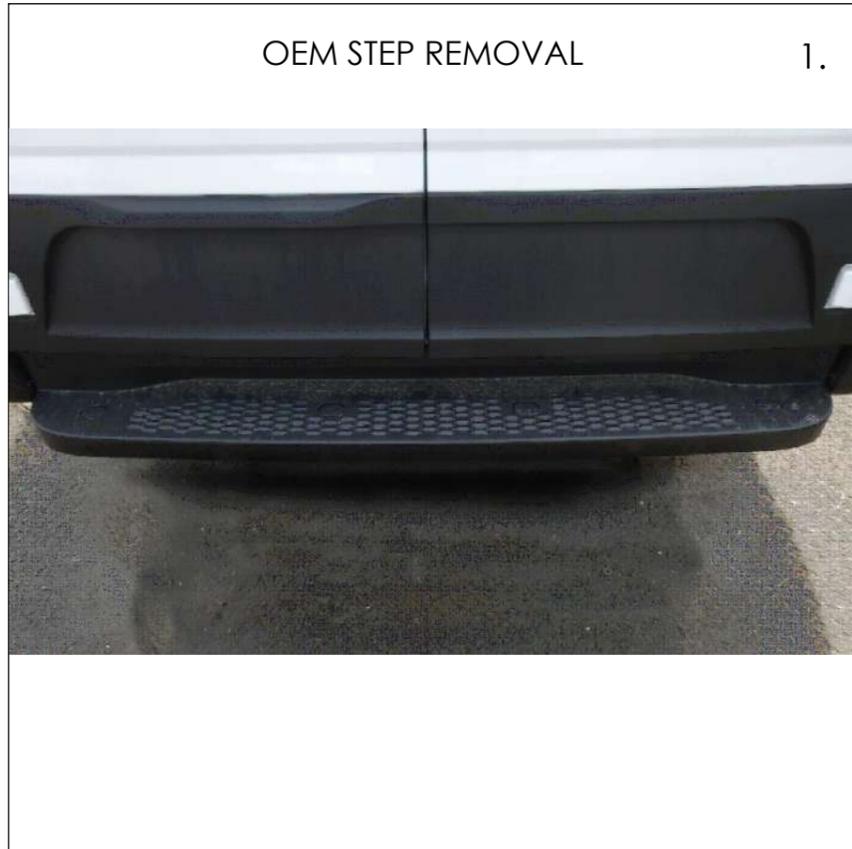

FITTING INSTRUCTIONS

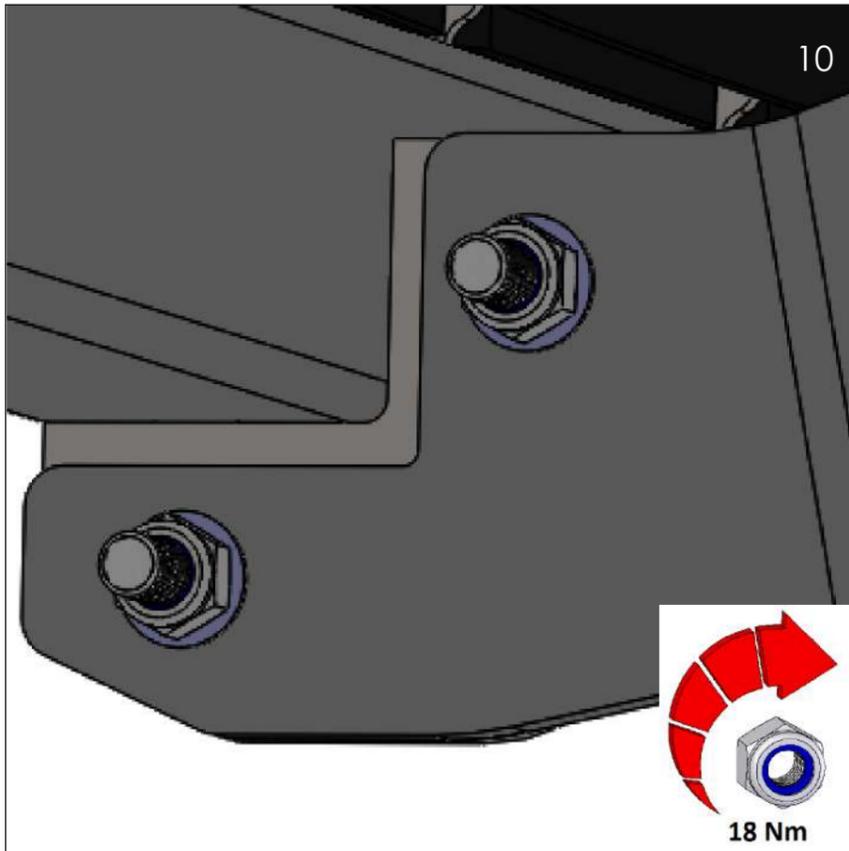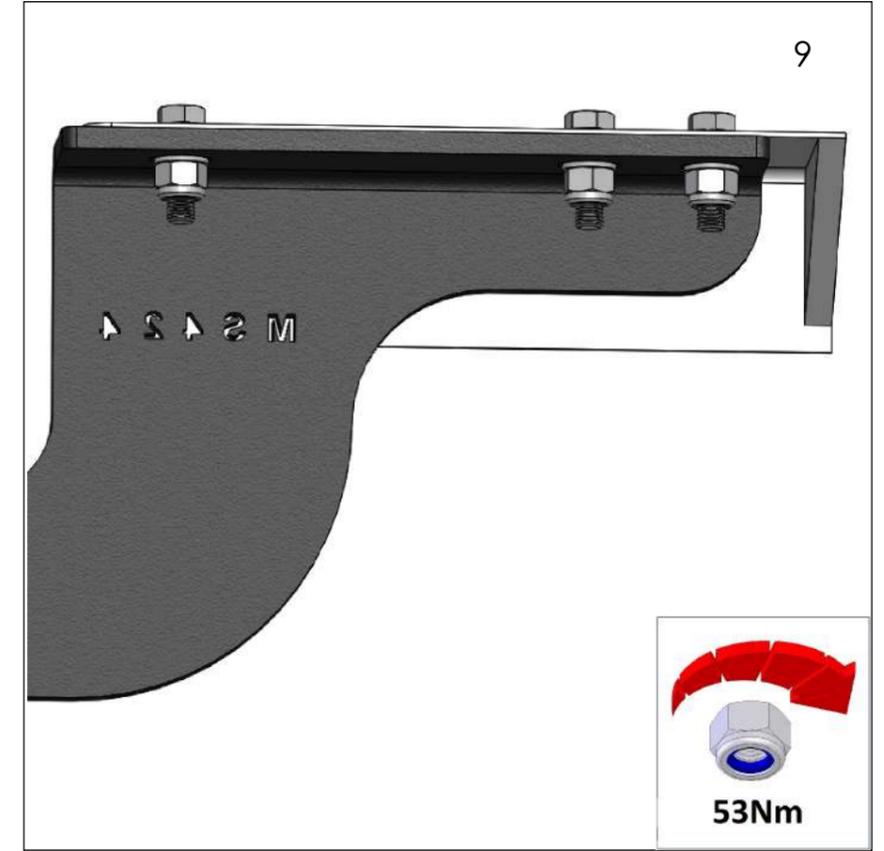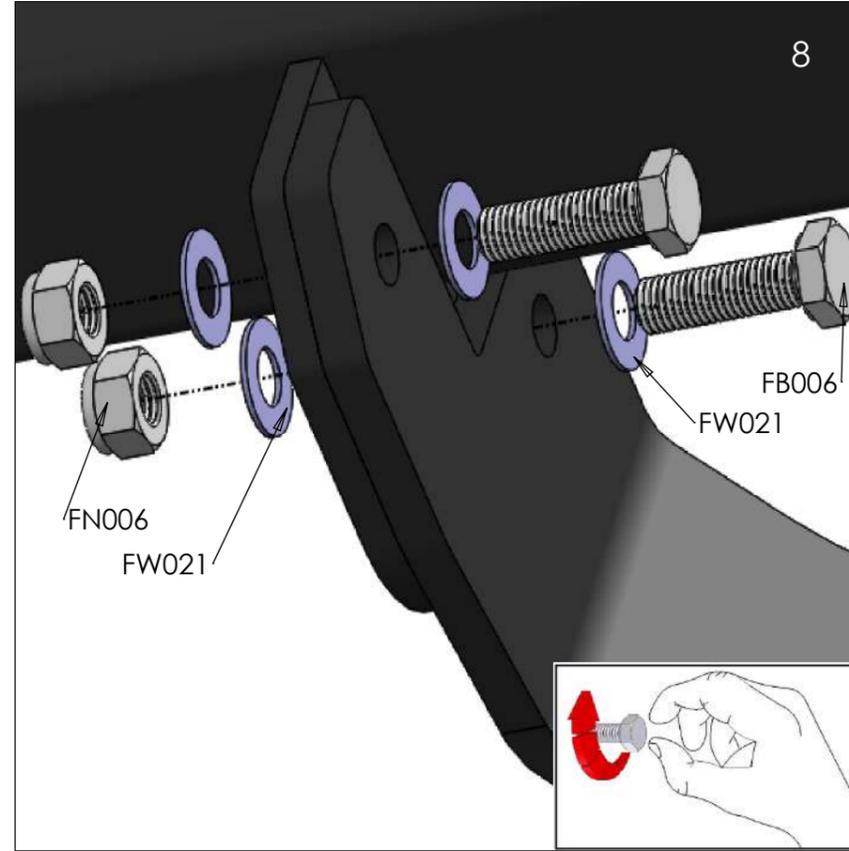

IMPACT STEP FITTING INSTRUCTIONS

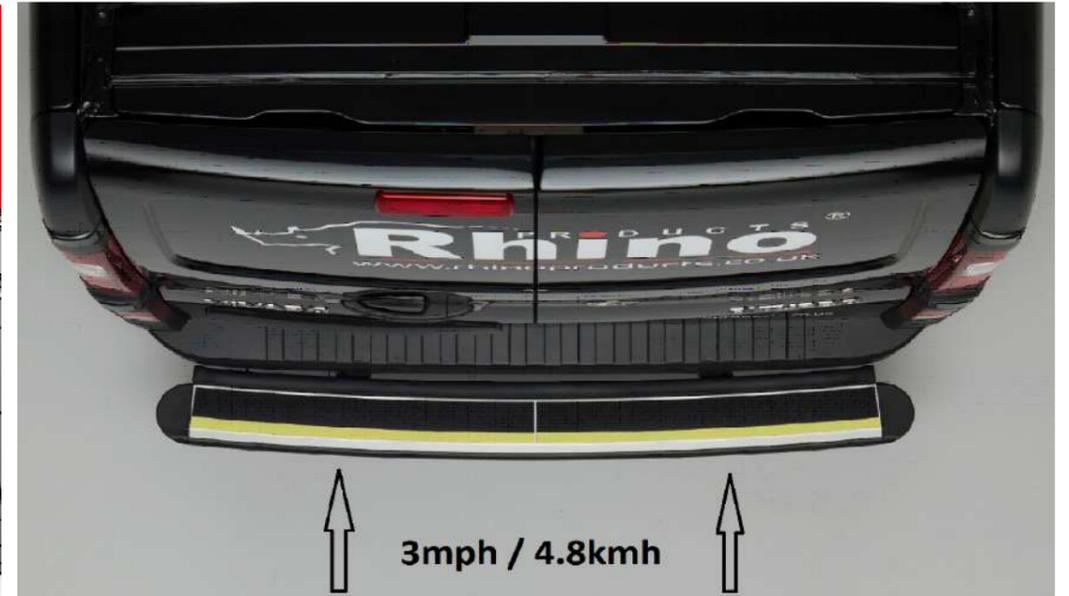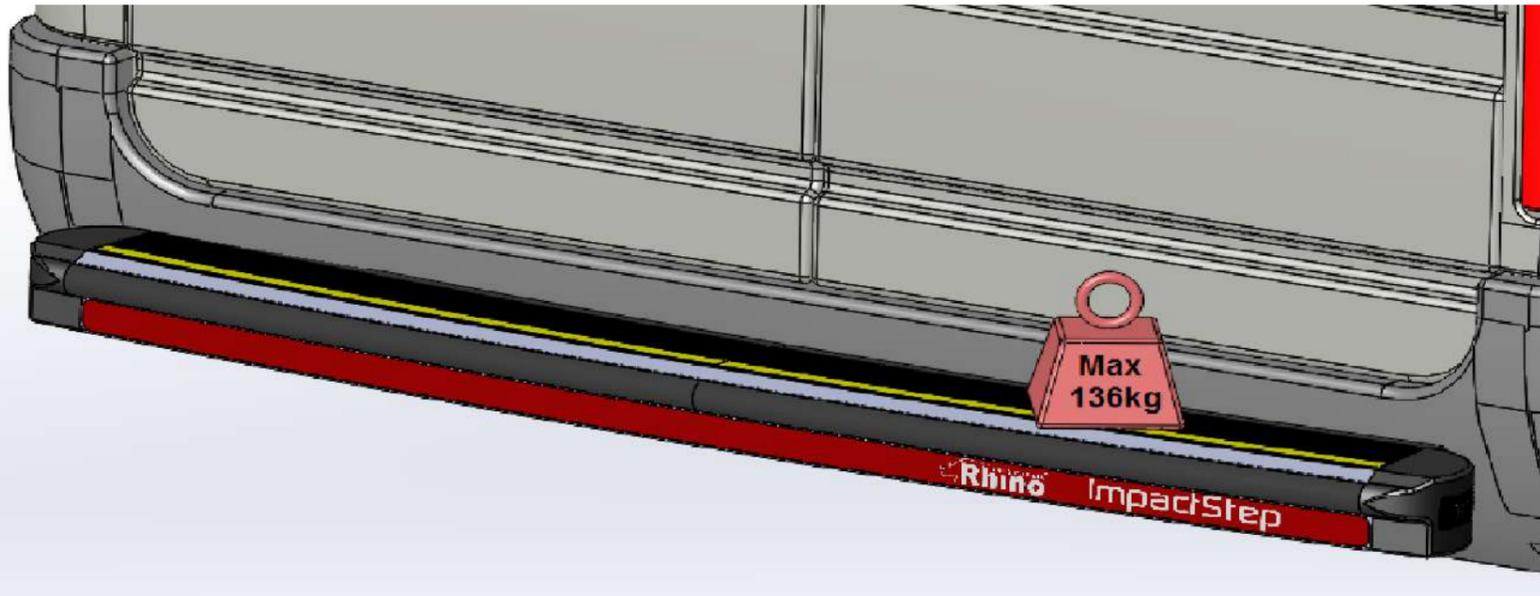

IMPACT STEP FITTING INSTRUCTIONS

FITTING KIT CONTENTS FK884
(1:1)

1




FW020 (M8) x 4


ACCESSSTEP	✗
IMPACT STEP	✓



FB006 (M8 x 30) x 4

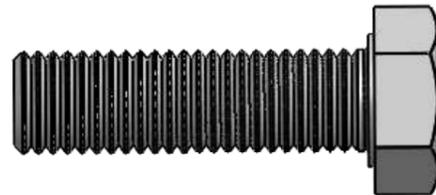


FS088 (M10 x 35) x 6

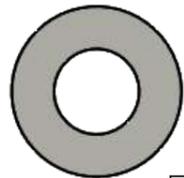

FW021 (M8) x

ACCESSSTEP	8
IMPACT STEP	4

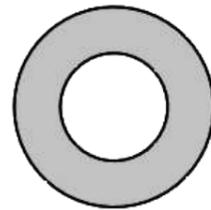

FW006 (M10) x 12



FN006 (M8) x 4


ACCESSSTEP	✓
IMPACT STEP	✗



FN008 (M10) x 6

FITTING TIME: 25 Minutes

2

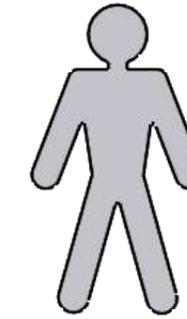

x 1




17mm x 1



13mm x 1








17mm x 1





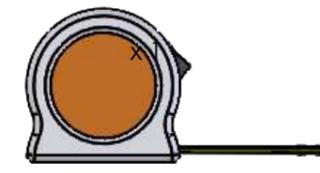


x 1

IMPACT STEP FITTING INSTRUCTIONS

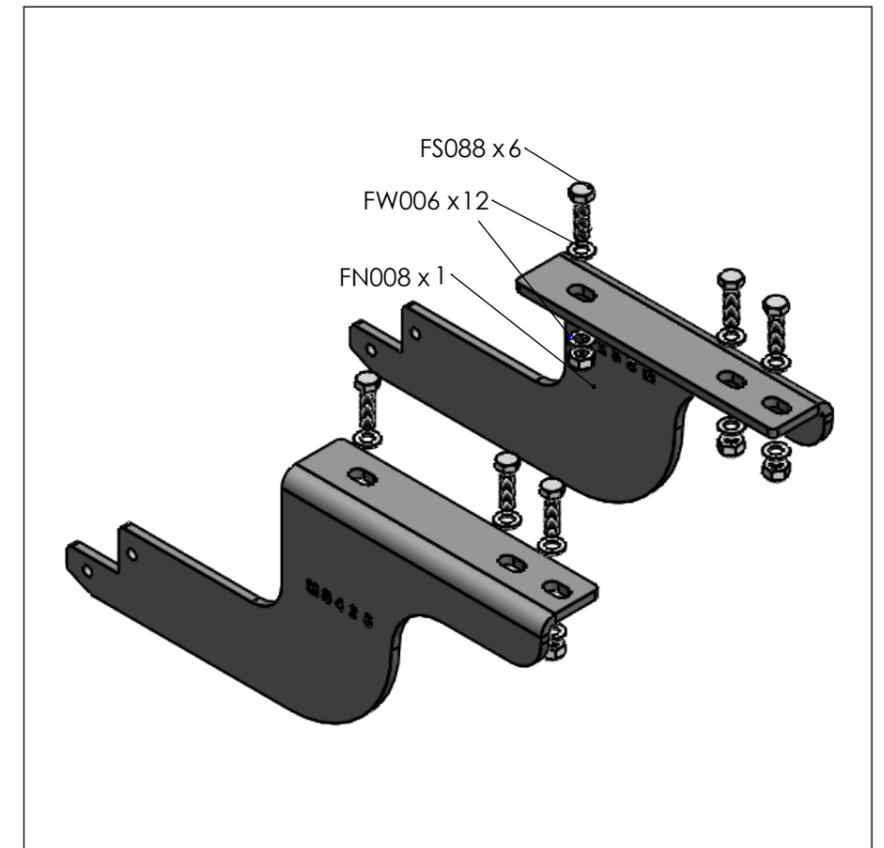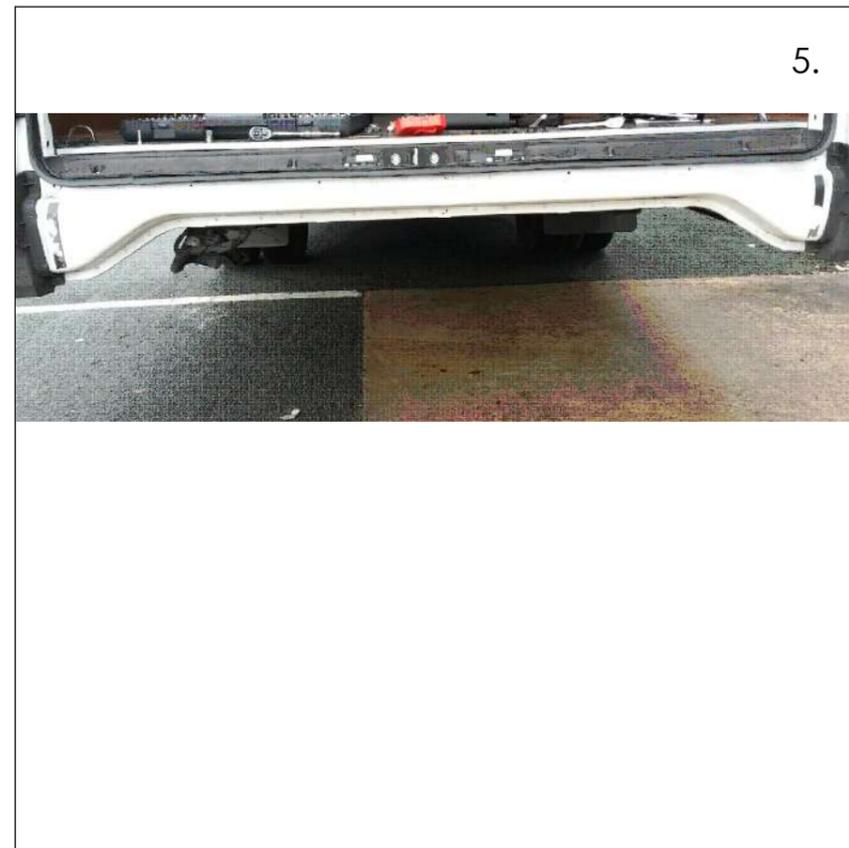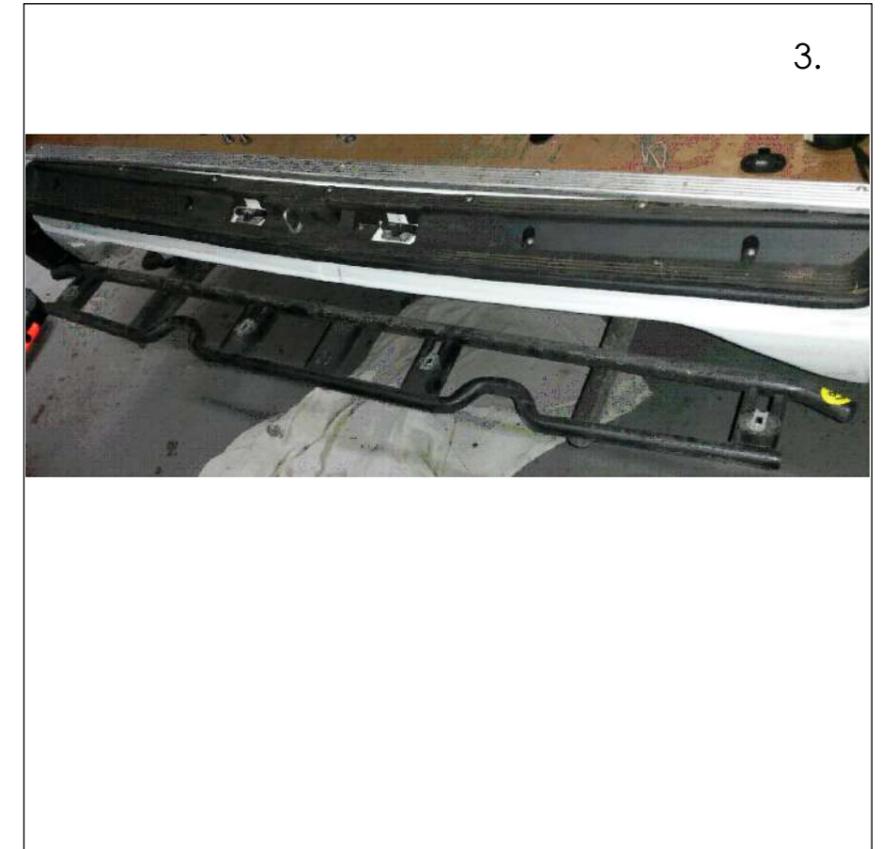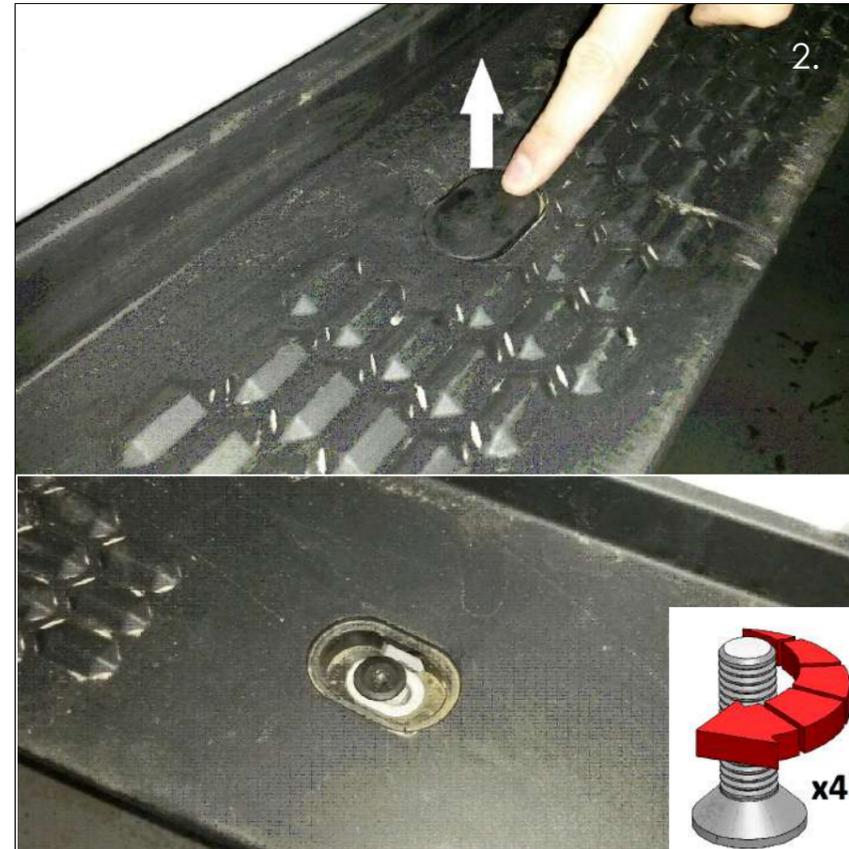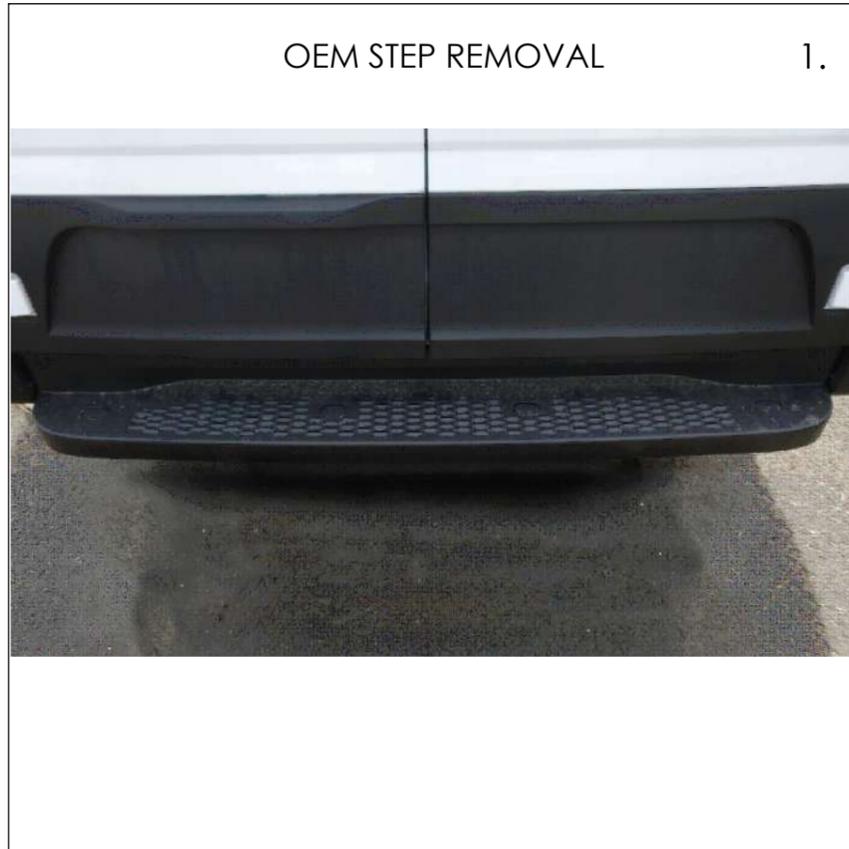

IMPACT STEP FITTING INSTRUCTIONS

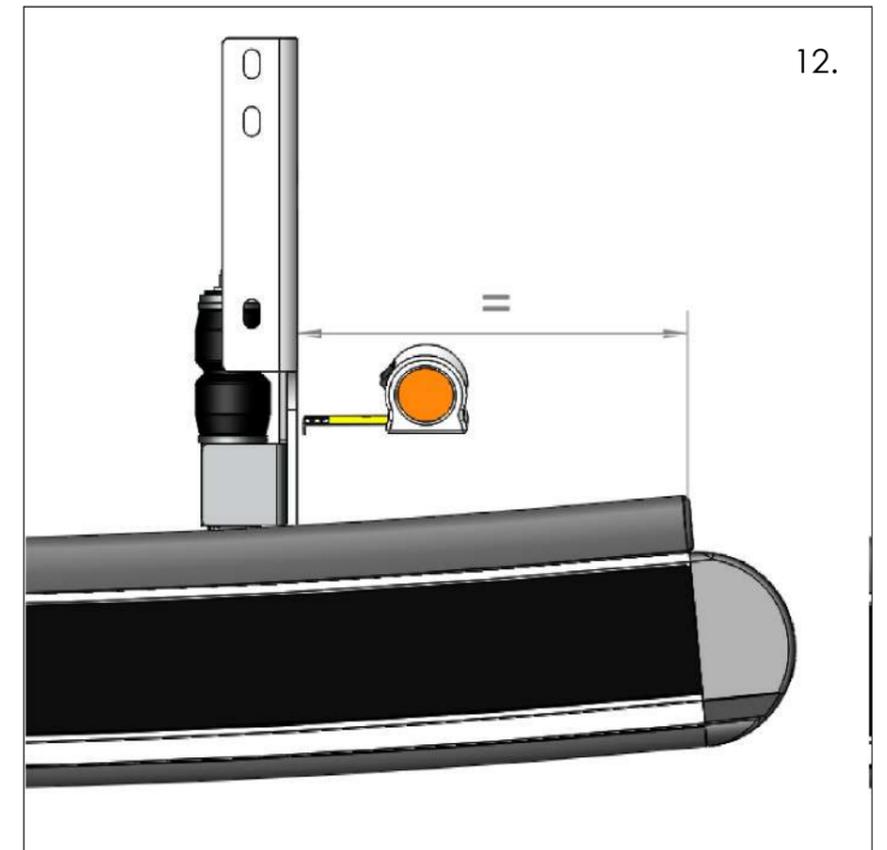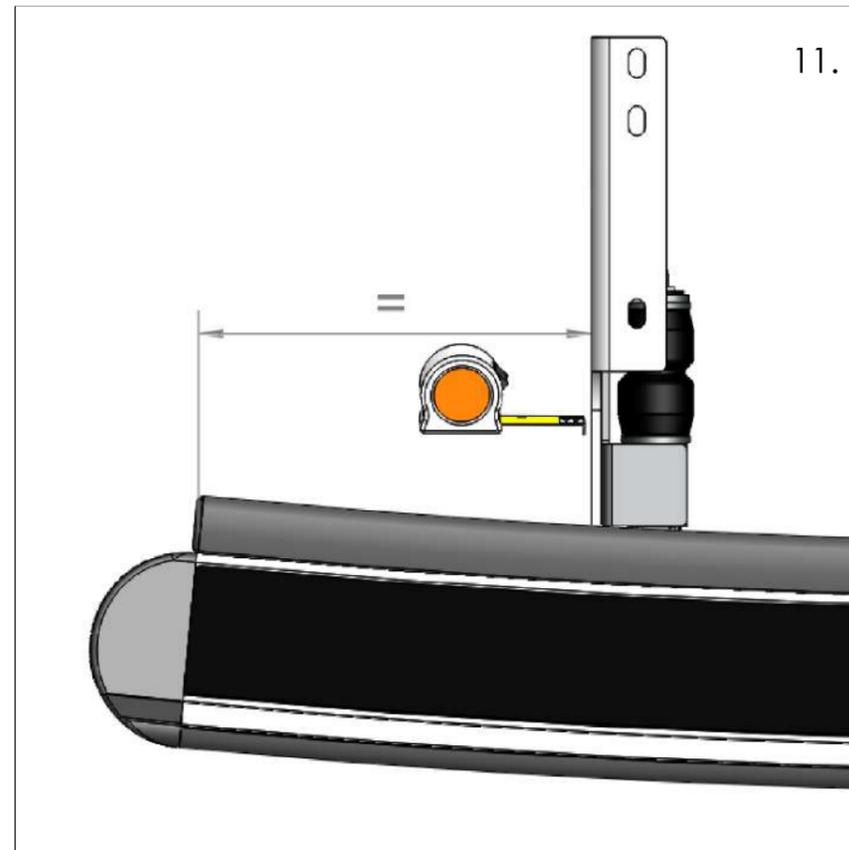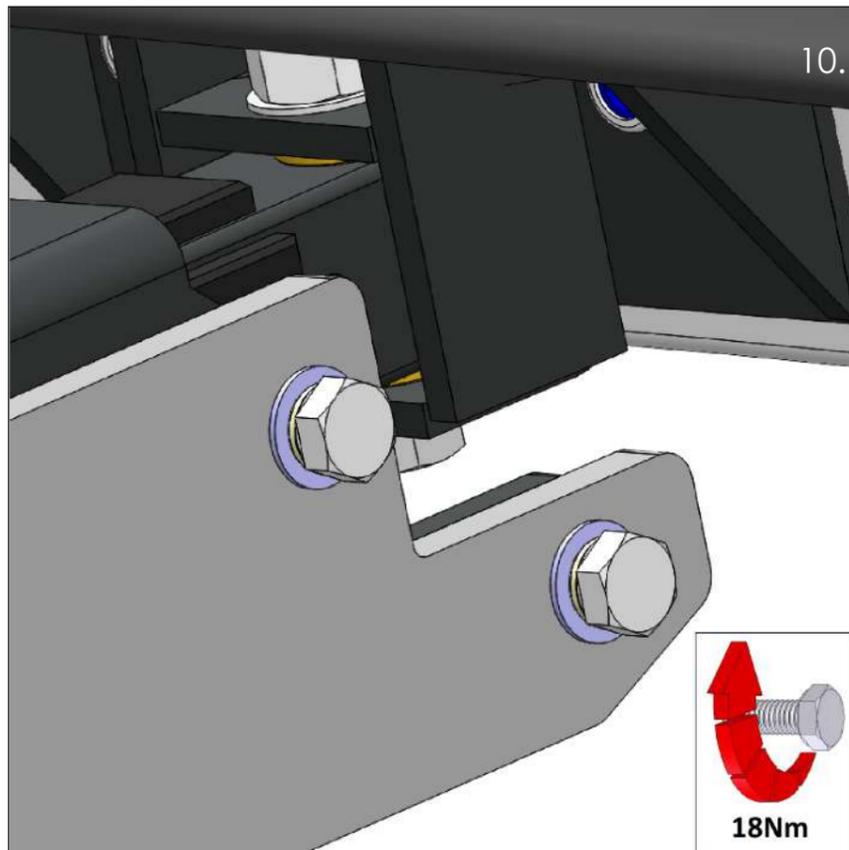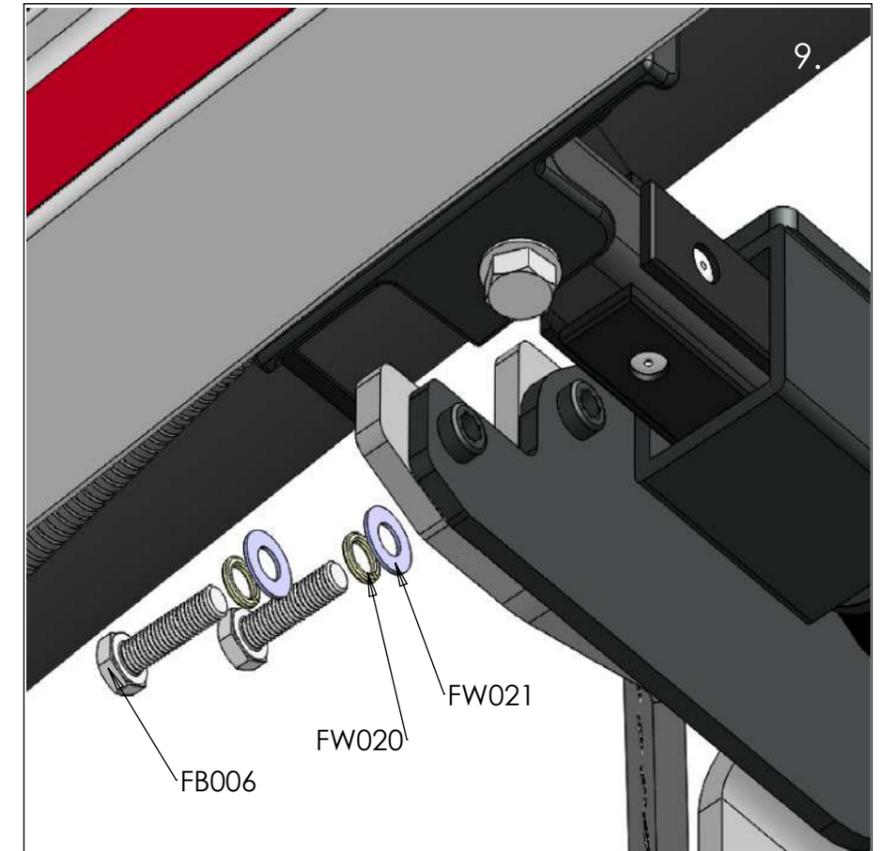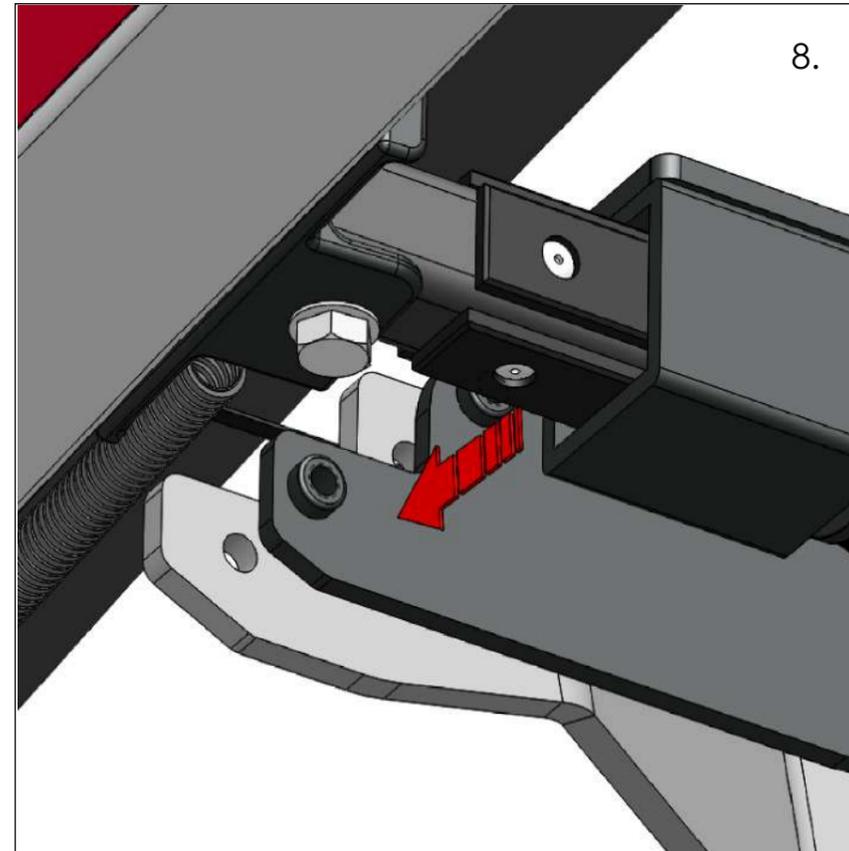

IMPACT STEP FITTING INSTRUCTIONS

