

FITTING INSTRUCTIONS



FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK883
(1:1)

1.




FW020 (M8) x 4

ACCESSESTEP	✗
IMPACT STEP	✓

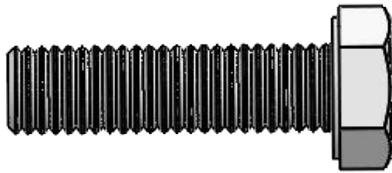


FB006 (M8 x 30) x 4

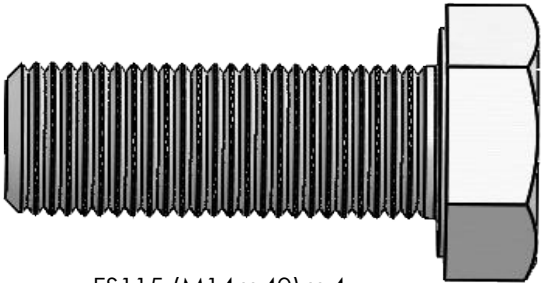


FS115 (M14 x 40) x 4




FN006 (M8) x 4

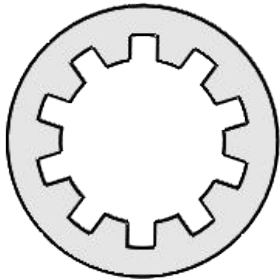

4010367-FW030 (M14) x 4

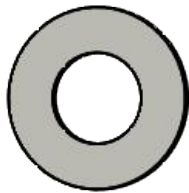



FW021 (M8) x 8

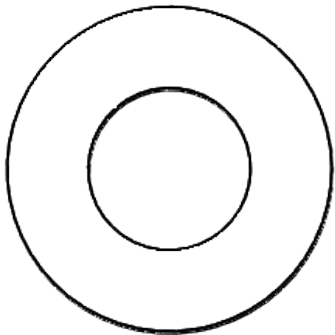


FW031 (M14) x 4

FITTING TIME: 20 Minutes

2.

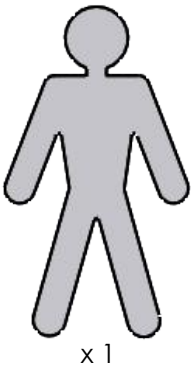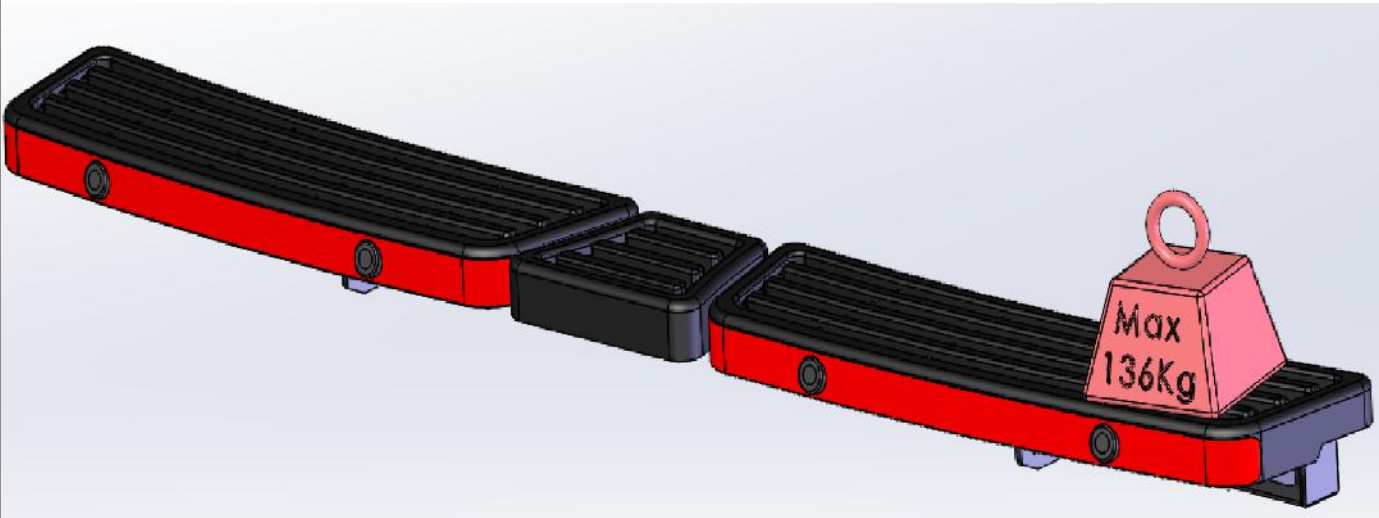

x 1

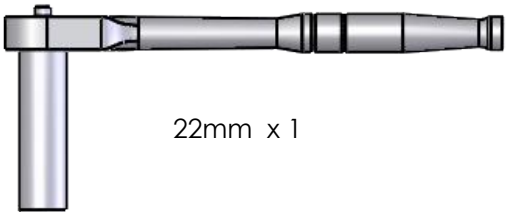

22mm x 1








13mm x 1





13mm x 1

FITTING INSTRUCTIONS

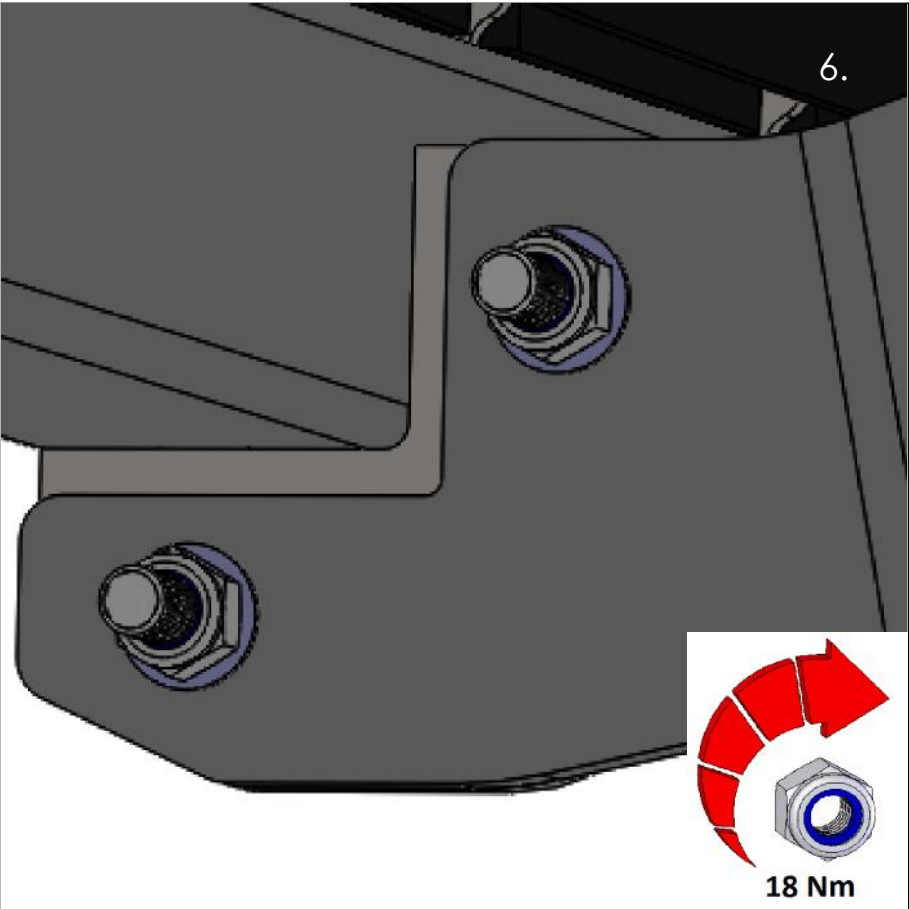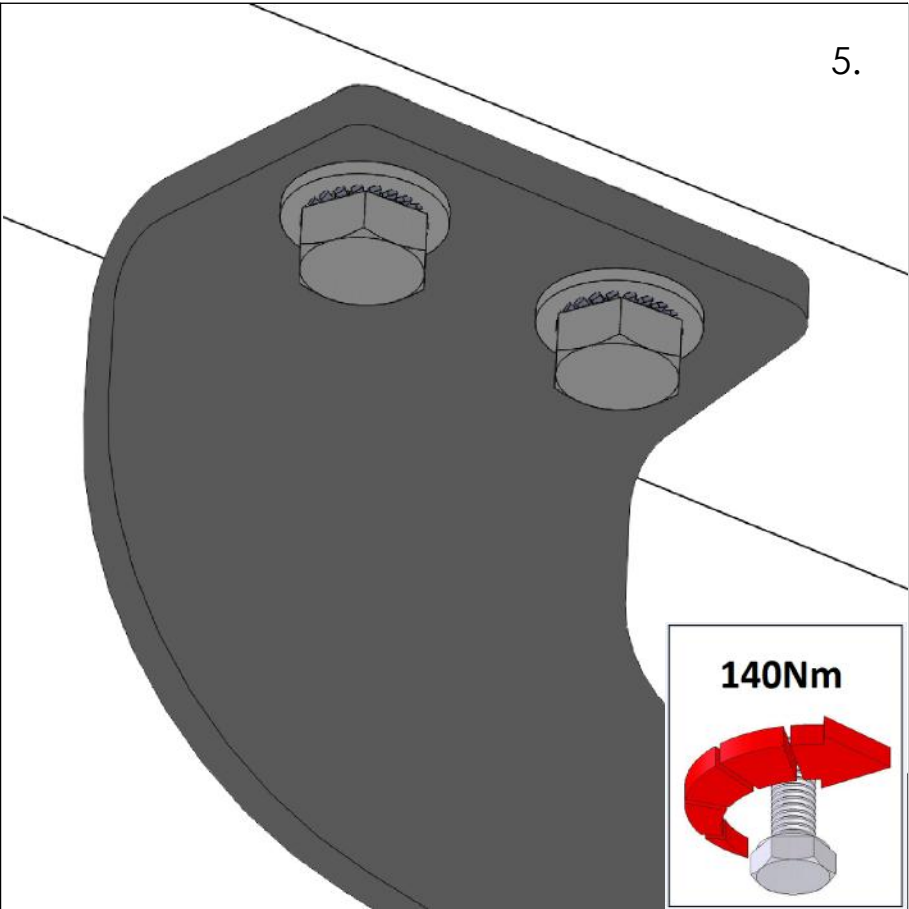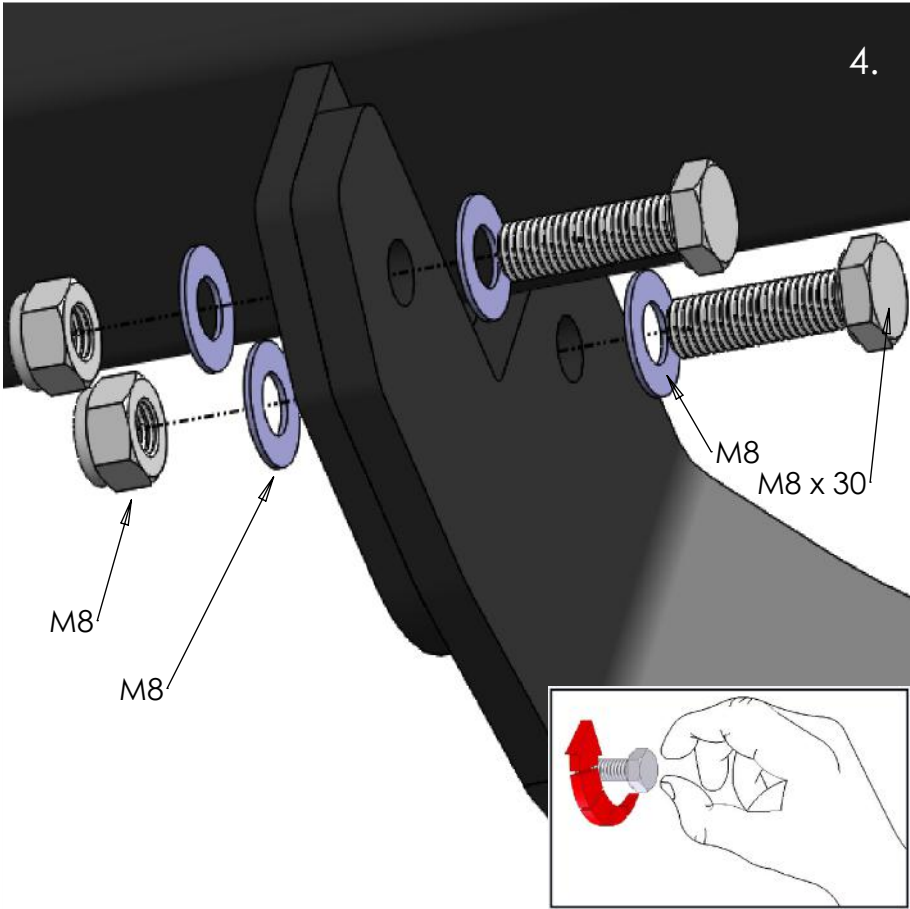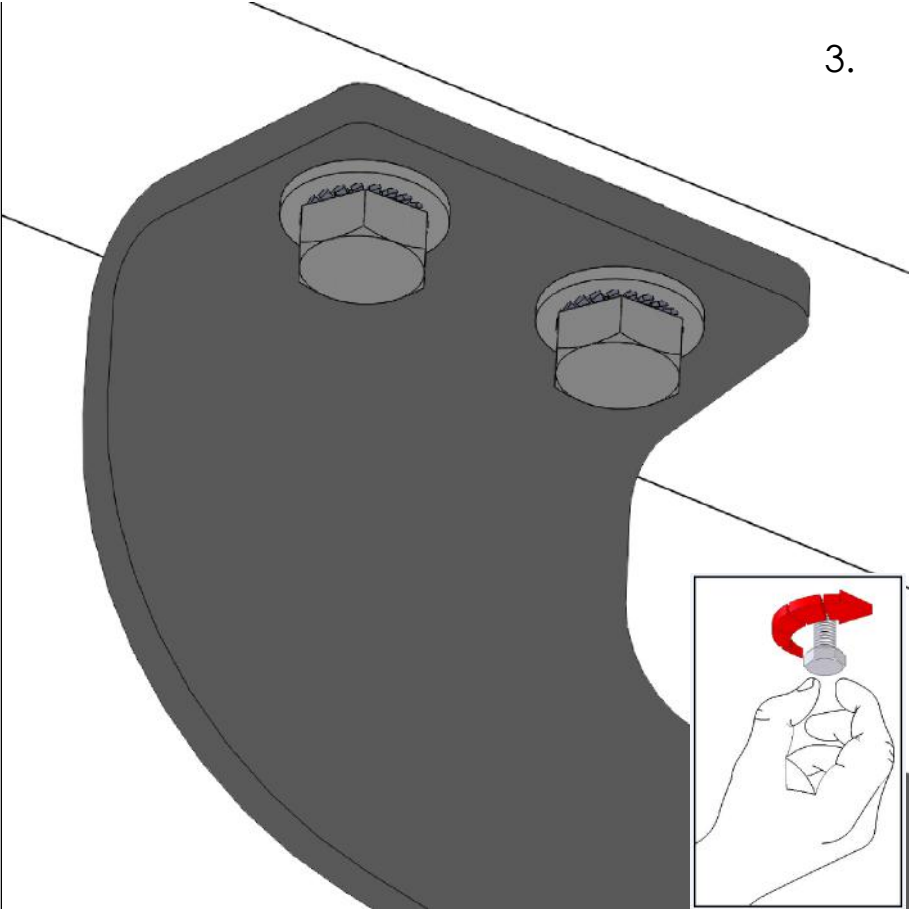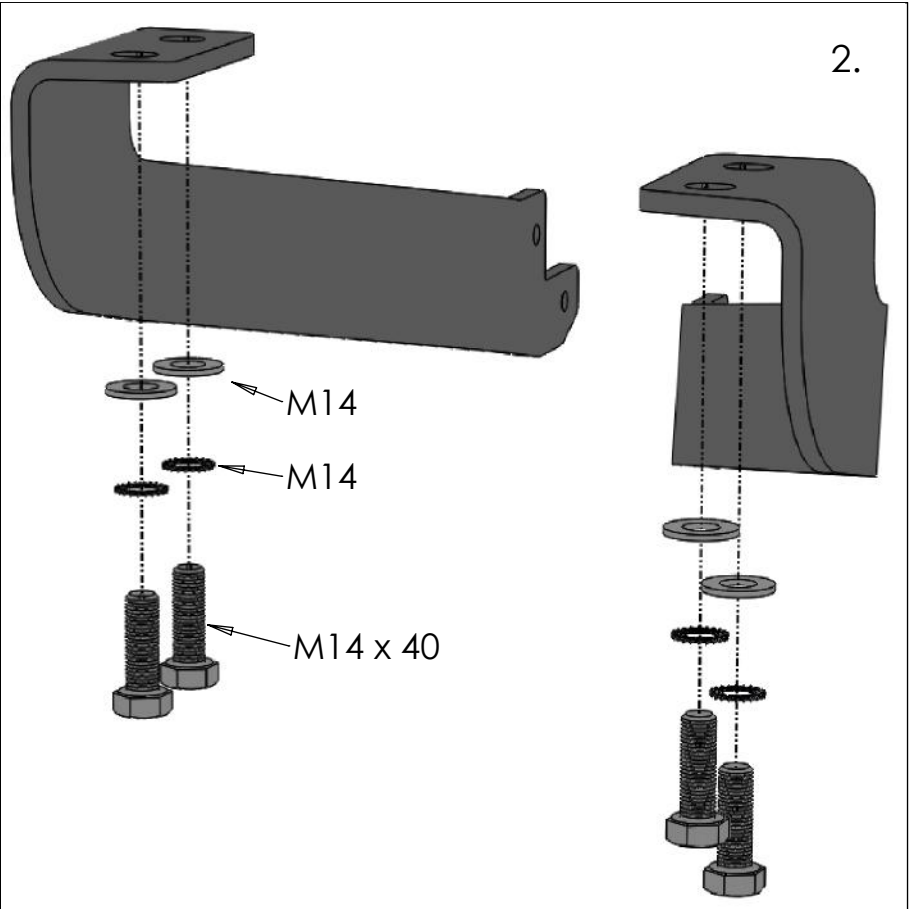

IMPACT STEP FITTING INSTRUCTIONS

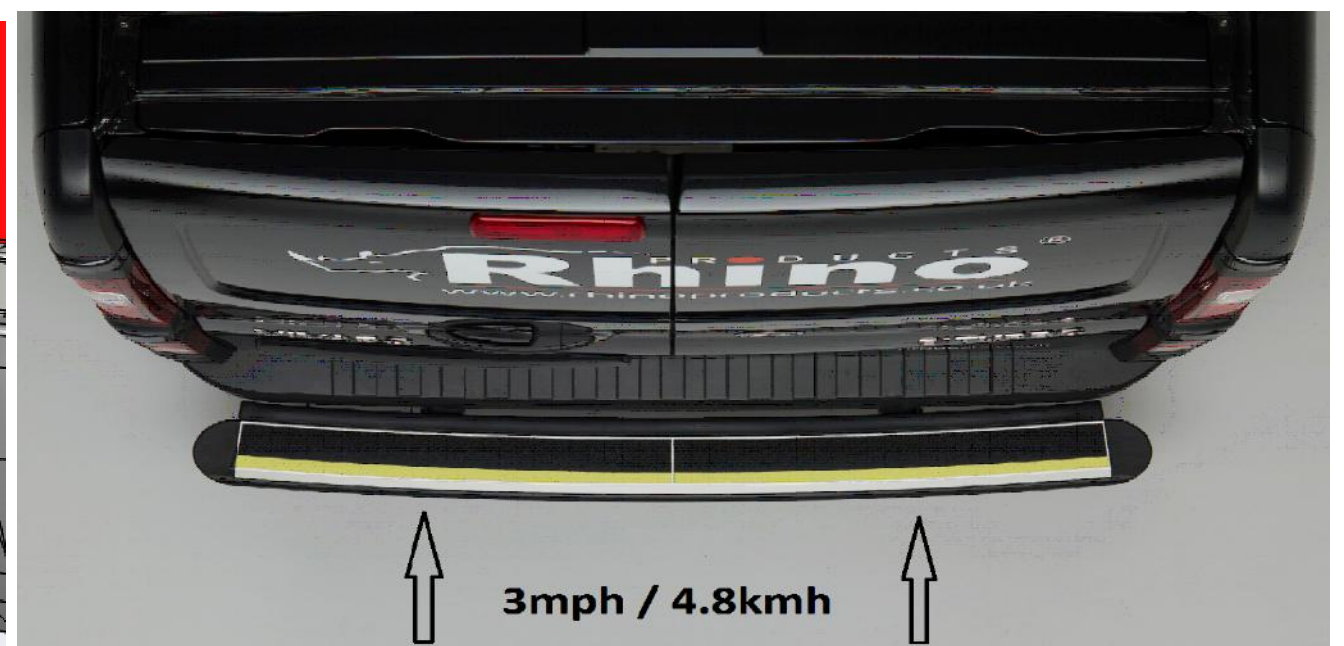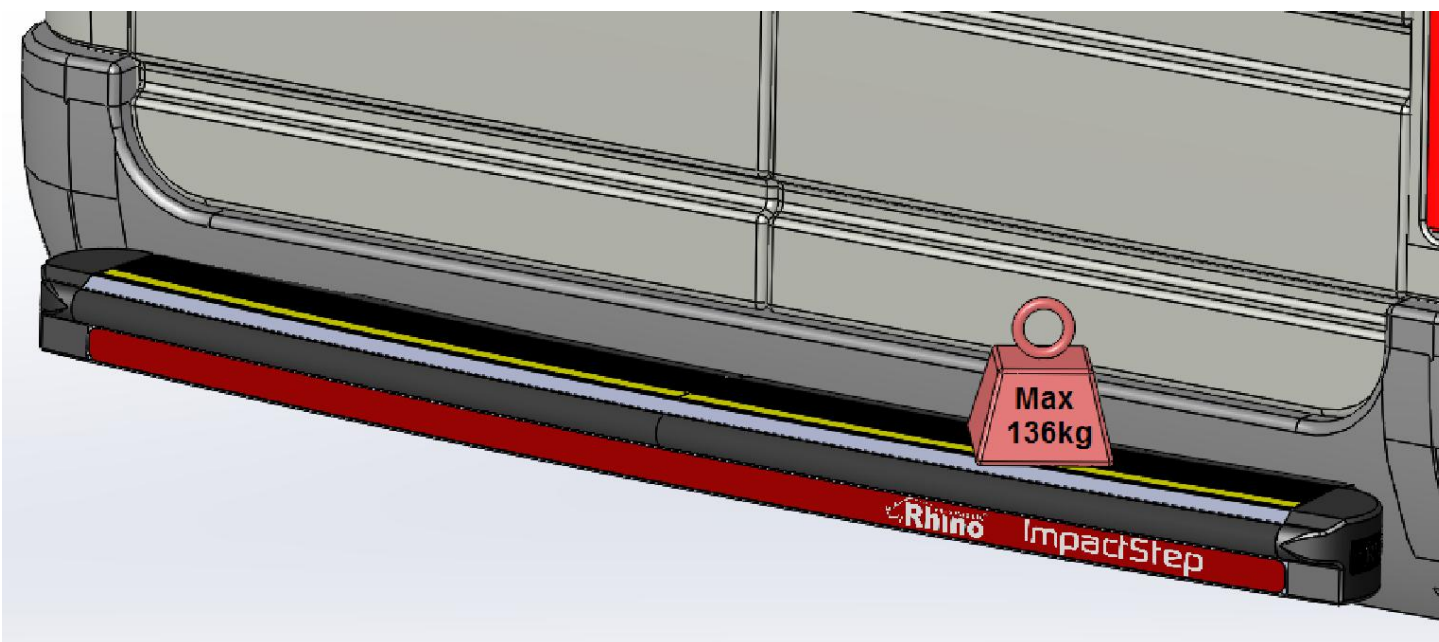

IMPACT STEP FITTING INSTRUCTIONS

1.


FITTING KIT CONTENTS FK883
(1:1)



FW020 (M8) x 4



FB006 (M8 x 30) x 4

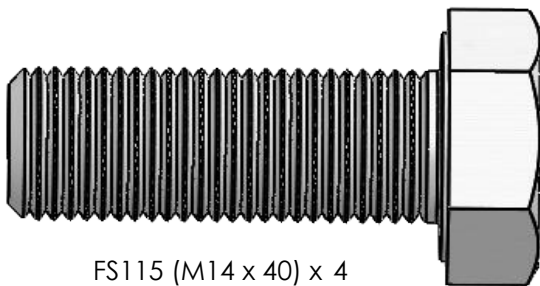


FS115 (M14 x 40) x 4




FN006 (M8) x 4

ACCESSSTEP	✓
IMPACT STEP	✗

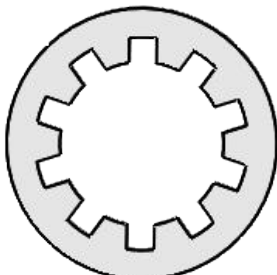


4010367-FW030 (M14) x 4

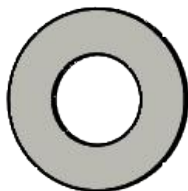

FW021 (M8) x 4


ACCESSSTEP	8
IMPACT STEP	4

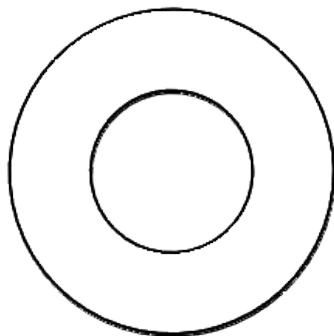


FW031 (M14) x 4

2.

FITTING TIME: 40 Minutes

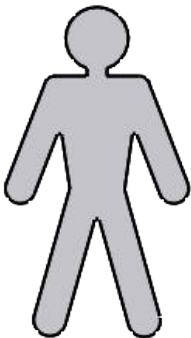

x 1

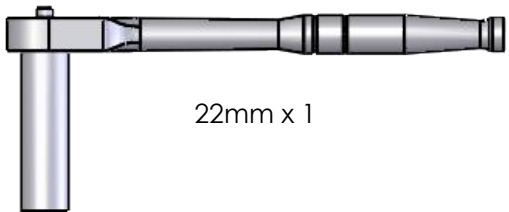


22mm x 1



13mm x 1









x 1



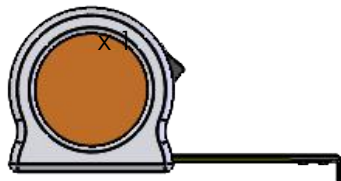


x 1

IMPACT STEP FITTING INSTRUCTIONS

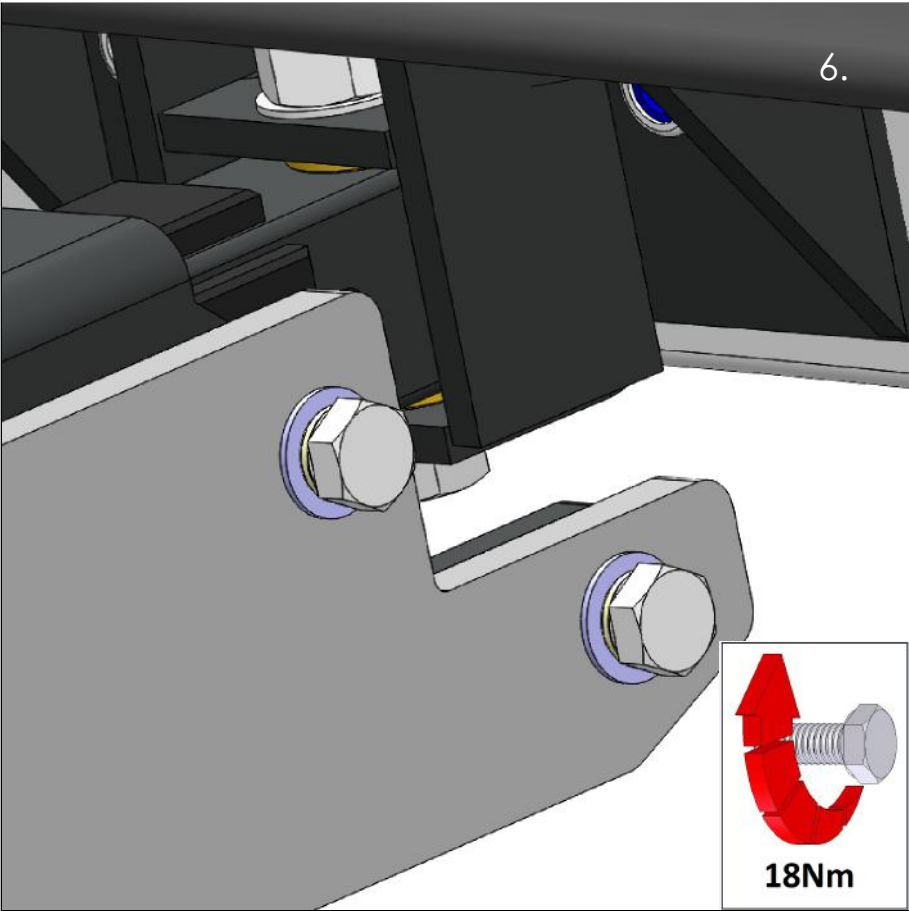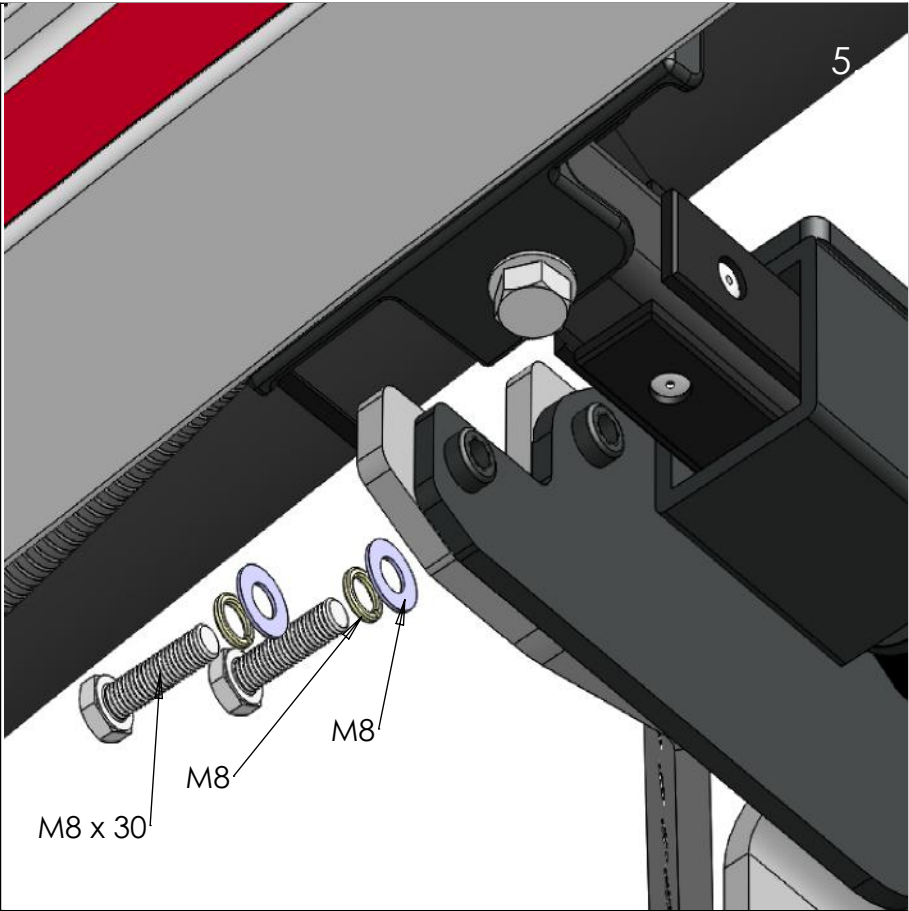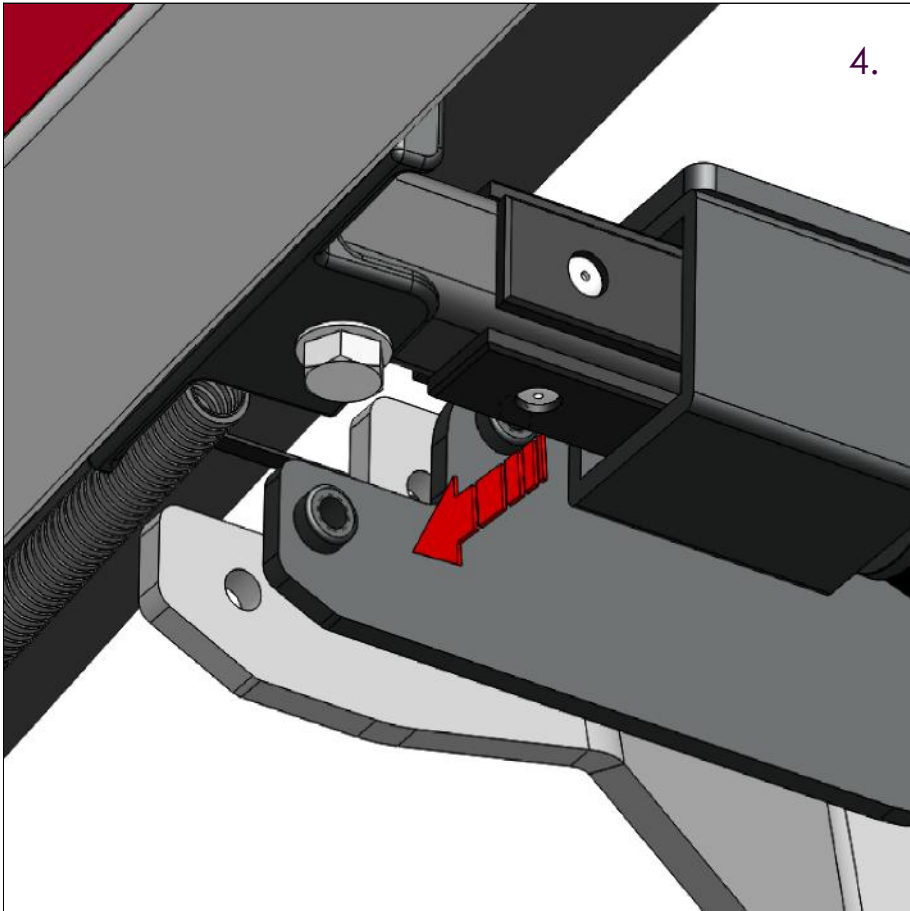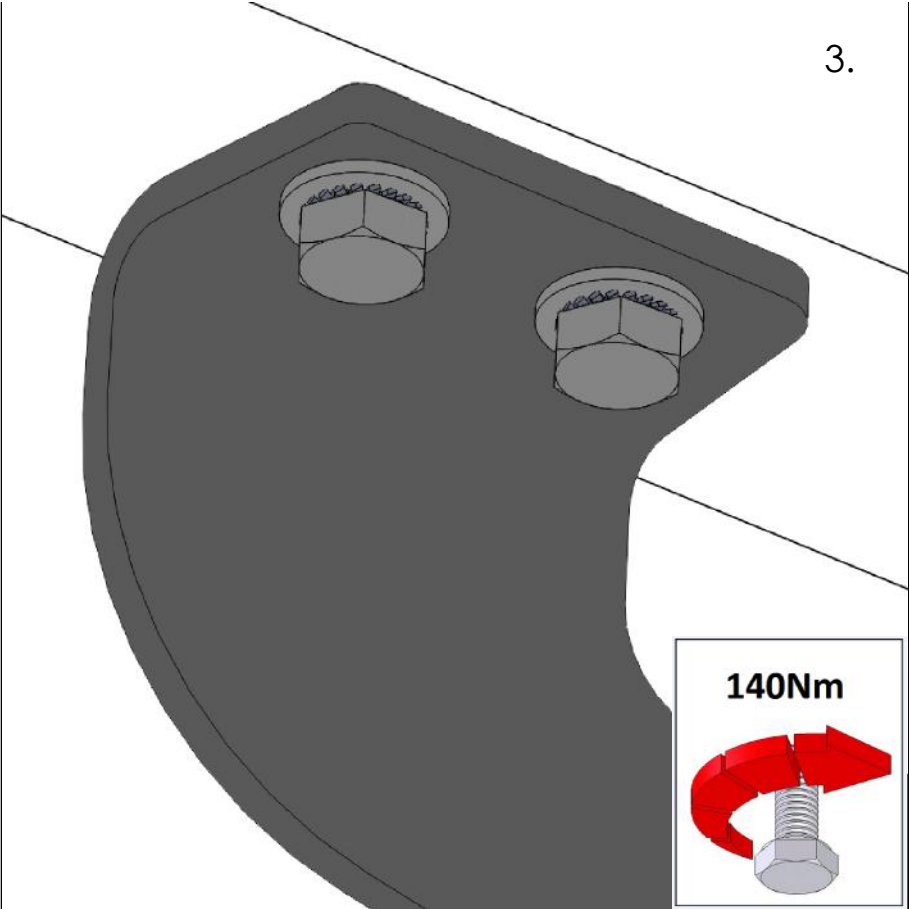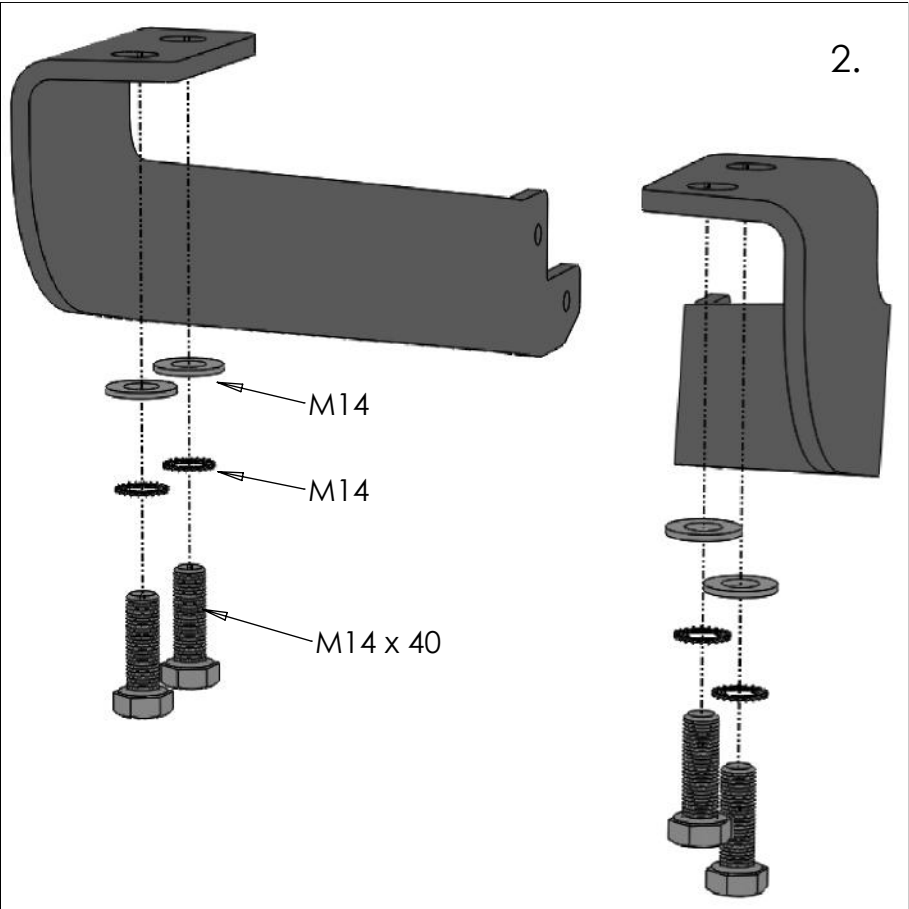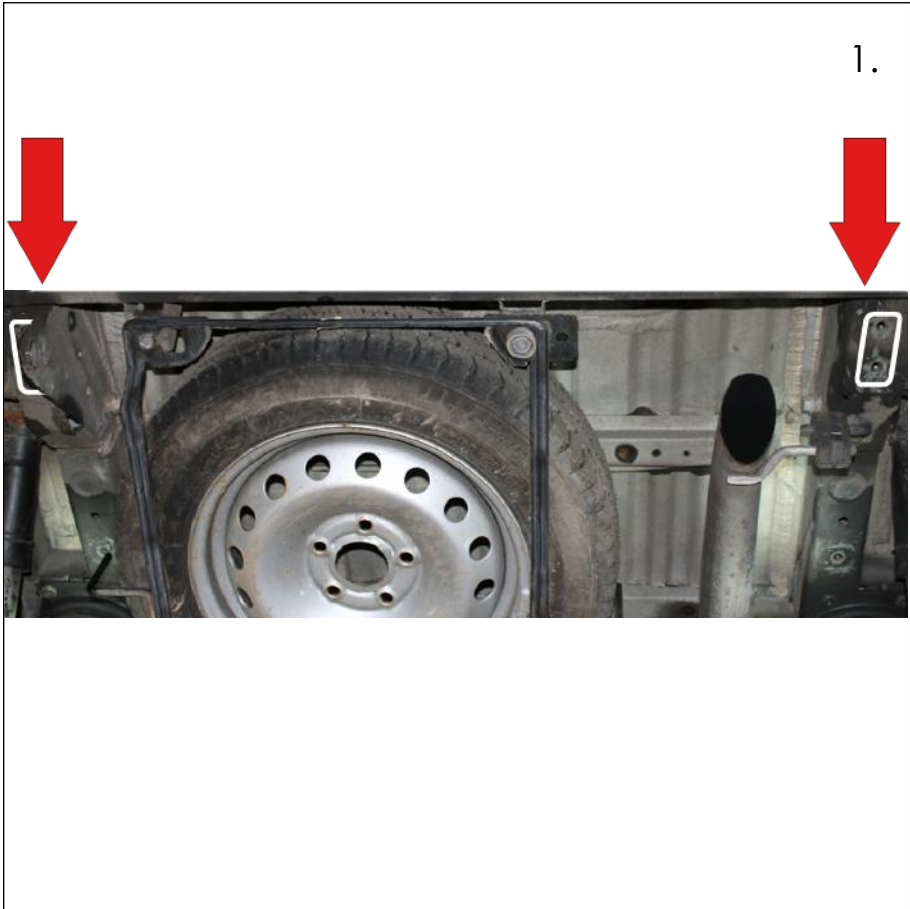

IMPACT STEP FITTING INSTRUCTIONS

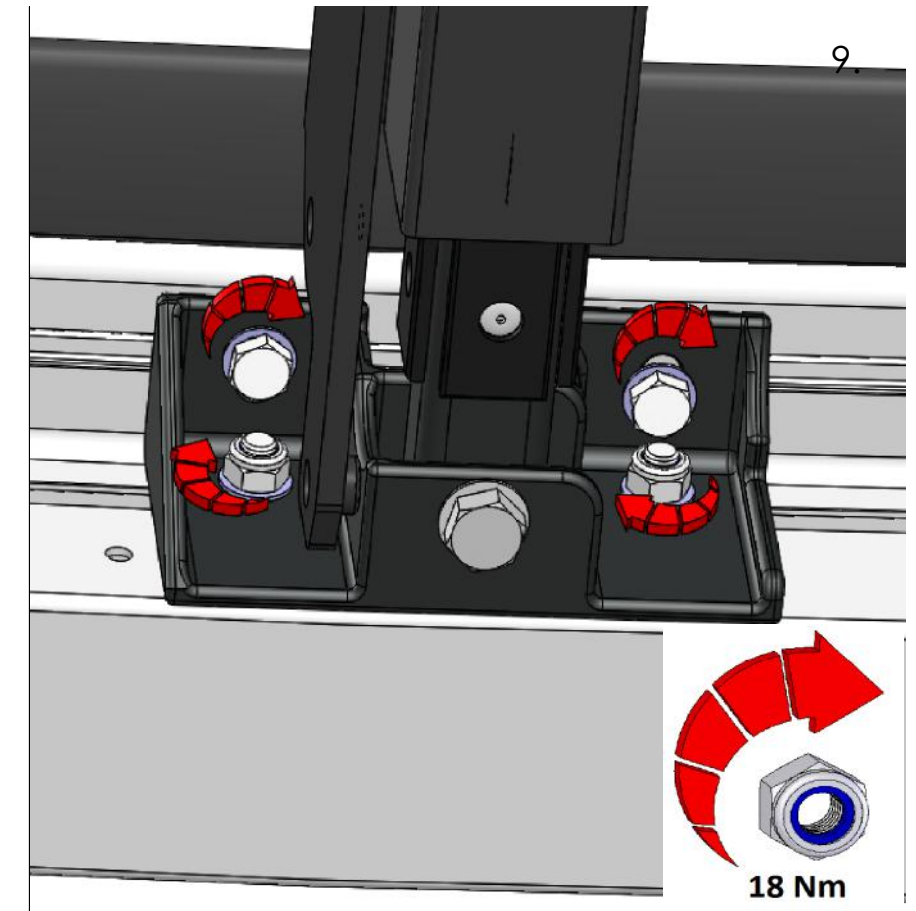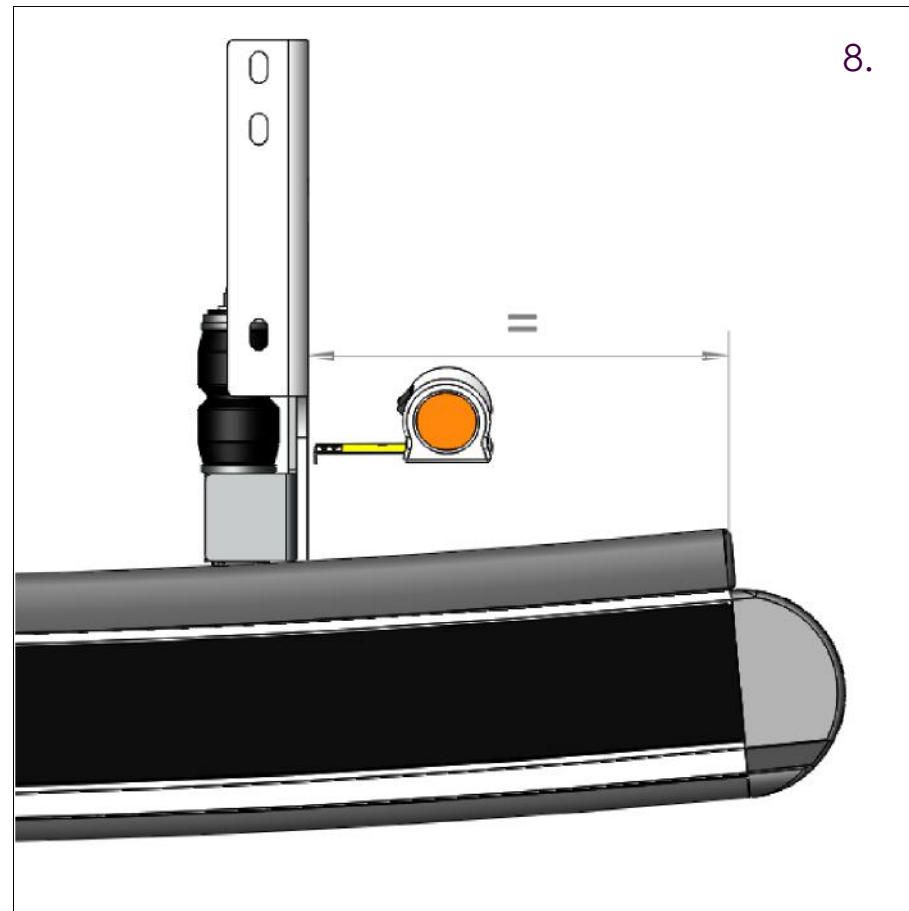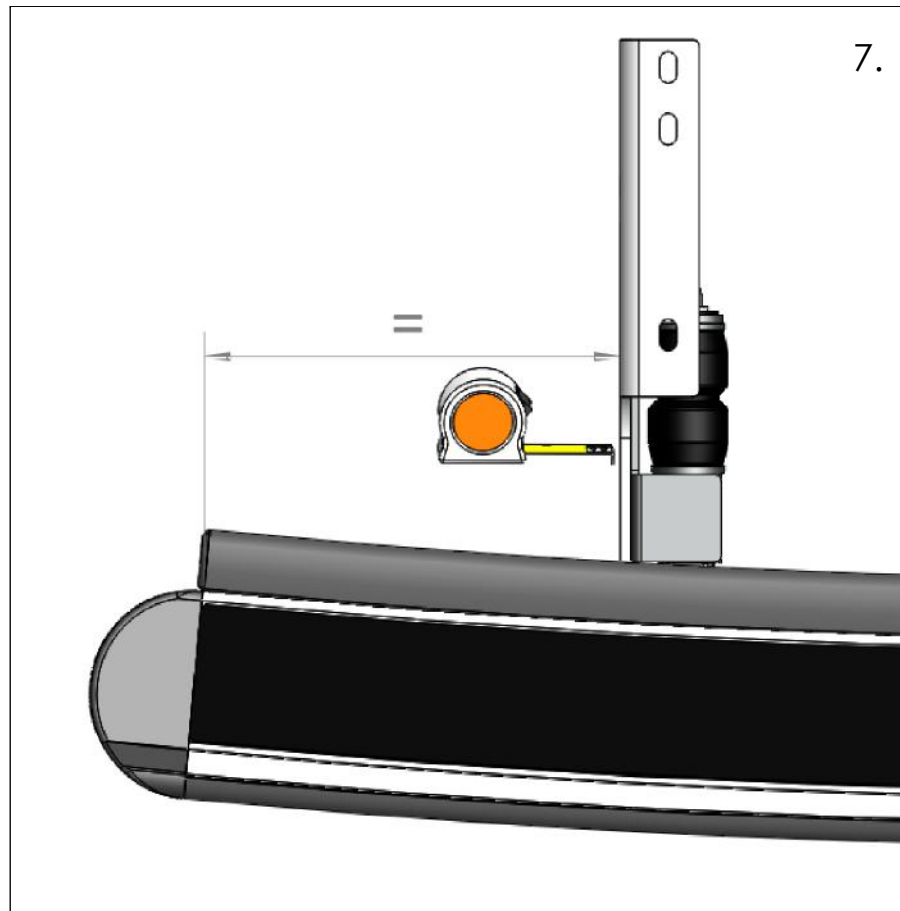



Rhino PRODUCTS **AccessStep**™ **connect**⁺®



GB: **Important!** The assembly instructions **MUST** be followed to ensure correct operation. Failure to do so can result in invalidated warranty and could affect operation.

FR: **Important!** Vous **DEVEZ IMPÉRATIVEMENT** suivre ces instructions d'assemblage pour assurer un fonctionnement correct du produit. Le non-respect de ces instructions peut entraîner une annulation de la garantie et entraver le bon fonctionnement.

ES: **¡Importante!** Estas instrucciones de montaje **DEBEN** ser seguidas para asegurar el correcto funcionamiento. De no hacerlo, puede resultar inválida la garantía y puede afectar el funcionamiento.

DE: **Wichtiger Hinweis!** Um die fehlerfreie Funktion sicherzustellen, **MUSS** diese Montageanleitung befolgt werden. Andernfalls kann die Garantie erlöschen und die Funktion beeinträchtigt werden.

NL: **Belangrijk!** **VOLG** deze inbouw instructies nauwgezet, zodat het systeem correct functioneert. Onjuiste installatie kan resulteren in een beperking van de werking en tevens de garantie.

IT: **Importante!** **È NECESSARIO** seguire le presenti istruzioni per il montaggio per garantire un corretto funzionamento. In caso contrario, la garanzia potrebbe essere invalidata e il funzionamento potrebbe risentirne.

PL: **UWAGA!** Aby system działał poprawnie, należy postępować dokładnie według instrukcji montażu. Nieprzestrzeganie tego procesu, może wpłynąć na działanie czujników lub też doprowadzić do utraty gwarancji.

SE: **Viktigt!** Monteringsinstruktionerna måste följas noggrant för att säkerställa funktionen. Om så ej görs upphör dels garantin att gälla samt även att själva funktionen kan påverkas.



GB: **ALWAYS** support the sensor adapter from the outside while fitting the vehicle sensors.

FR: Toujours veiller à un bon support des adaptateurs du capteur lors du montage des capteurs du véhicule.

ES: Sujete siempre el adaptador de sensor mientras instale sensores de vehículos.


DE: Es ist darauf zu achten, dass der Sensoradapter beim Anbringen der Fahrzeugsensoren immer gestützt wird.

NL: Ondersteun de sensorhouders tijdens de installatie van de voertuigsensoren.

IT: Sostenere sempre l'adattatore del sensore durante l'installazione dei sensori del veicolo.

PL: Zawsze podtrzymuj adaptery podczas montażu czujników.

SW: Ge sensoradaptern stöd när fordonets sensorer monteras.

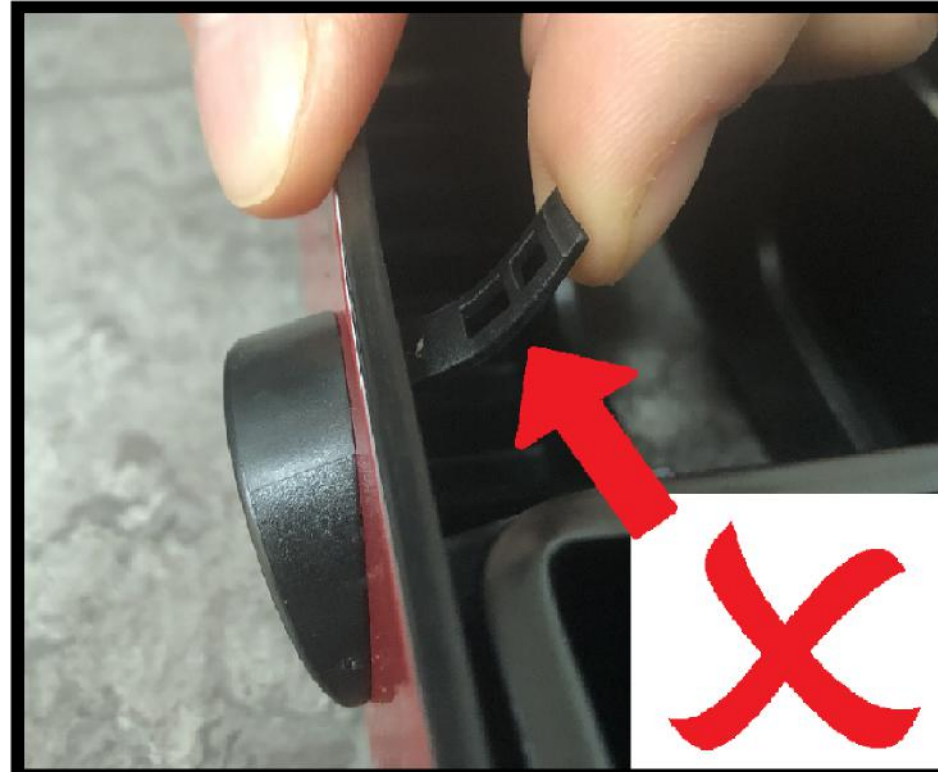

GB: **DO NOT** over bend the adapter arms when inserting the vehicle sensors.

FR: Ne pas courber les bras de l'adaptateur lors de l'insertion des capteurs.

ES: No doble demasiado los brazos de los adaptadores cuando inserte sensores.


DE: Die Adapterarme beim Einsetzen der Sensoren nicht überbiegen.

NL: Buig de sensorhouder-armen niet te ver naar buiten

IT: Non piegare eccessivamente i bracci dell'adattatore durante l'inserimento dei sensori.

PL: Podczas wkładania czujników parkowania do adapterów, należy pamiętać, aby nadmiernie nie zginać ramion adaptera.

SW: öj ej adapterns armar för mycket när sensorn monteras.

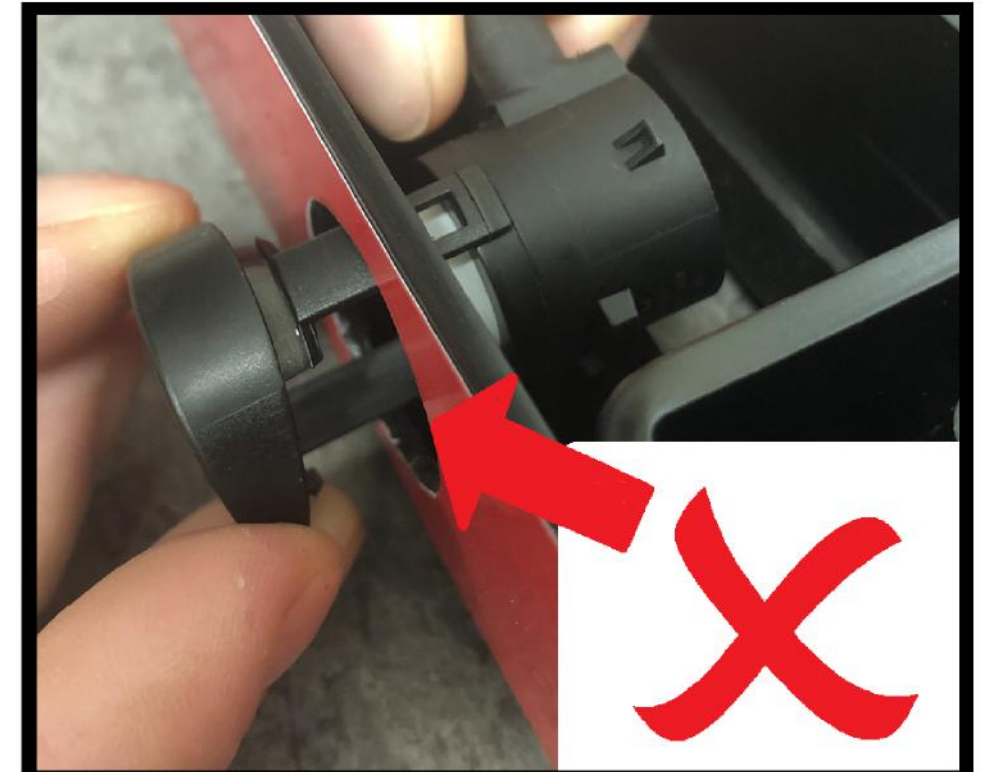

GB: **DO NOT** de-mount the adapters from the step when fitting the sensors

FR: Veillez à ne pas démonter les adaptateurs du marchepied lors du montage des capteurs.

ES: Tenga cuidado en no desmontar adaptadores del escalón cuando instale sensores.

DE: Darauf achten, dass beim Anbringen der Sensoren keine Adapter von der Trittstufe abmontiert werden.

NL: Zorg ervoor dat de sensorhouders niet uit de opstap worden gedrukt, tijdens de installatie van de sensors.

IT: Fare attenzione a non smontare gli adattatori dal gradino durante l'installazione dei sensori.

PL: Nie należy wyjmować adapterów ze stopnia, podczas montażu czujników.

SW: Iakttag försiktighet när sensorerna monteras så att inte adapterna skjuts ur steget.



PS573 x 4



PS558 x 4




PS366 x 4



PS397 x 2








2010172 - PS043 x 8

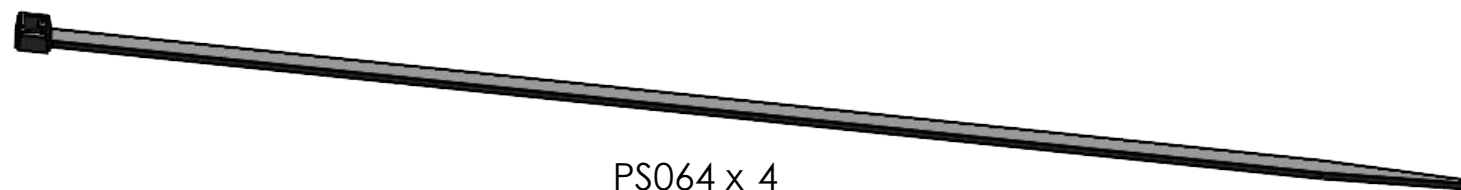

PS064 x 4



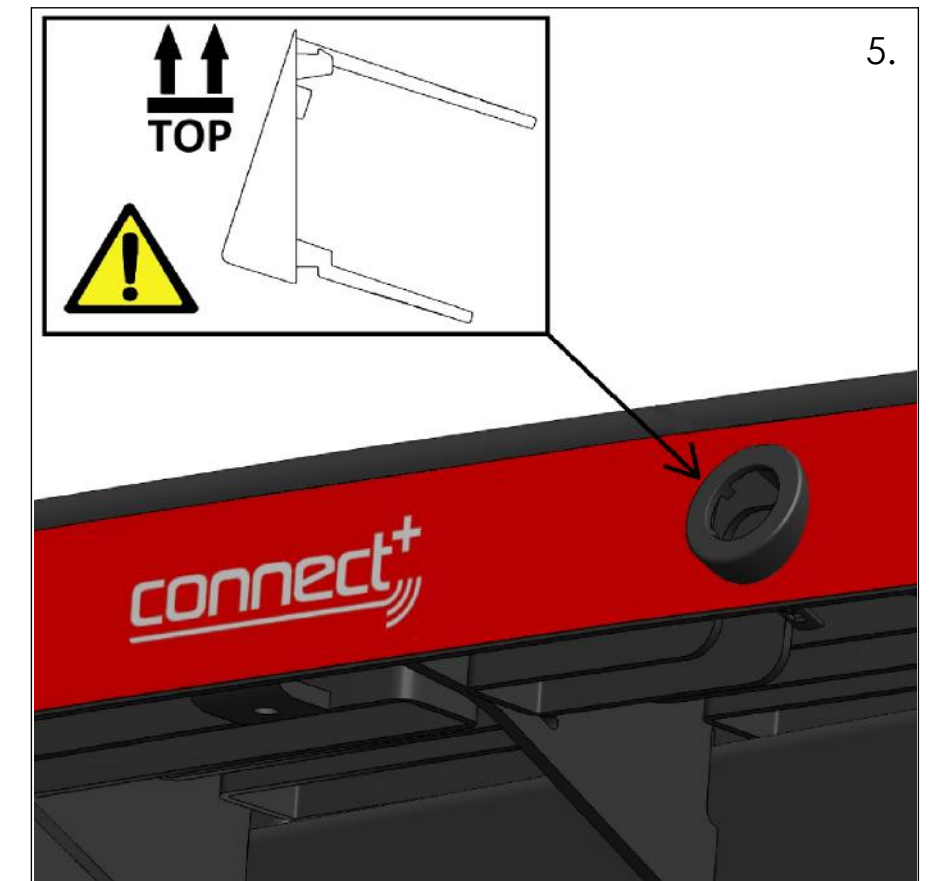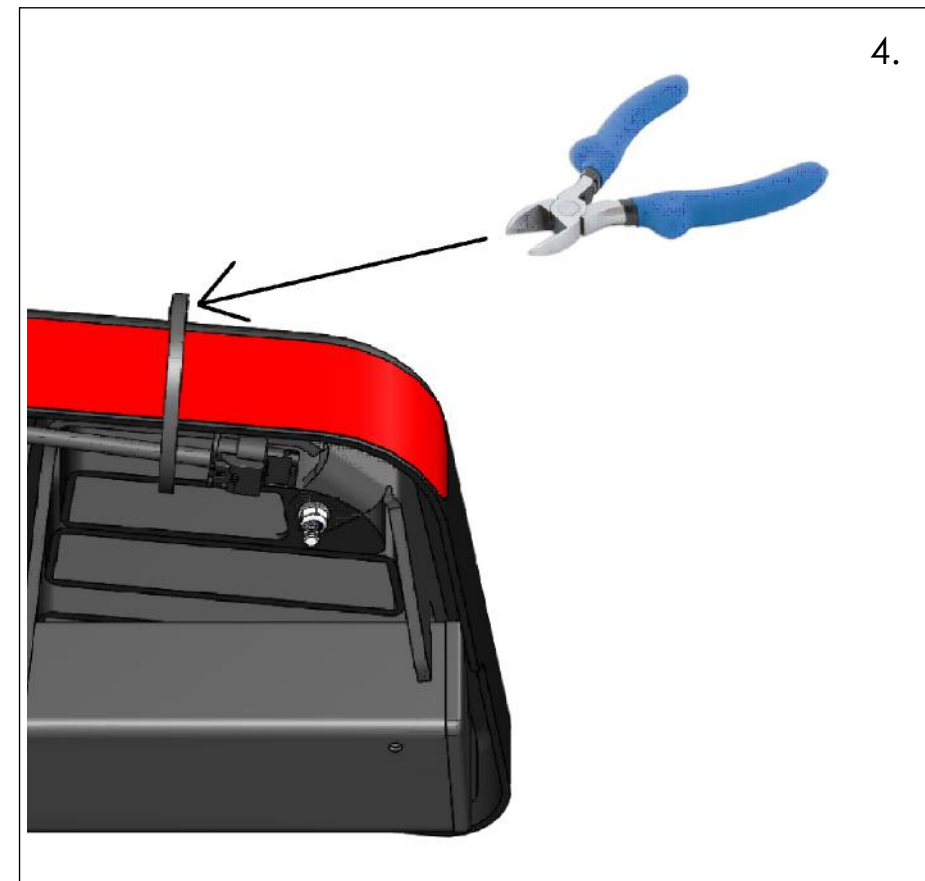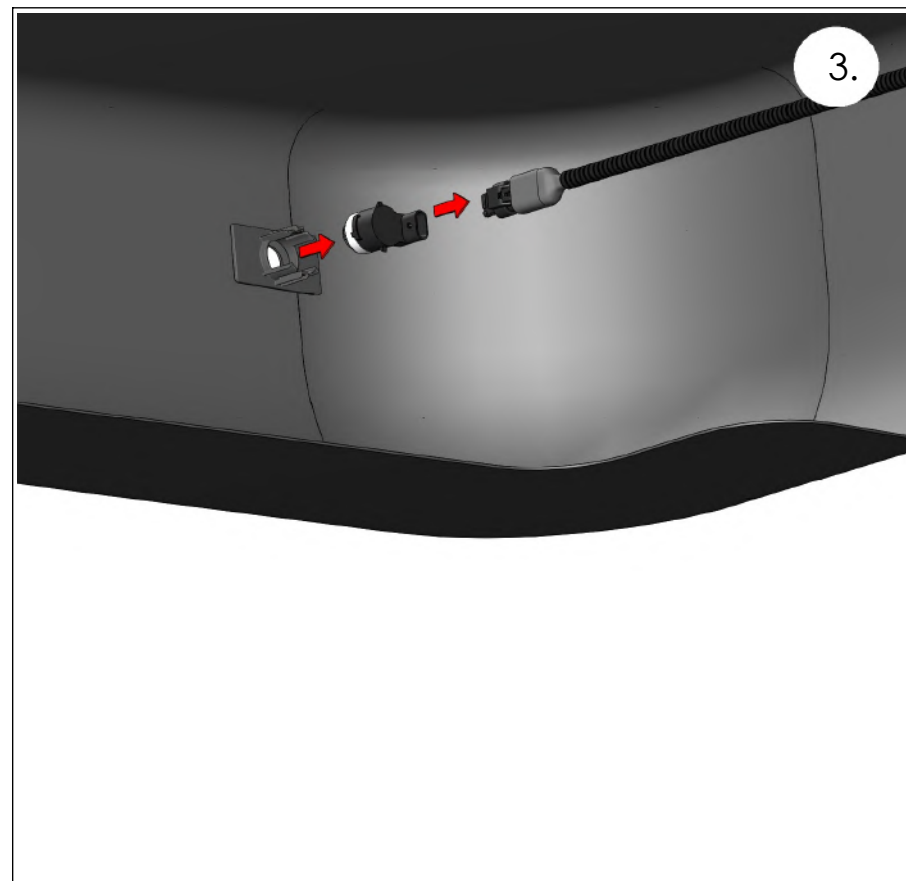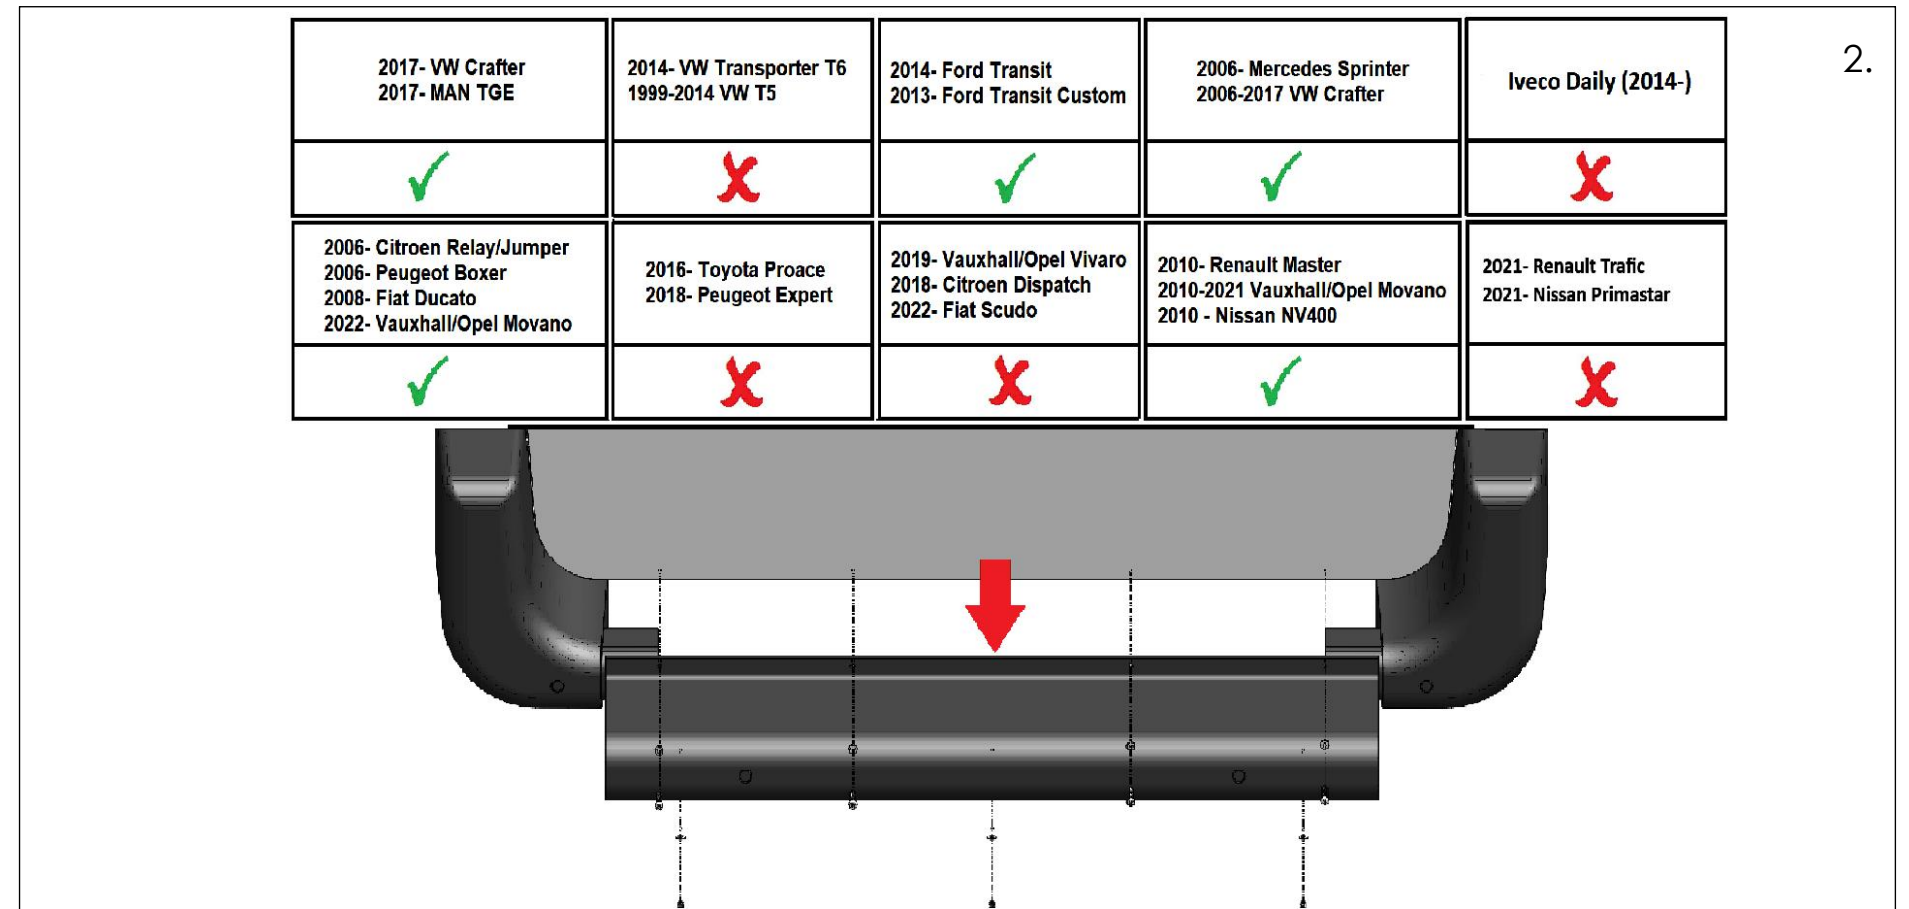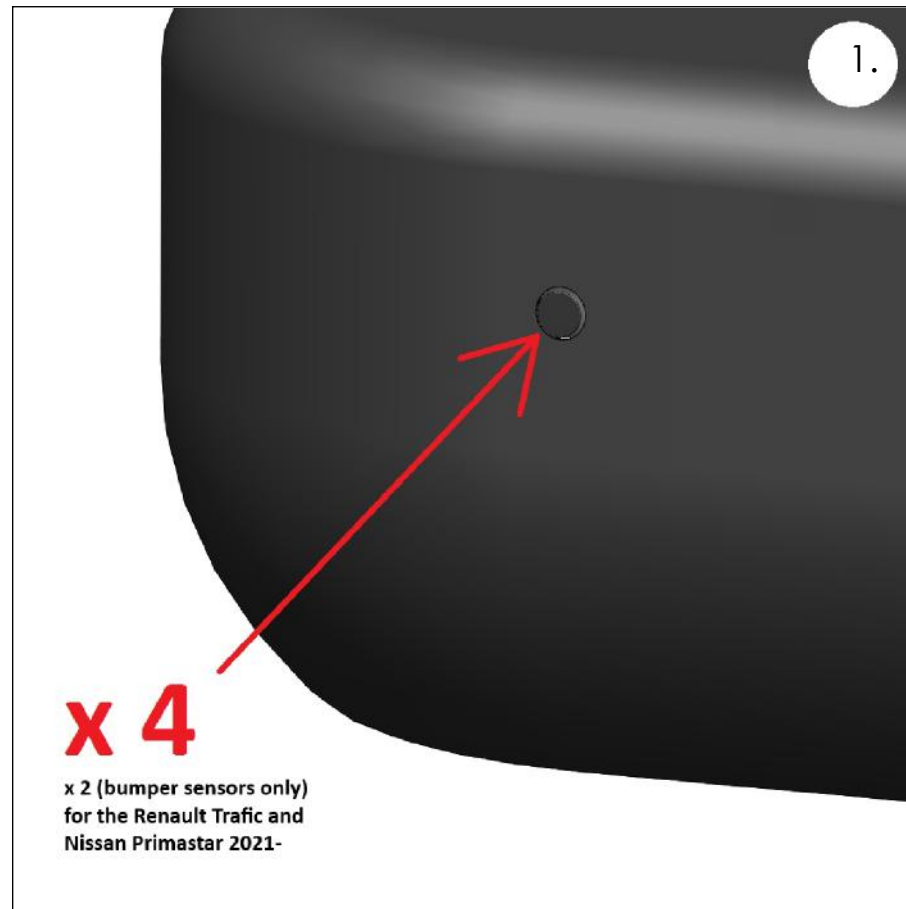

6.

2017- VW Crafter
2017- MAN TGE



PS366



2014- VW Transporter T6
1999-2014 VW T5



PS366



2006- Mercedes Sprinter
2006-2017 VW Crafter



PS366



2016- Peugeot Expert
2016- Toyota Proace
2016- Citroen Dispatch
2019- Vauxhall Vivaro
2022- Fiat Scudo



PS366



2010- Renault Master
2010- Nissan NV400
2010-2021 Vauxhall/Opel Movano



PS366




2006- Fiat Ducato
2006- Peugeot Boxer
2006-Citroen Relay/Jumper
2022- Vauxhall/Opel Movano



PS366

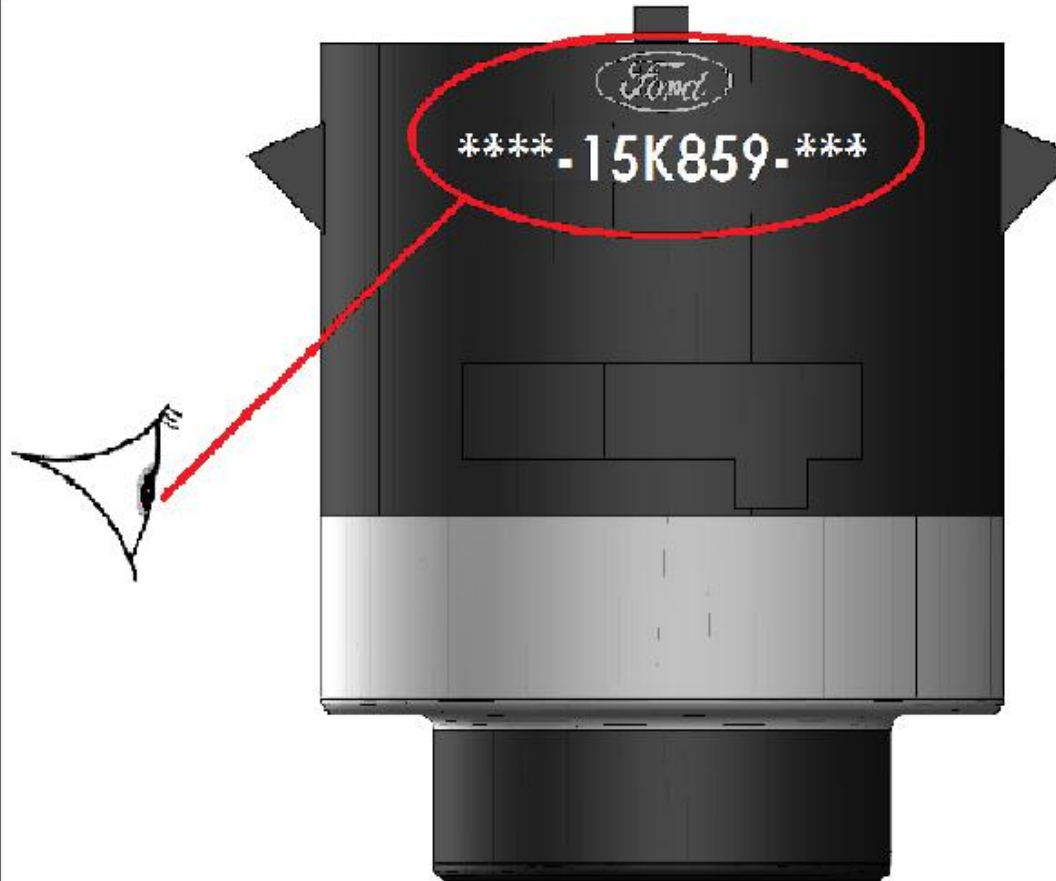

2020- Ford Transit (JU5T-15K859-BC) 2018- Ford Transit Custom (HU5T-15K859-AAW)  PS366 	2014-20 Ford Transit (GK2T-15K859-EA) 2012-18 Ford Transit Custom (CJ5T-15K859-AWW)  PS366 			
2014 - Iveco Daily  PS366 	2021- Renault Trafic 2021- Nissan Primastar 2024- Renault Master 2024- Nissan Interstar  <table><tr><td> PS366 </td><td> PS043 </td></tr></table>		PS366 	PS043 
PS366 	PS043 			

