

# FITTING INSTRUCTIONS



FITTING INSTRUCTIONS

FITTING KIT CONTENTS FK883  
(1:1)

1.




FW020 (M8) x 4

ACCESSESTEP	✗
IMPACT STEP	✓




FB006 (M8 x 30) x 4

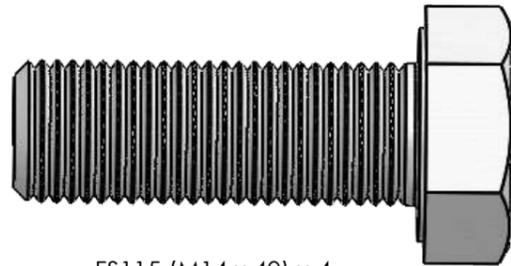


FS115 (M14 x 40) x 4




FN006 (M8) x 4

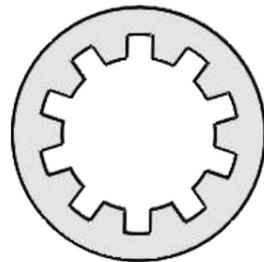

4010367-FW030 (M14) x 4

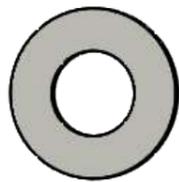



FW021 (M8) x 8

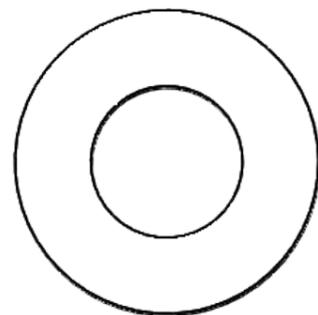

FW031 (M14) x 4

FITTING TIME: 20 Minutes

2.

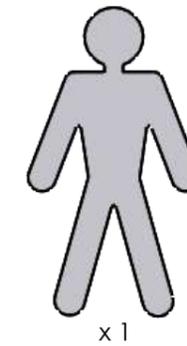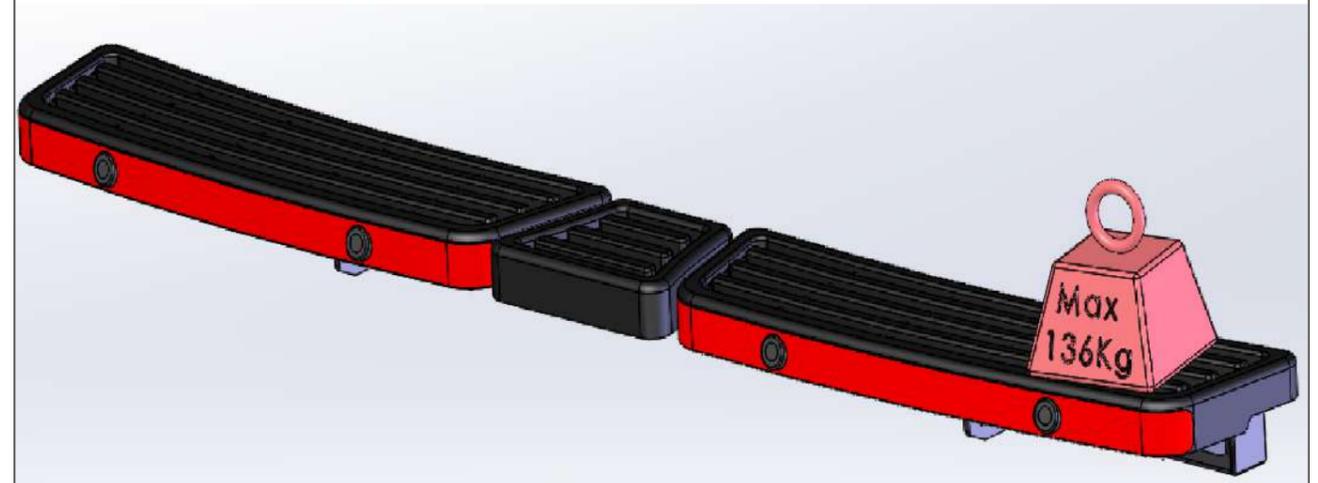

x 1



22mm x 1









13mm x 1





13mm x 1

FITTING INSTRUCTIONS

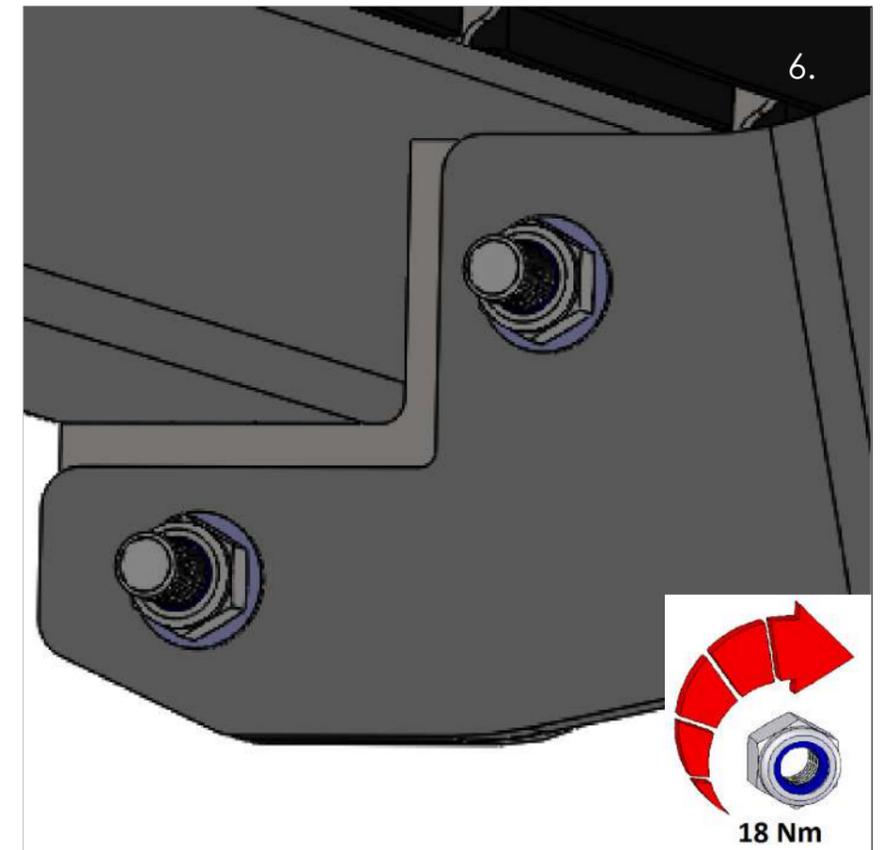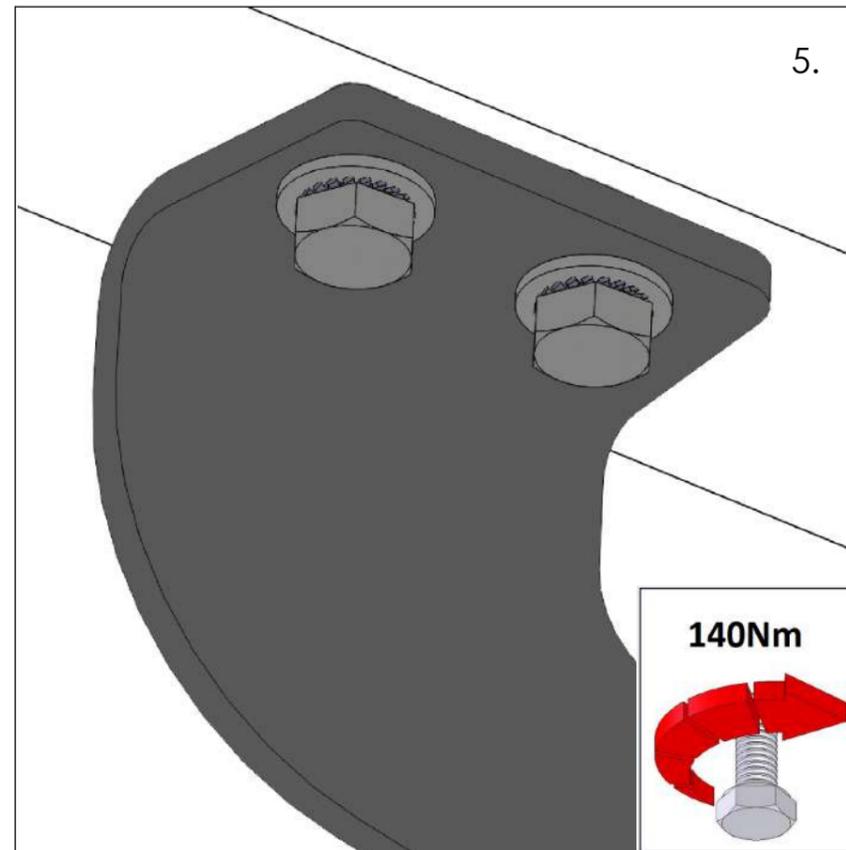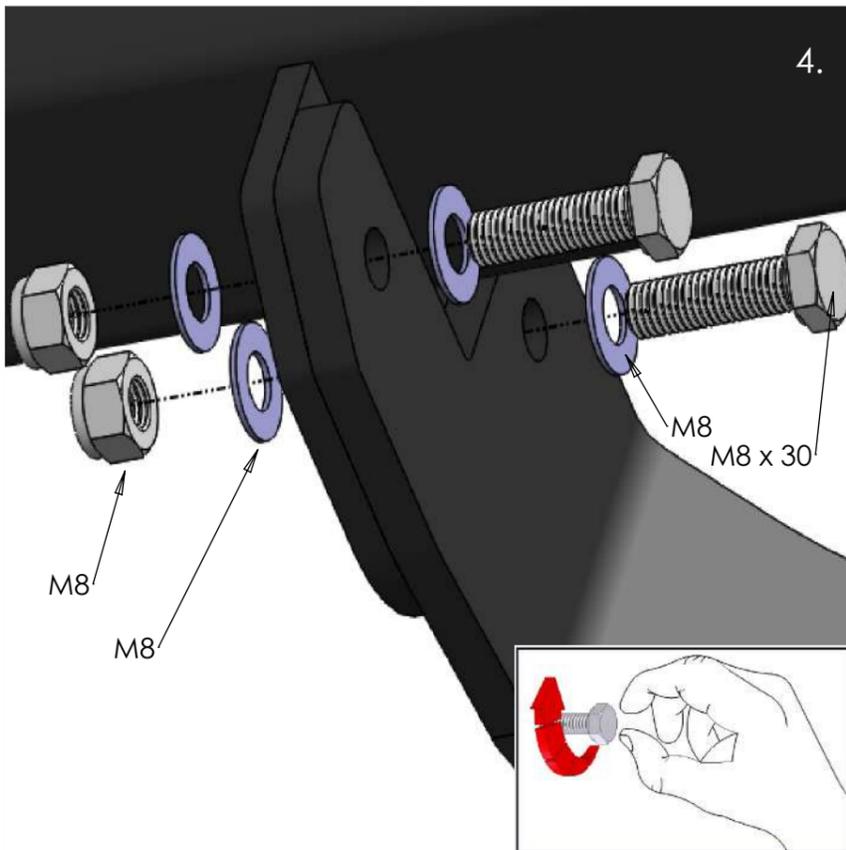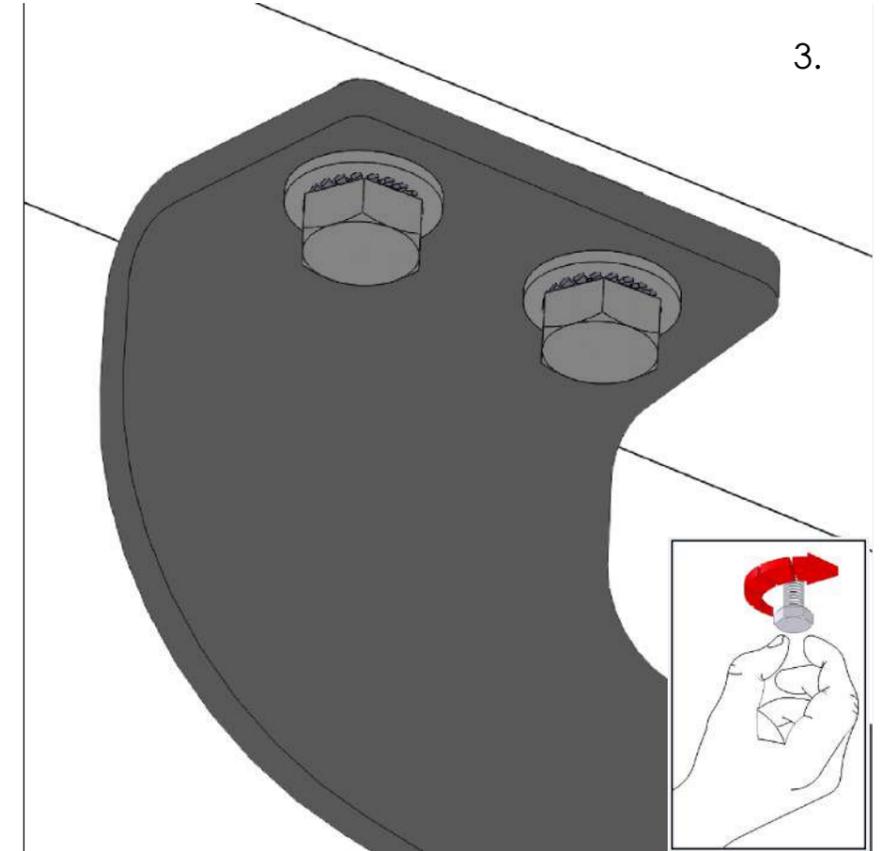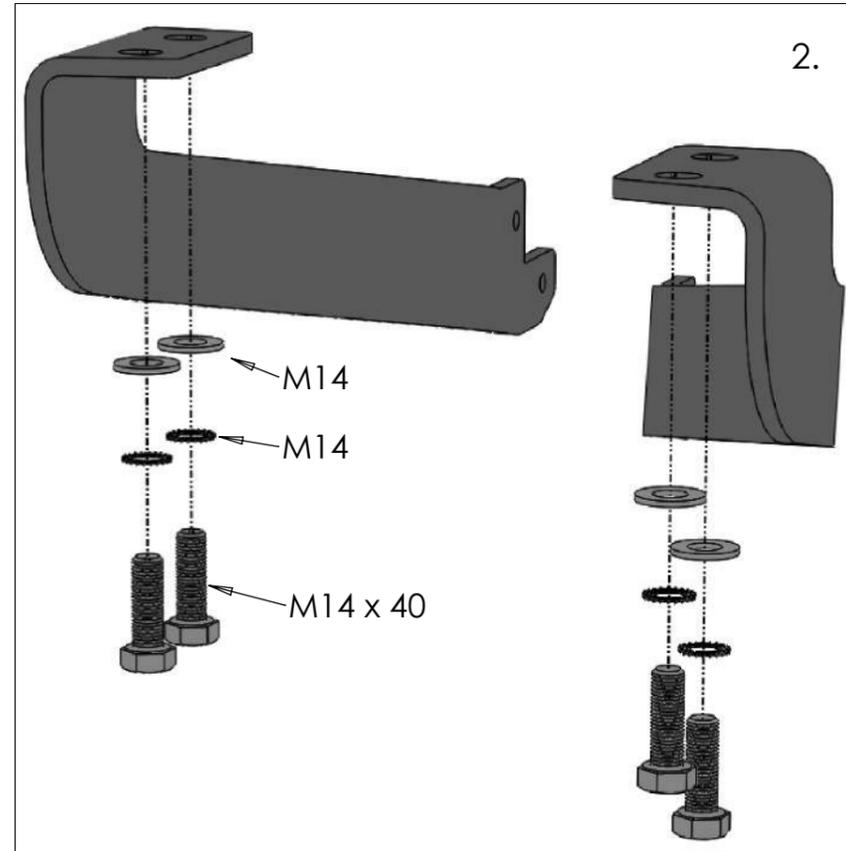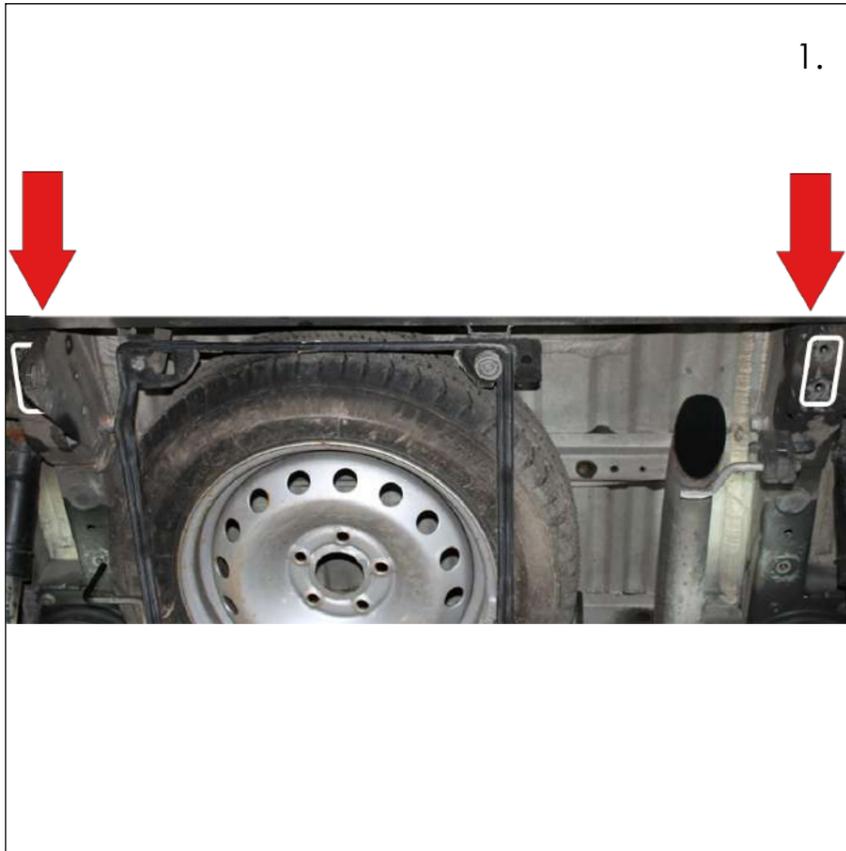

### IMPACT STEP FITTING INSTRUCTIONS

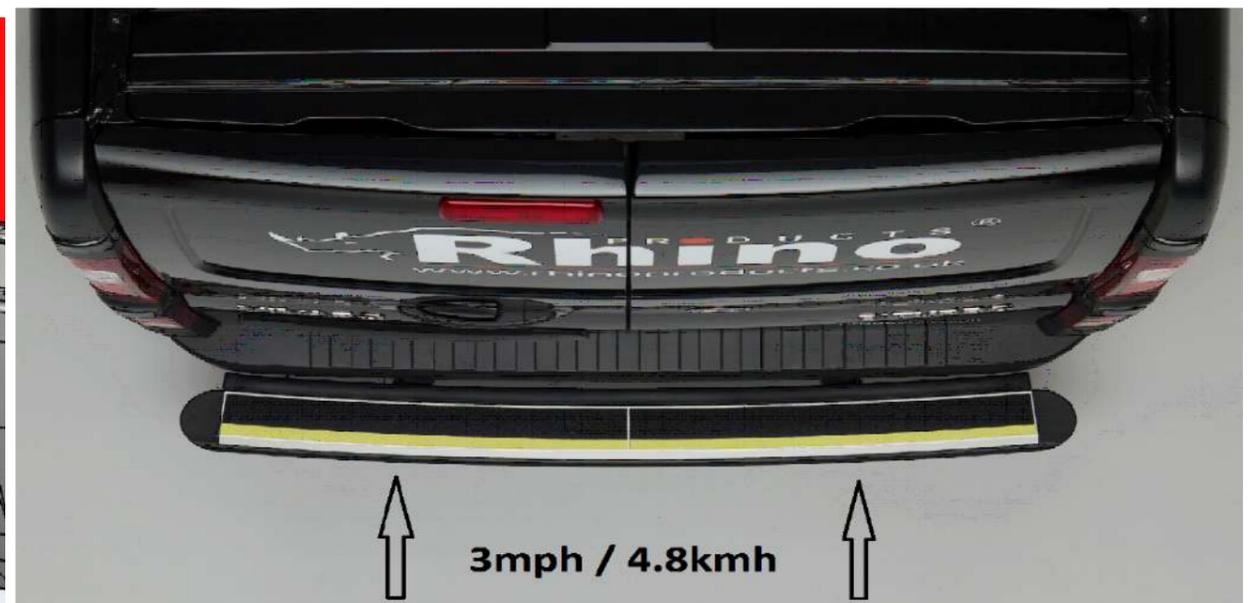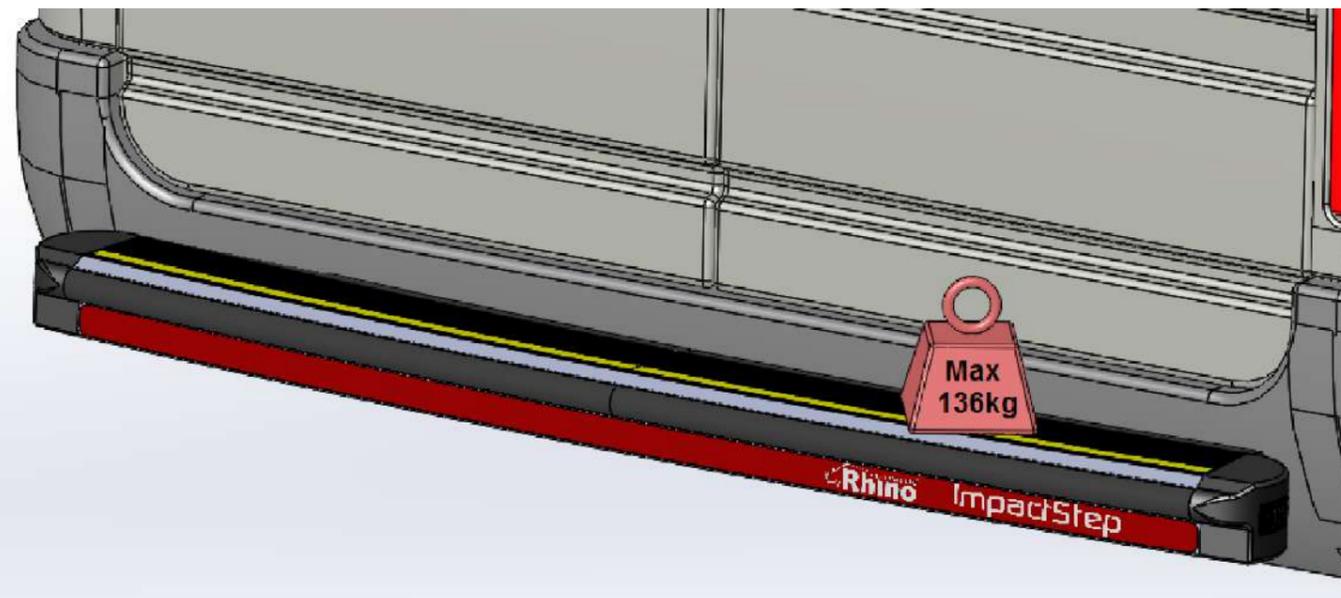

IMPACT STEP FITTING INSTRUCTIONS

1.


FITTING KIT CONTENTS FK883  
(1:1)



FW020 (M8) x 4



FB006 (M8 x 30) x 4

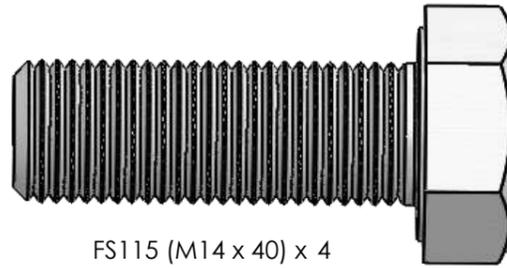


FS115 (M14 x 40) x 4




FN006 (M8) x 4

ACCESSSTEP	✓
IMPACT STEP	✗

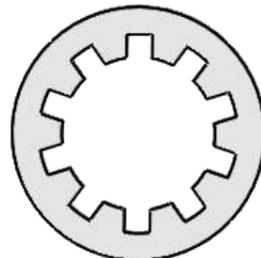


4010367-FW030 (M14) x 4

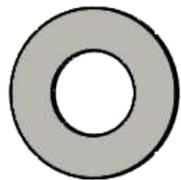

FW021 (M8) x 4


ACCESSSTEP	8
IMPACT STEP	4

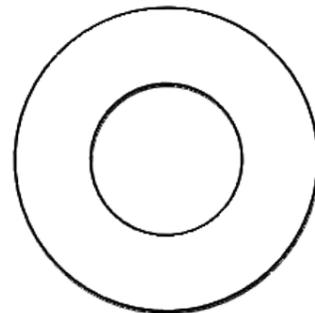

FW031 (M14) x 4

2.

FITTING TIME: 40 Minutes

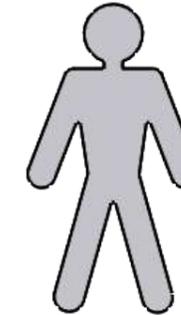

x 1




22mm x 1









13mm x 1



x 1

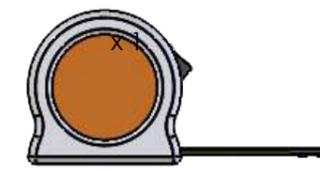

IMPACT STEP FITTING INSTRUCTIONS

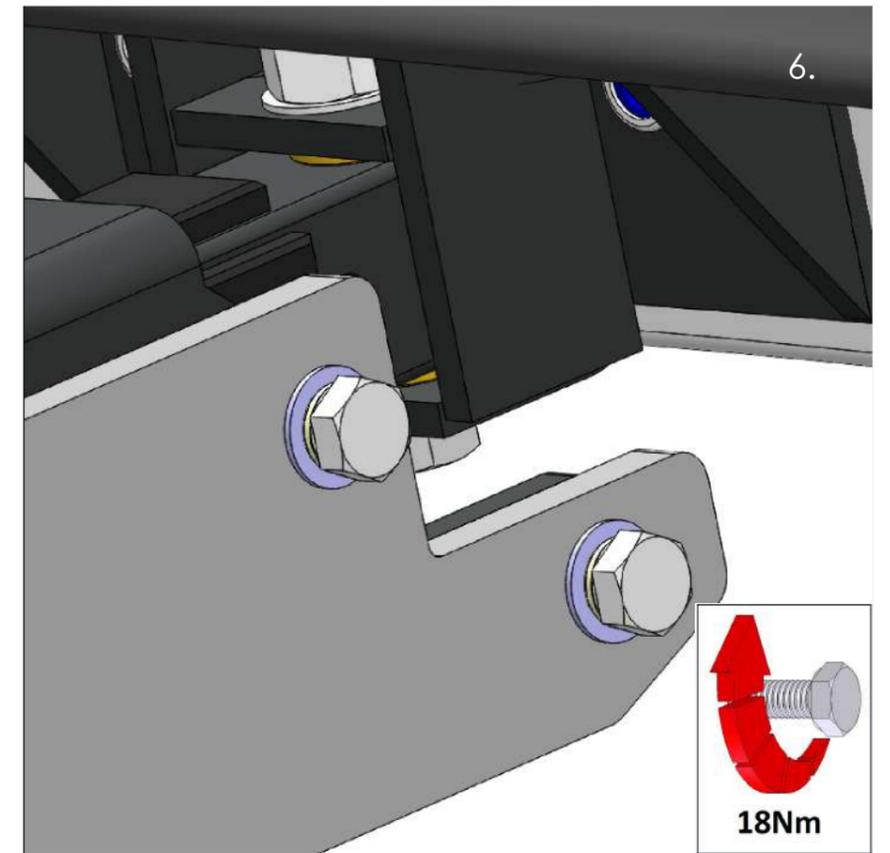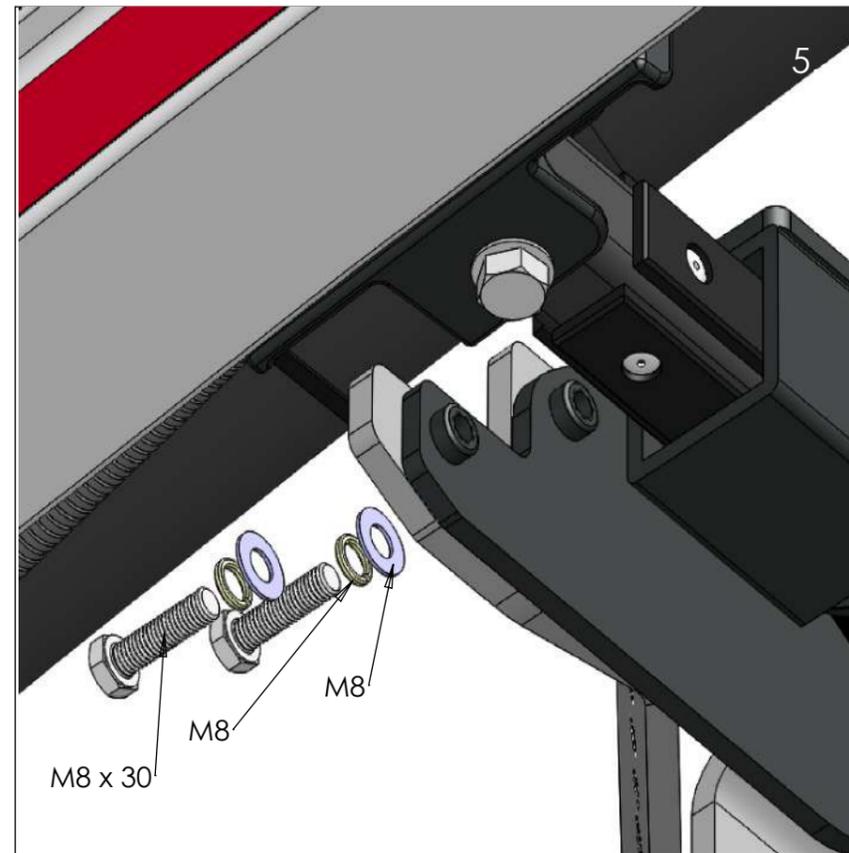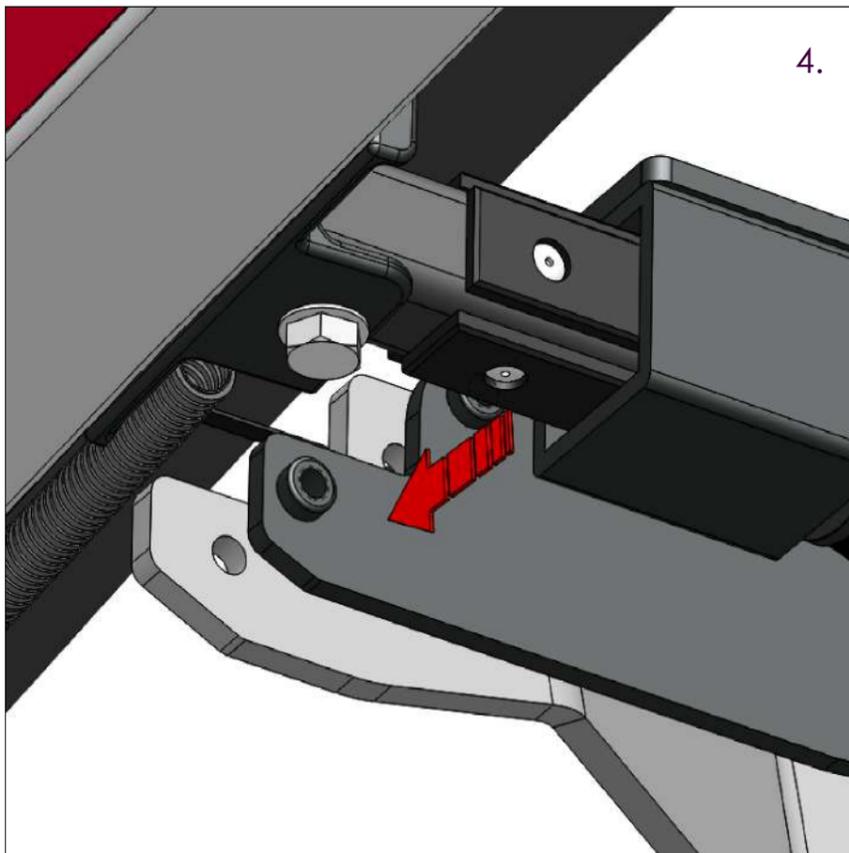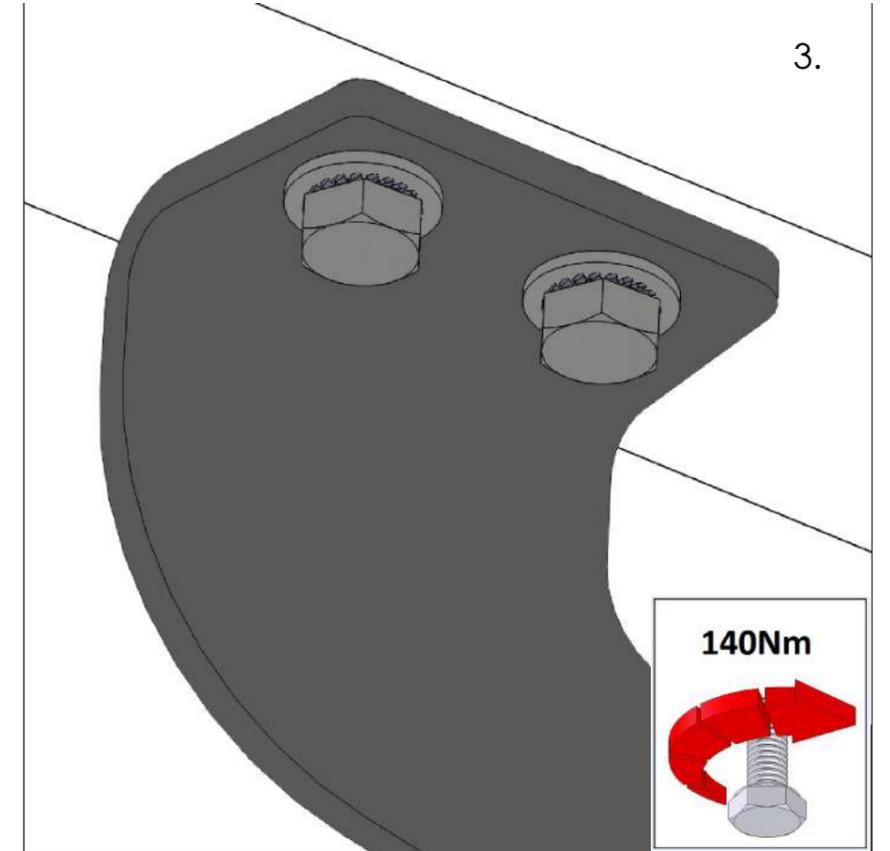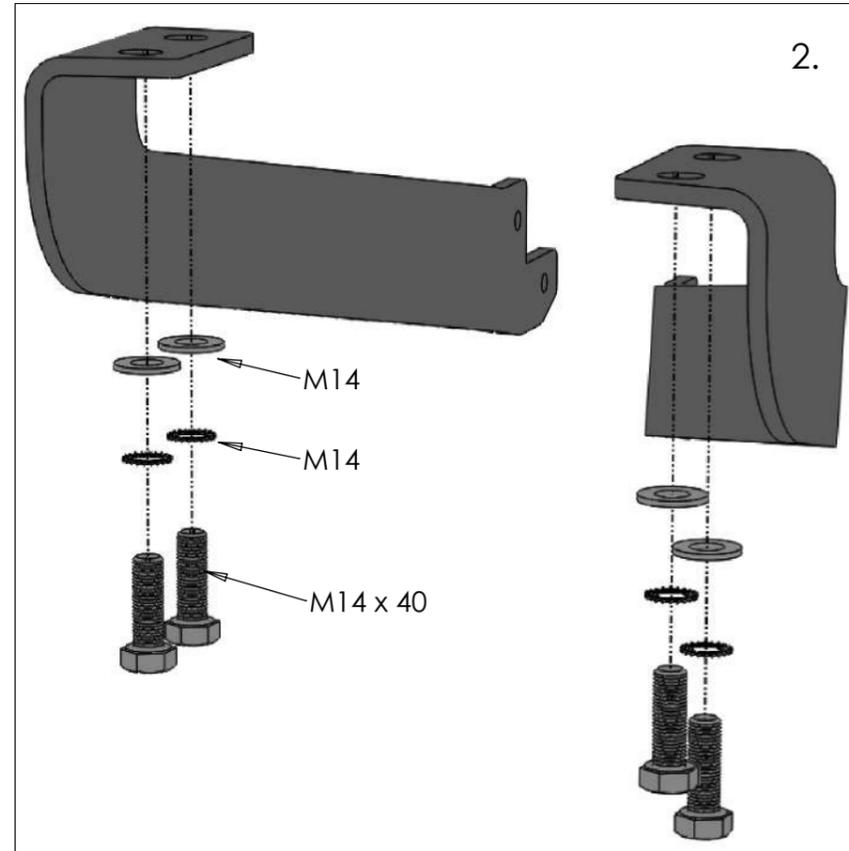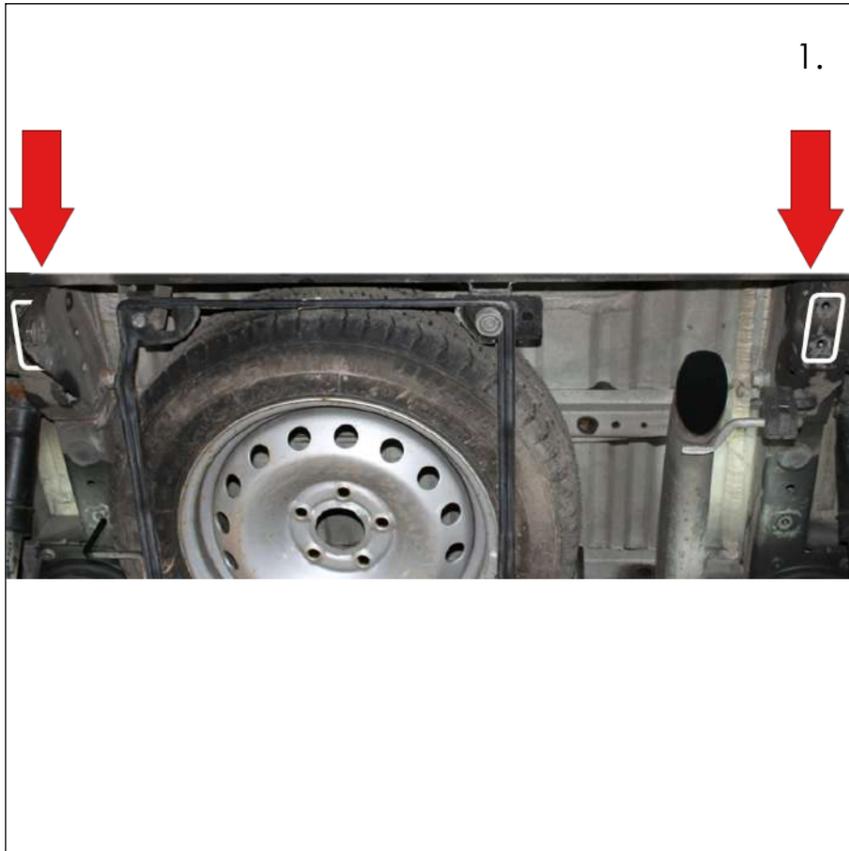

IMPACT STEP FITTING INSTRUCTIONS

