

# FITTING INSTRUCTIONS



### FITTING INSTRUCTIONS


#### FITTING KIT CONTENTS FK885 (1:1)

1.




FW020 x 4

ACCESSSTEP	✗
IMPACT STEP	✓

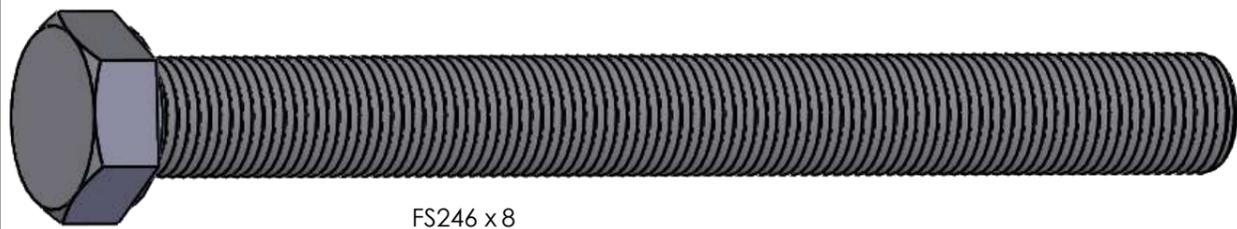

FS246 x 8

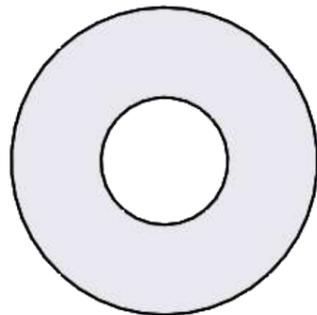


FW026 x 16



FN034 x 8



FB006 x 4

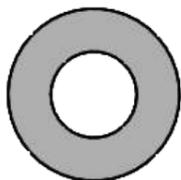

FW021 x 8



FN006 x 4

#### FITTING TIME: 20 Minutes

2.



x 1



13mm x 1



19mm x 1









13mm x 1









19mm x 1




FITTING INSTRUCTIONS

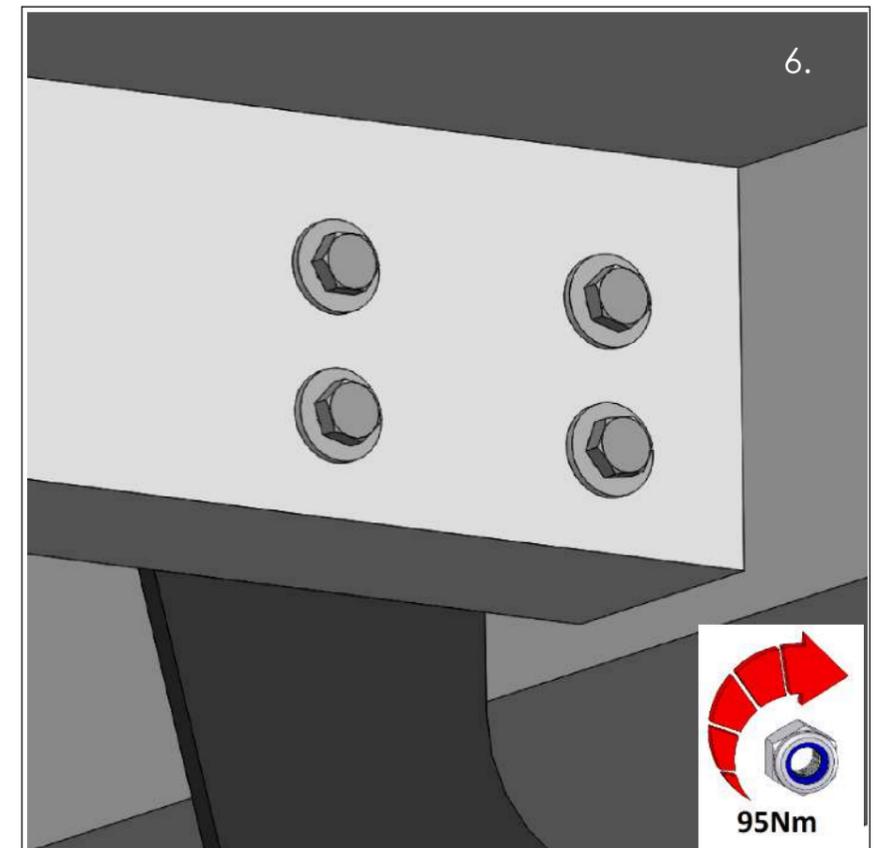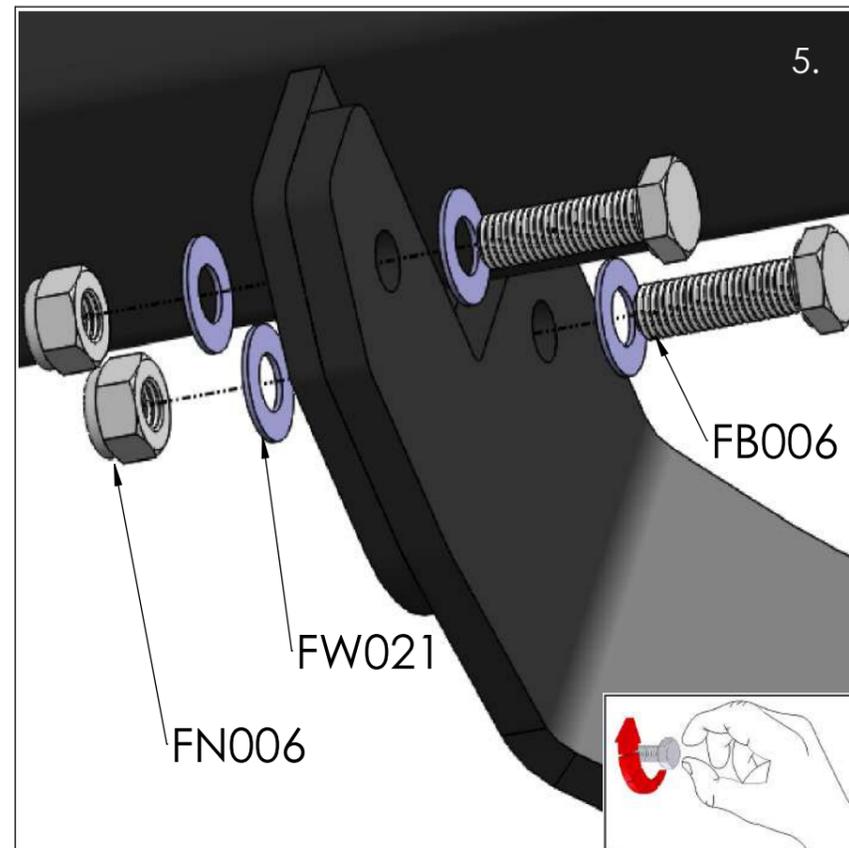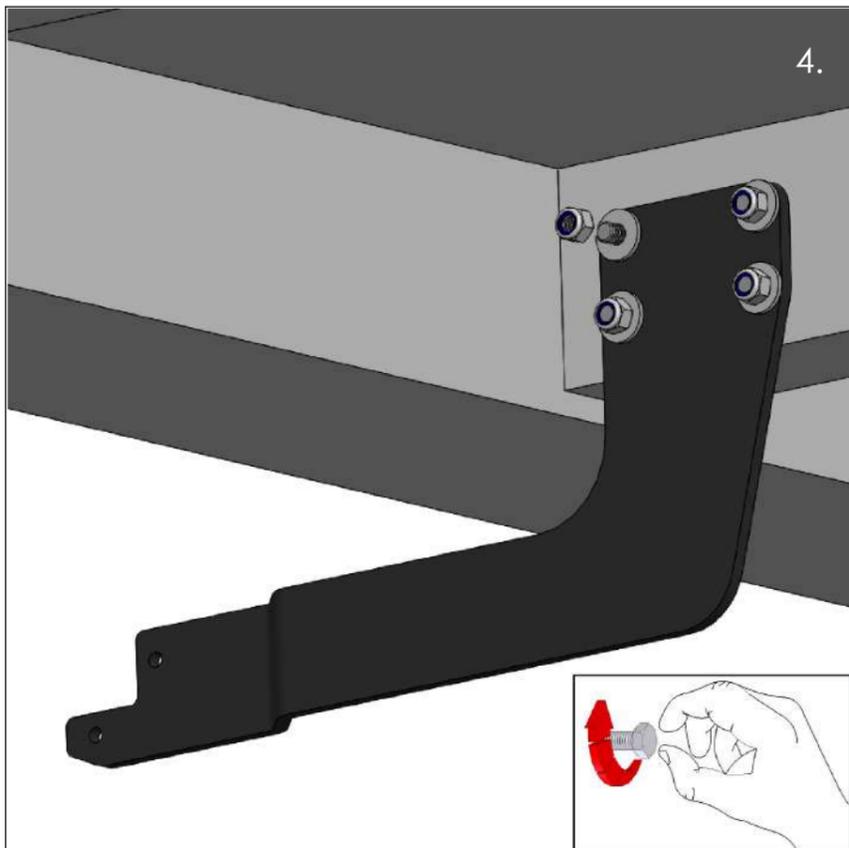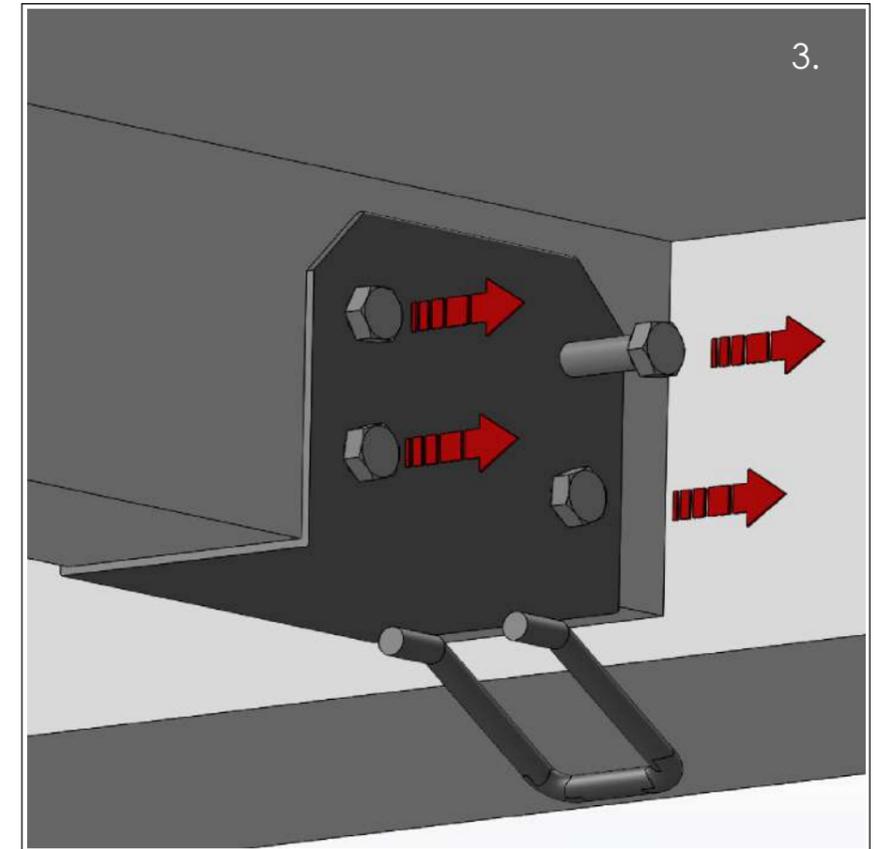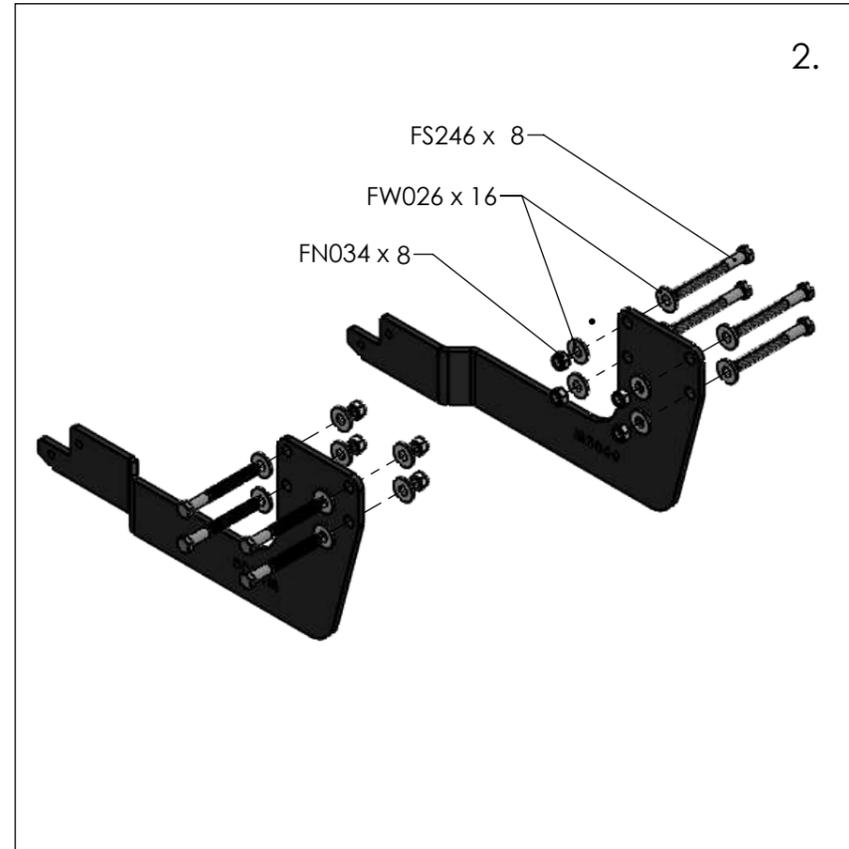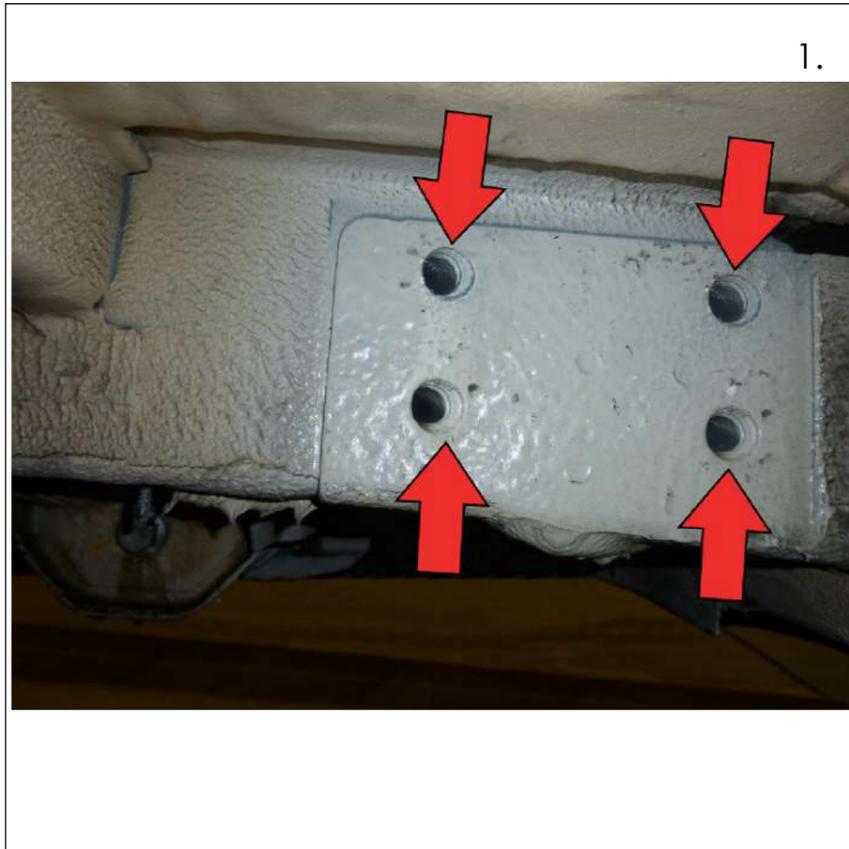

FITTING INSTRUCTIONS




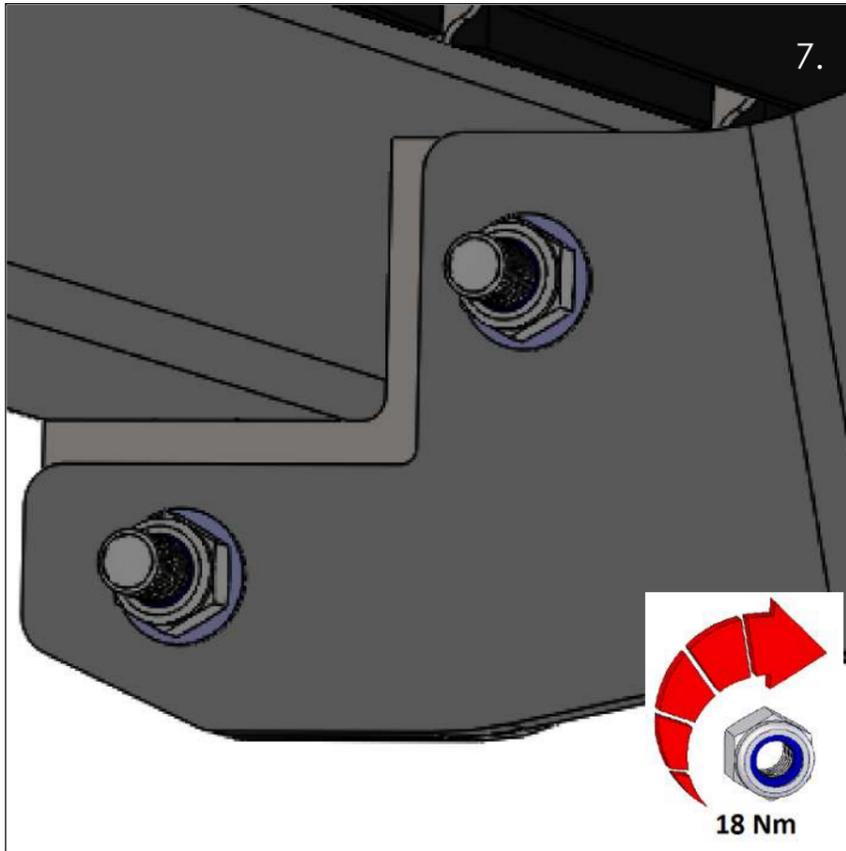


## IMPACT STEP FITTING INSTRUCTIONS

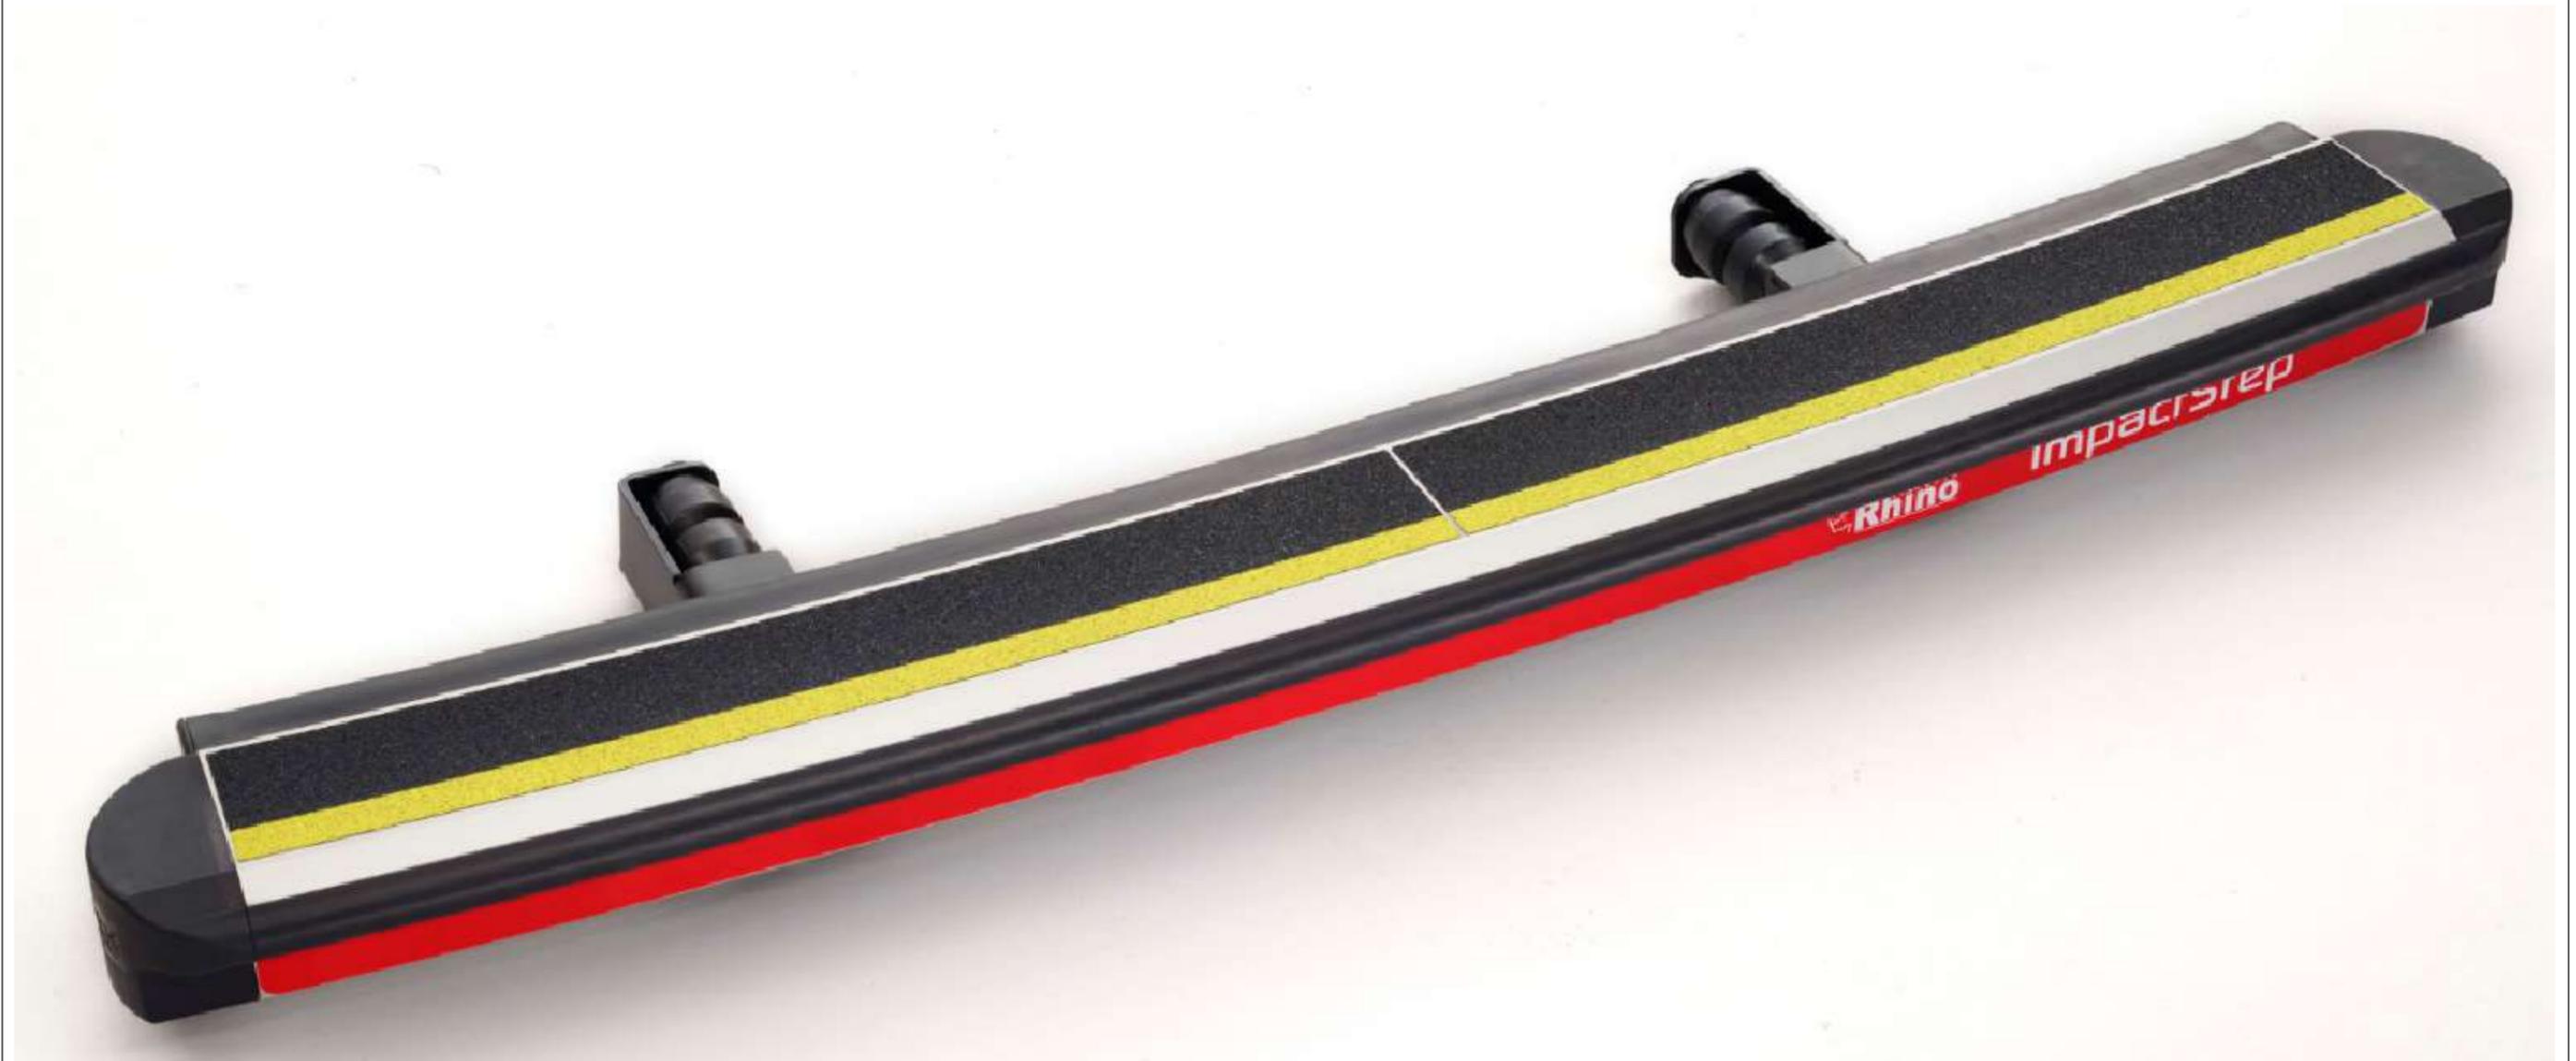

### IMPACT STEP FITTING INSTRUCTIONS

1.

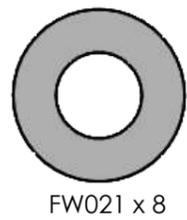
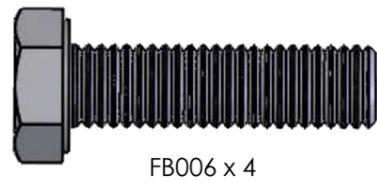
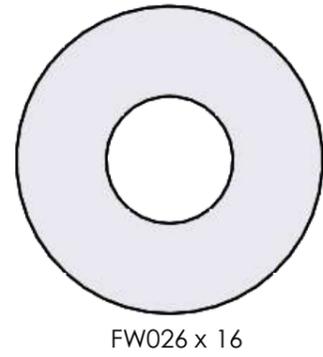
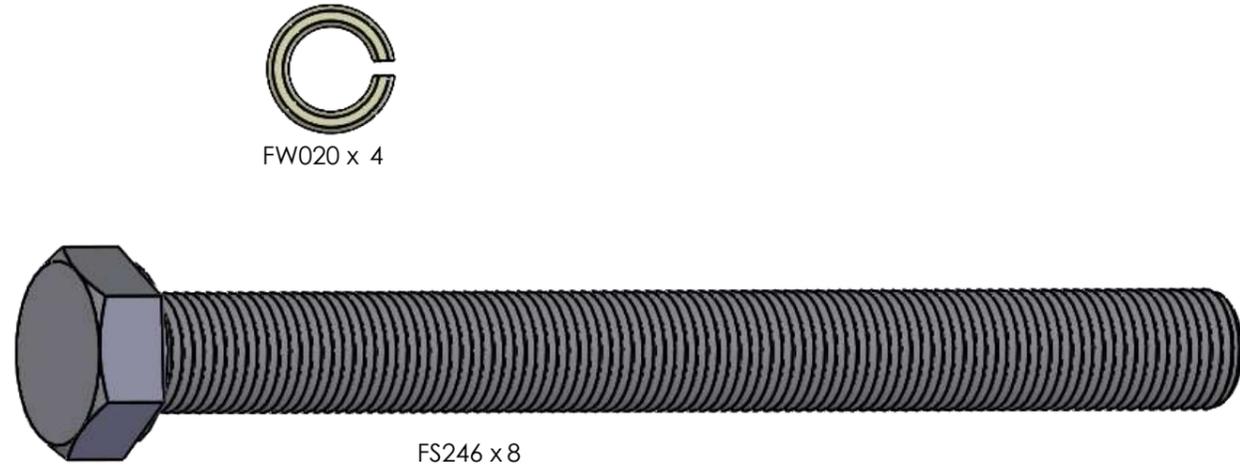


ACCESSSTEP	8
IMPACT STEP	4







ACCESSSTEP	✓
IMPACT STEP	✗

2.

FITTING TIME: 40 Minutes

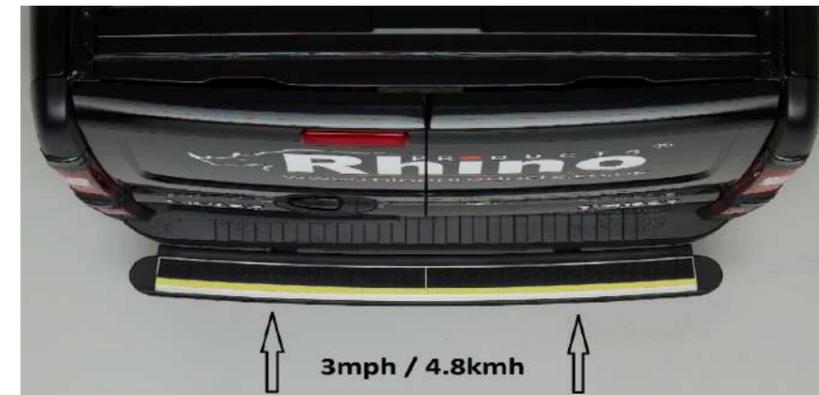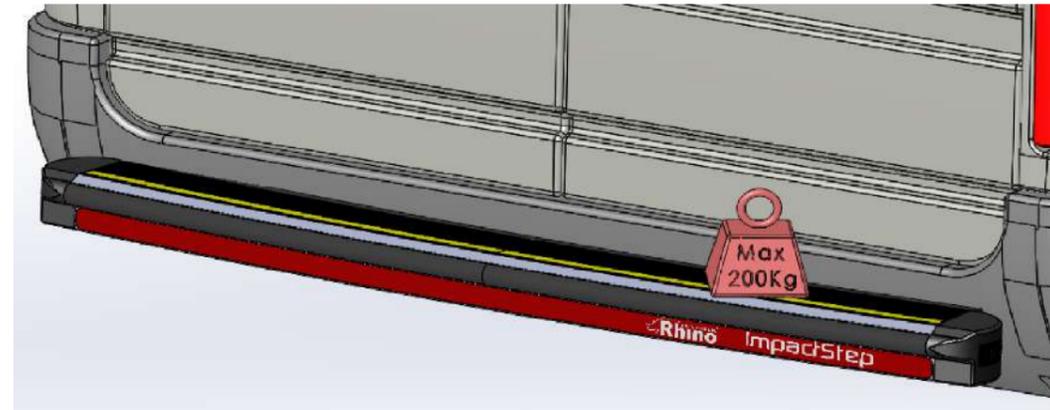

### IMPACT STEP FITTING INSTRUCTIONS

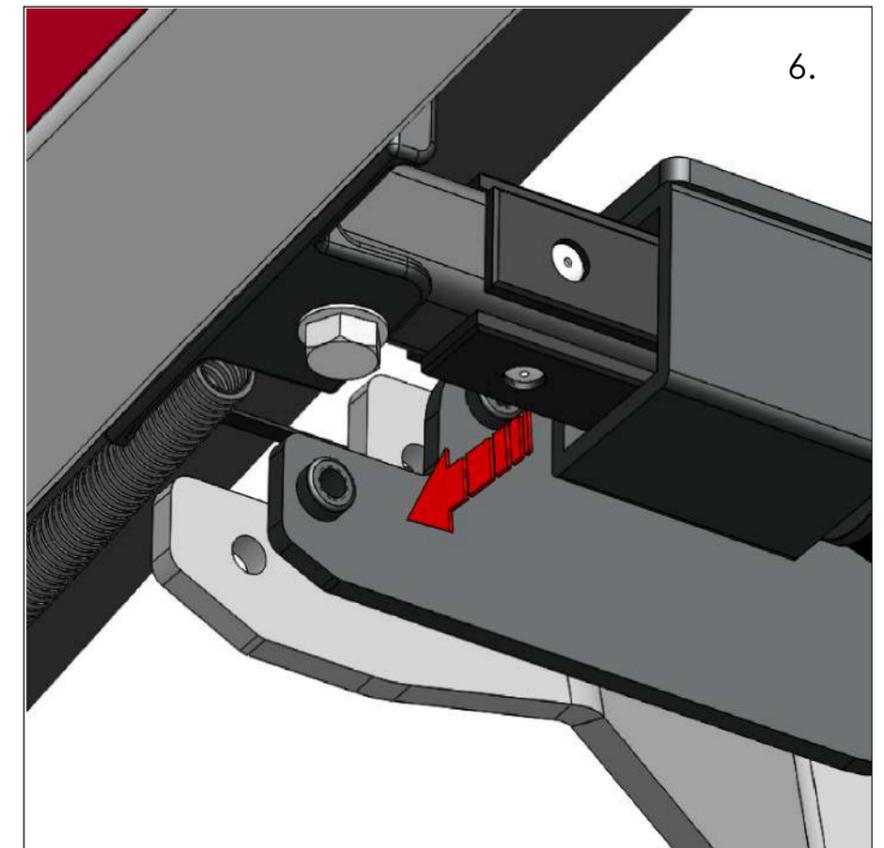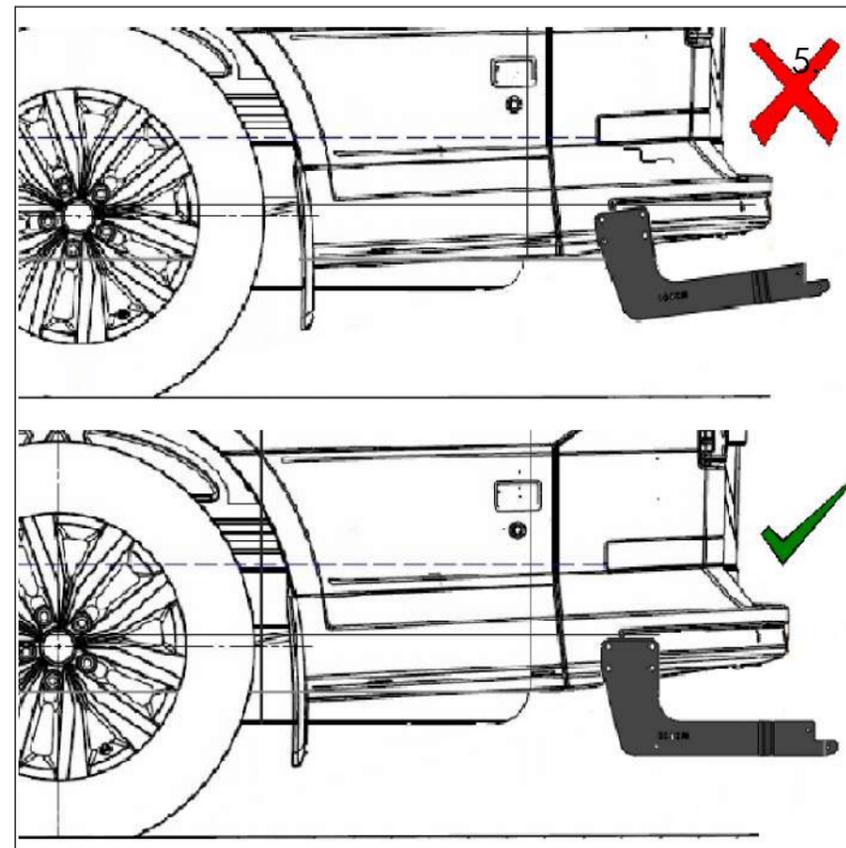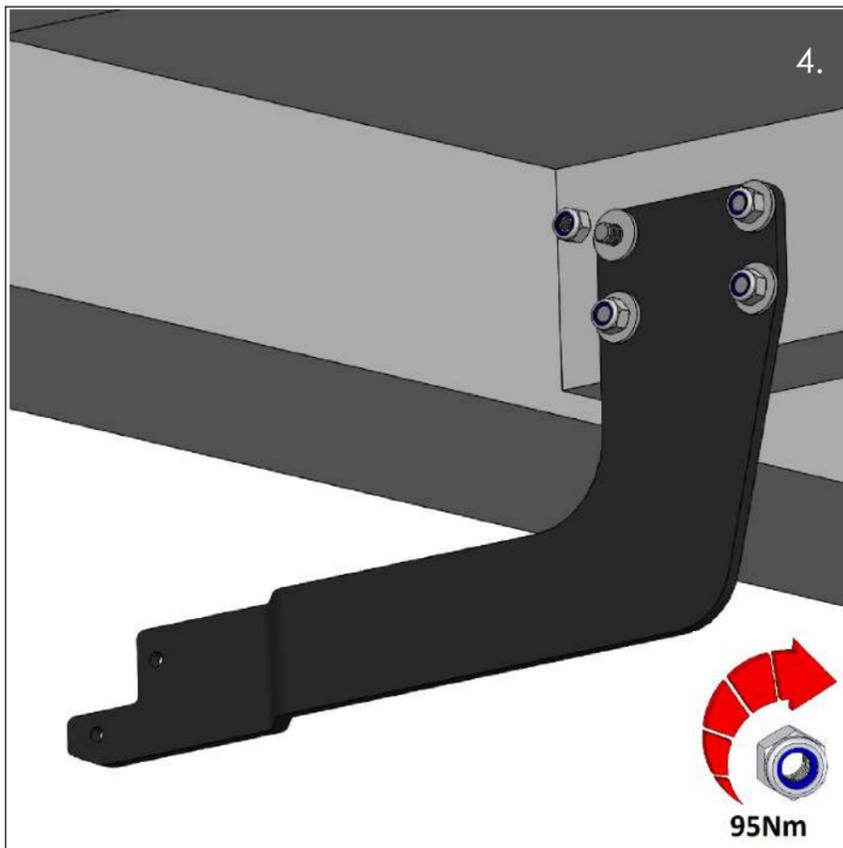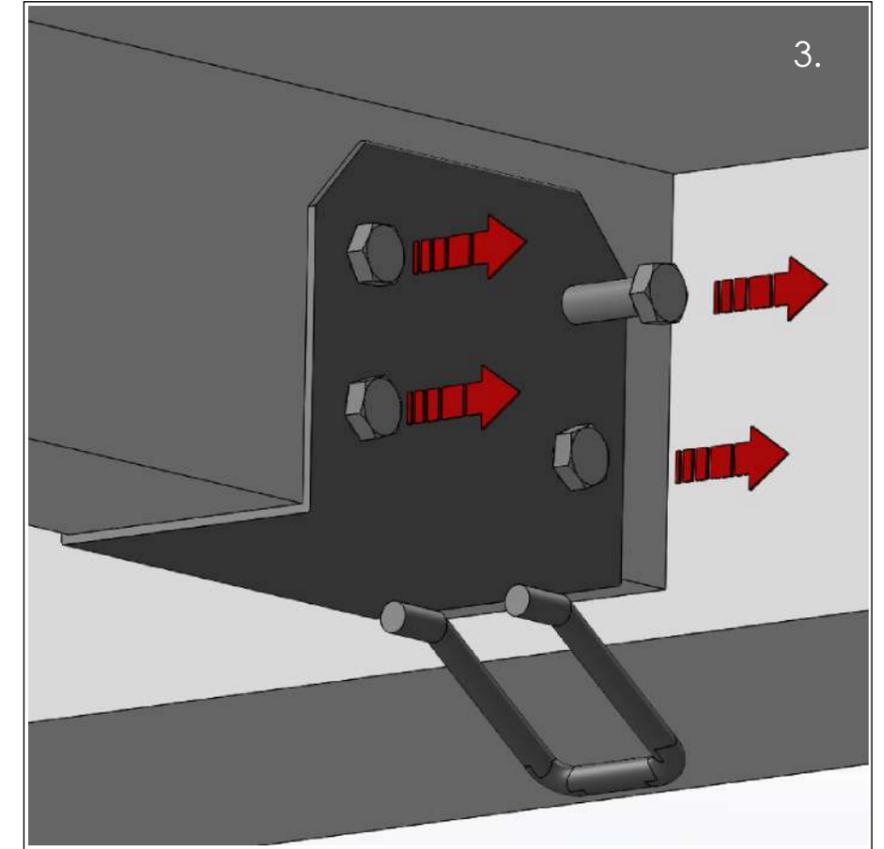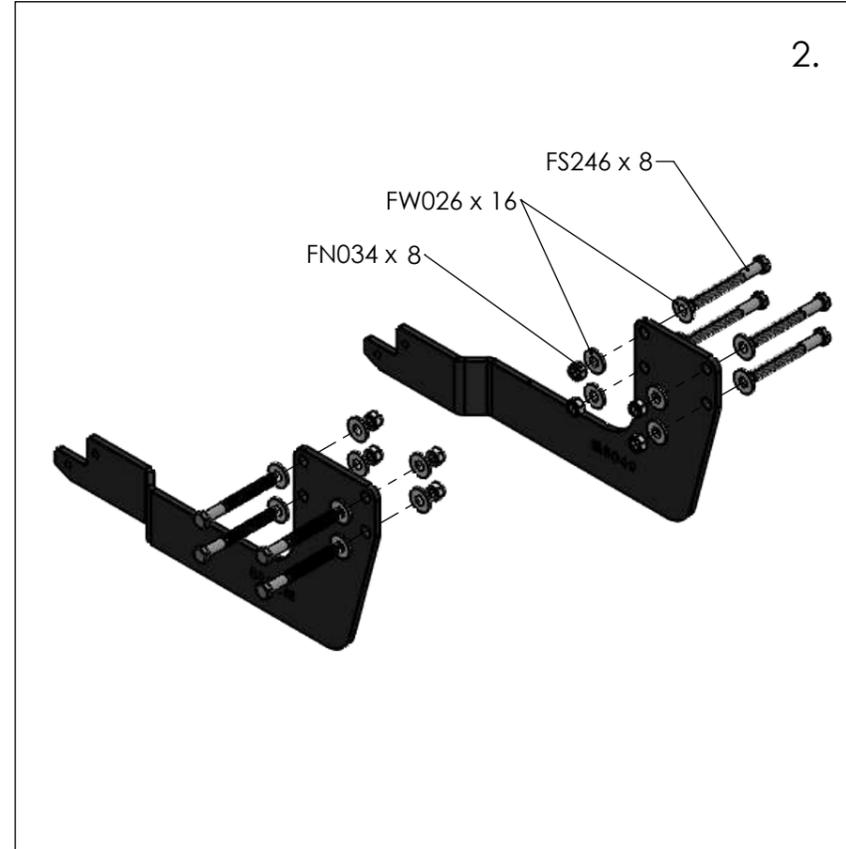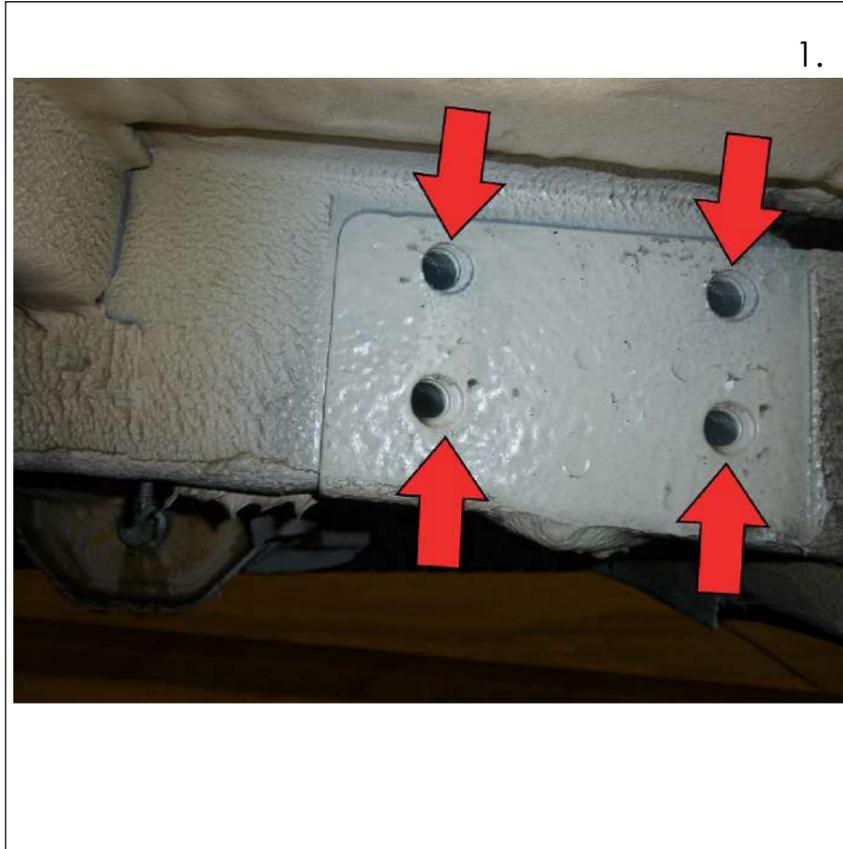

### IMPACT STEP FITTING INSTRUCTIONS

