


FITTING INSTRUCTIONS

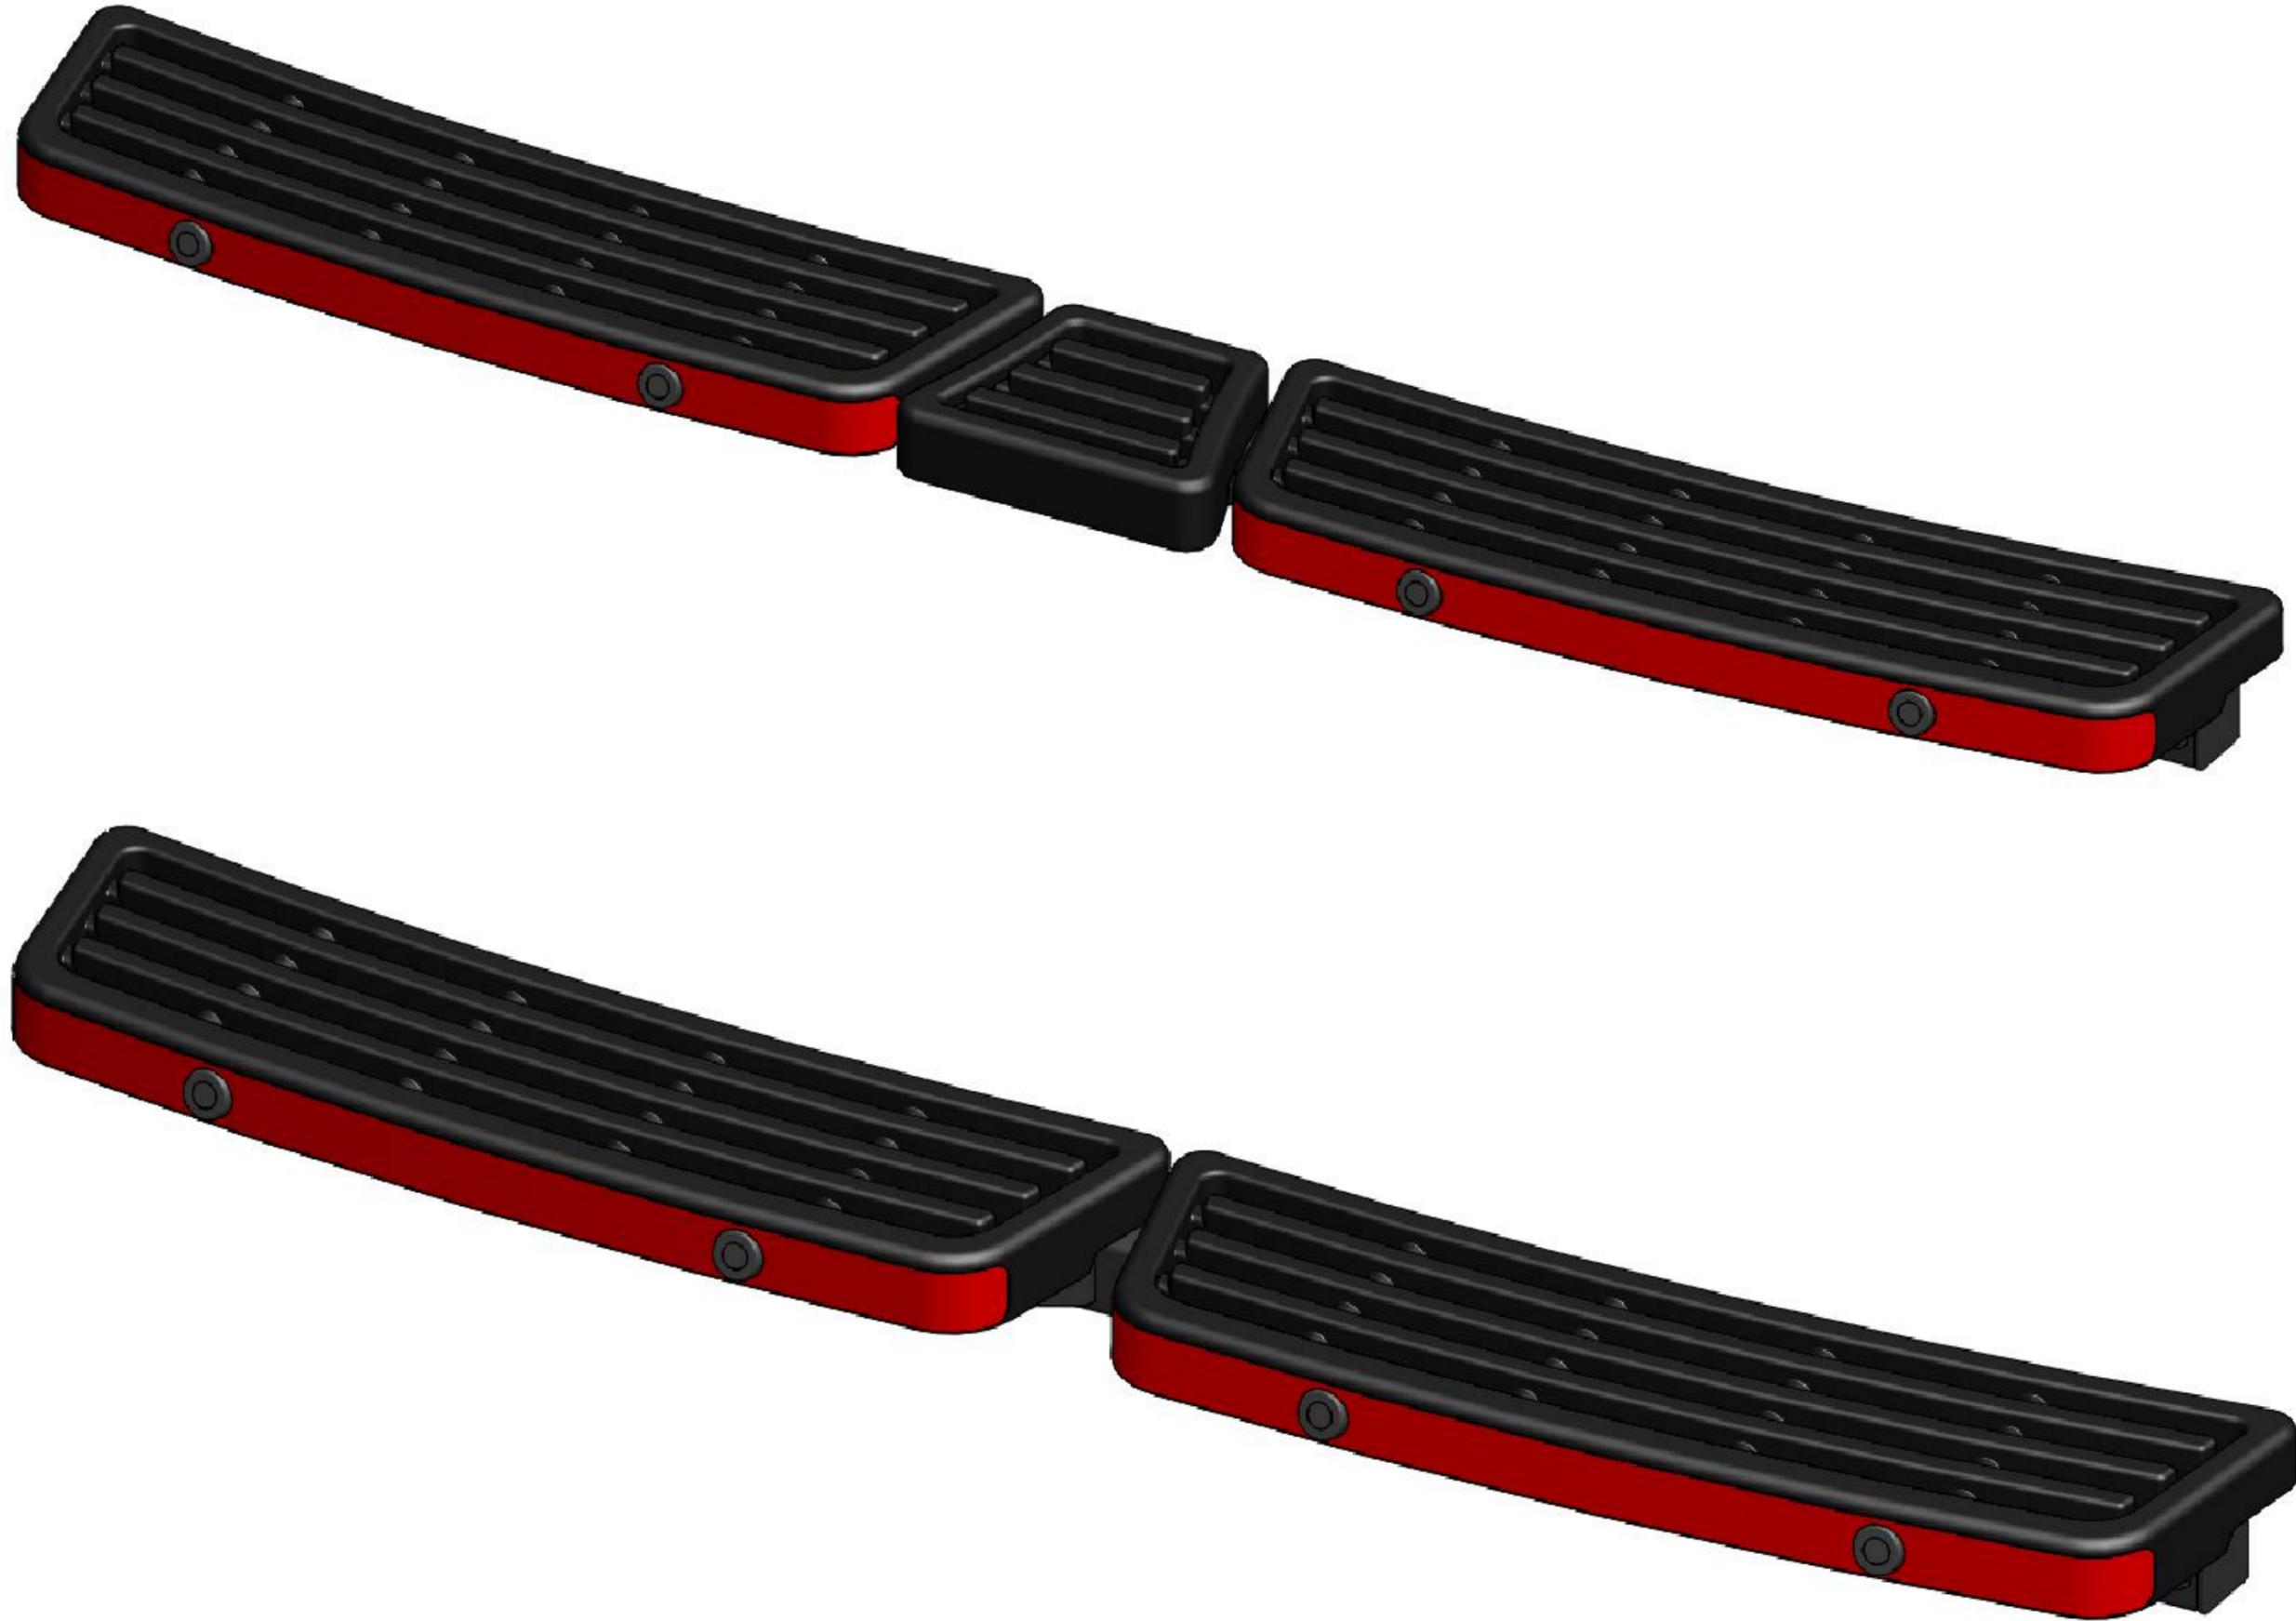

FITTING INSTRUCTIONS

FITTING KIT CONTENTS FK1282

(1:1)



FW020 (M8) x4


ACCESSSTEP	✗
IMPACT STEP	✓



FB006 (M8) x4



FN006 (M8) x4

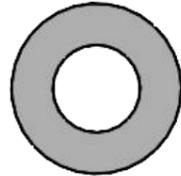

FW021 (M8) x8



FC014 x4



PS585 x2

FITTING TIME: 30 Minutes




x 2



13mm x 1




15mm x 1




13mm x 1









19mm x 1

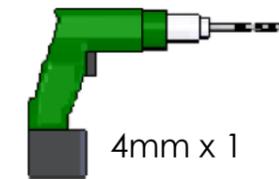







4mm x 1

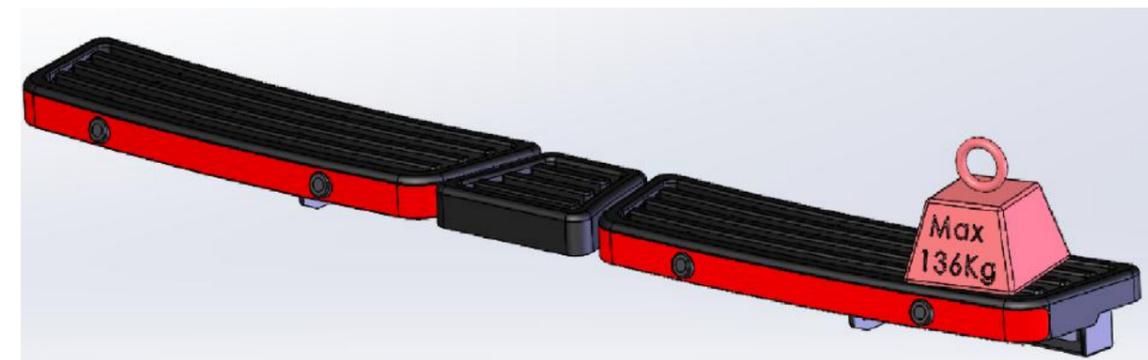




FITTING INSTRUCTIONS

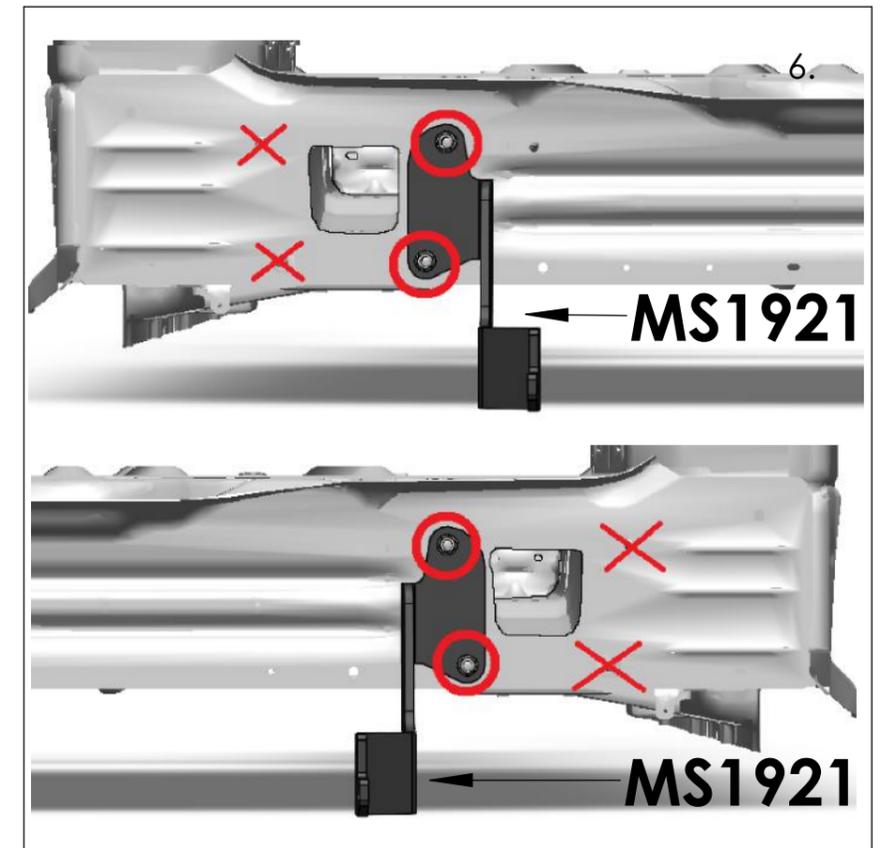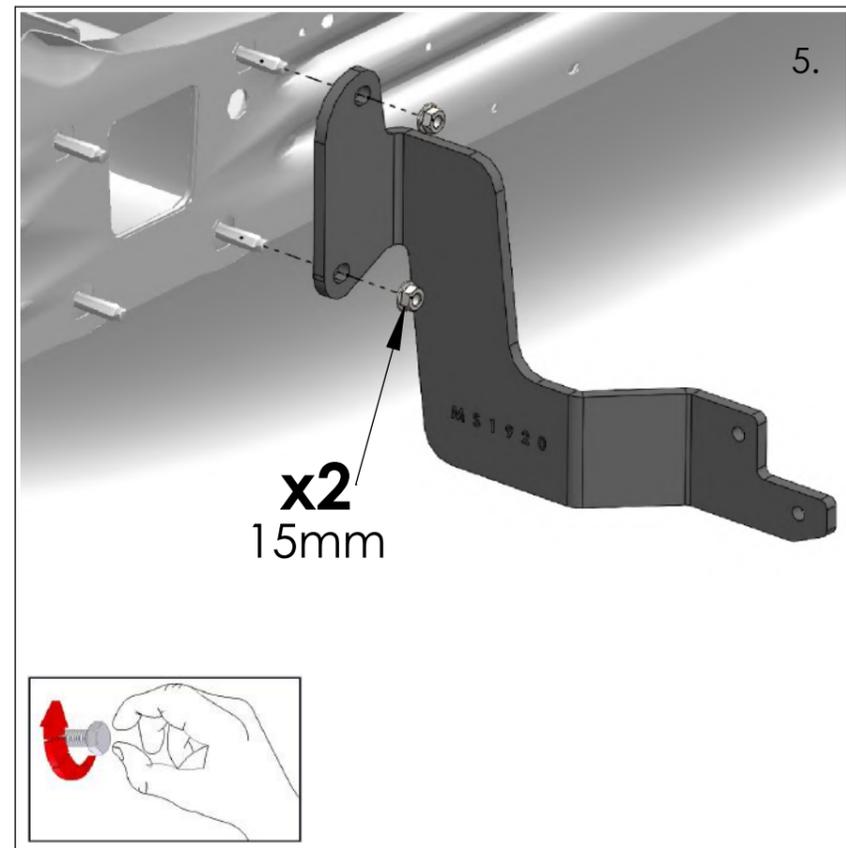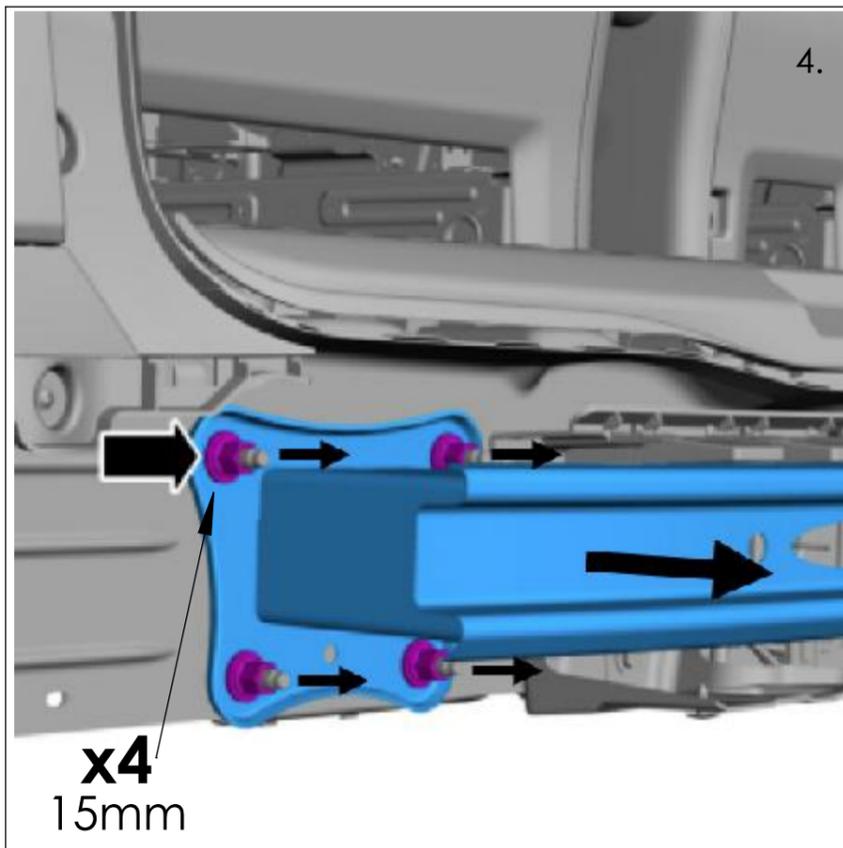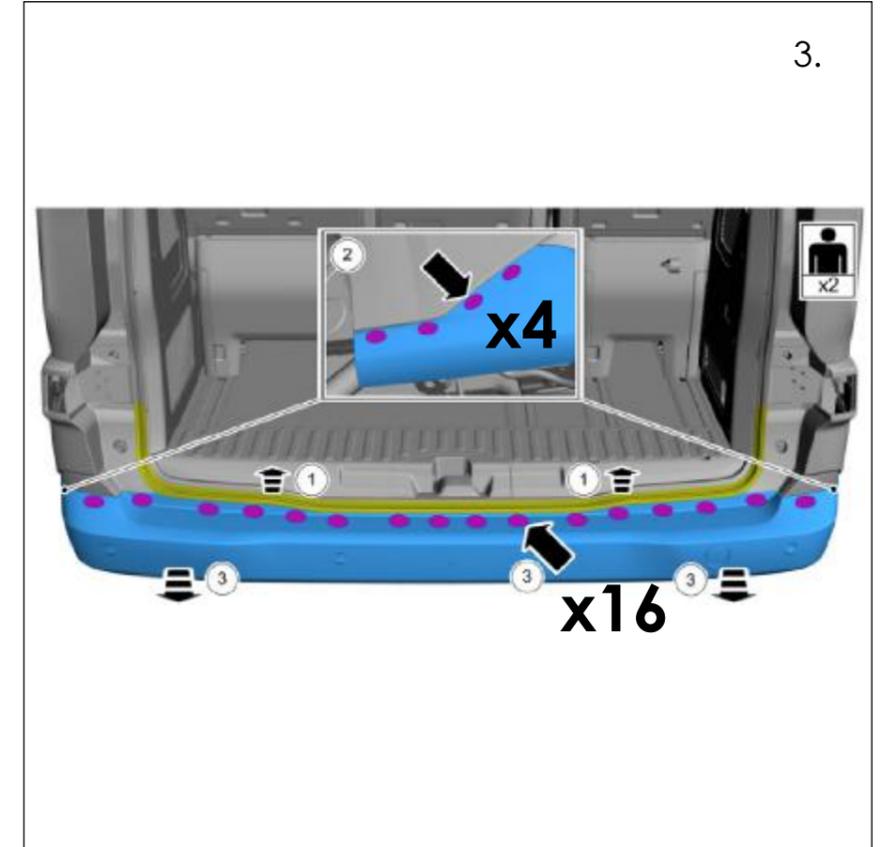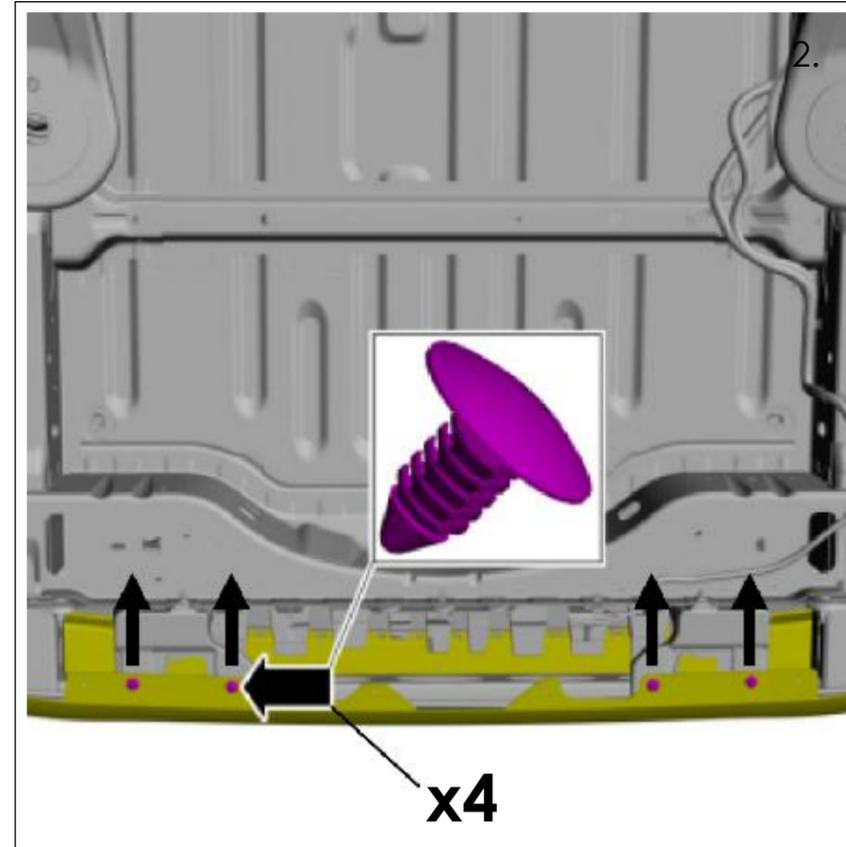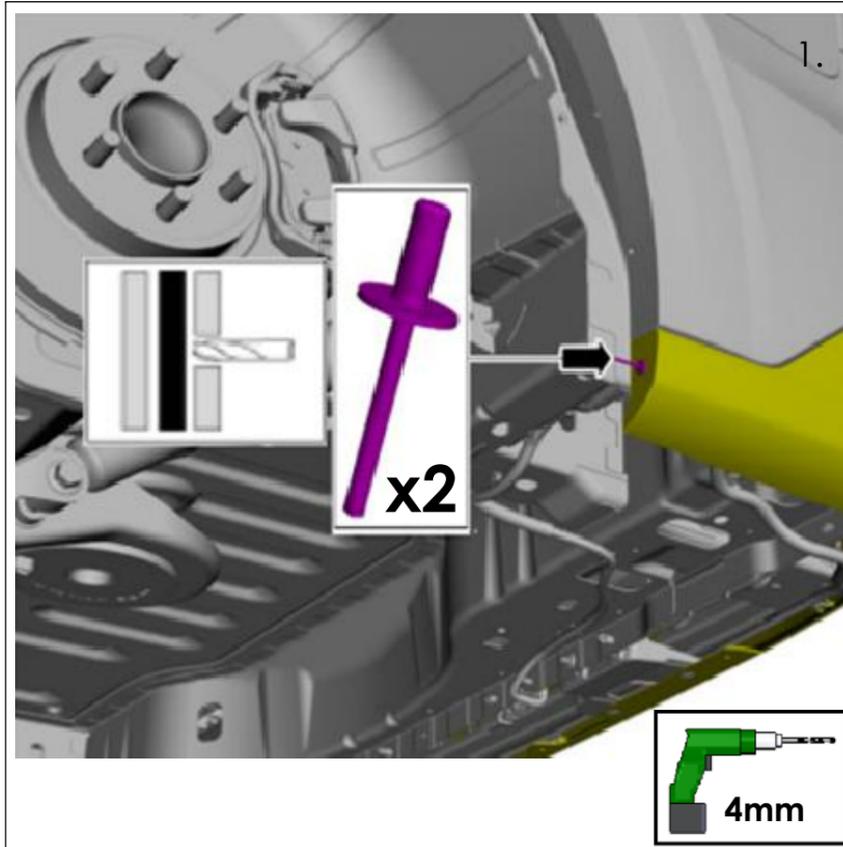

FITTING INSTRUCTIONS

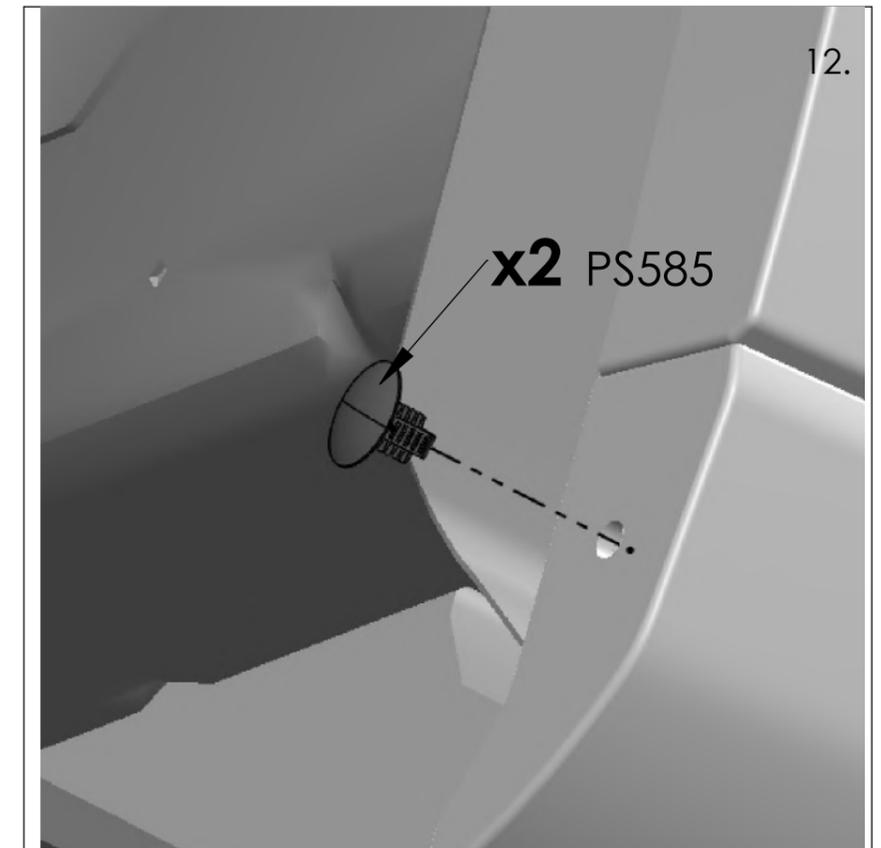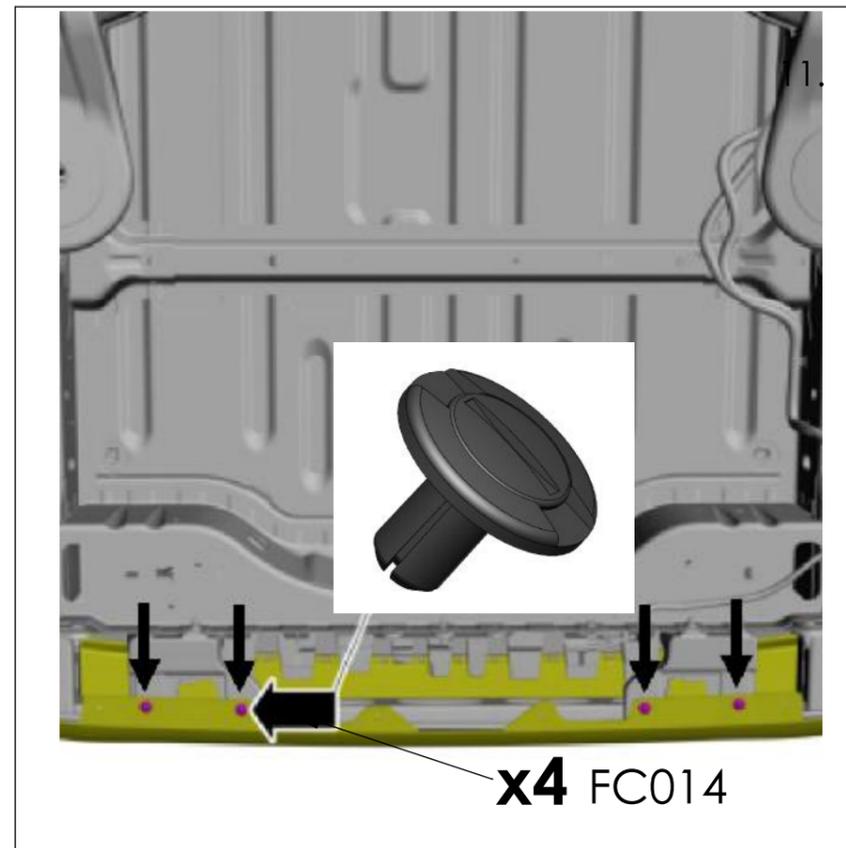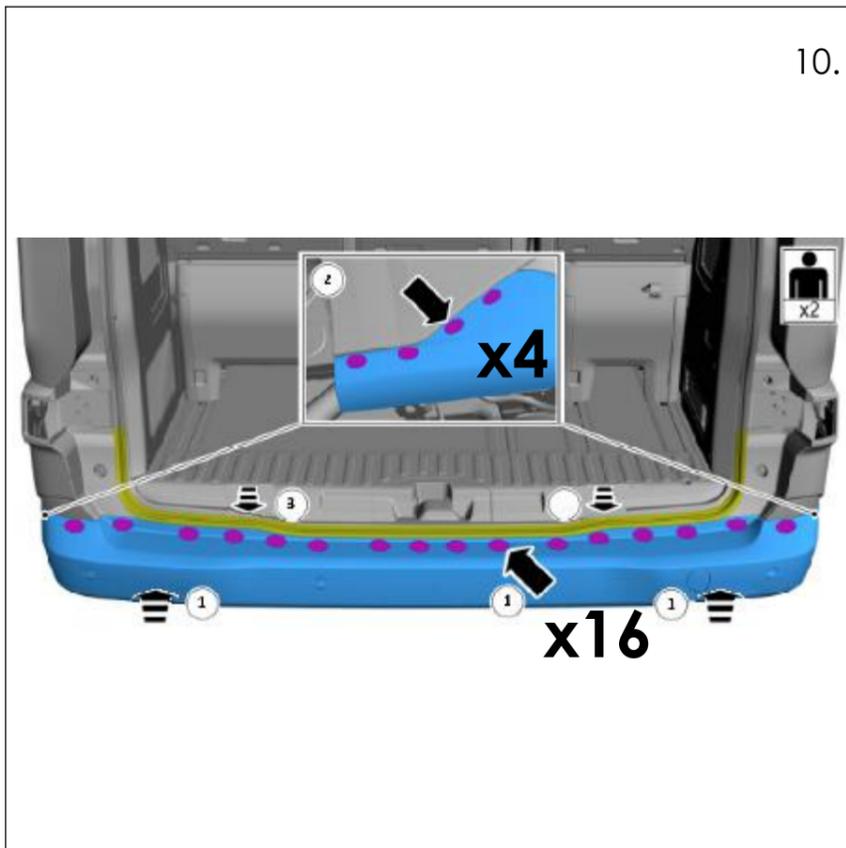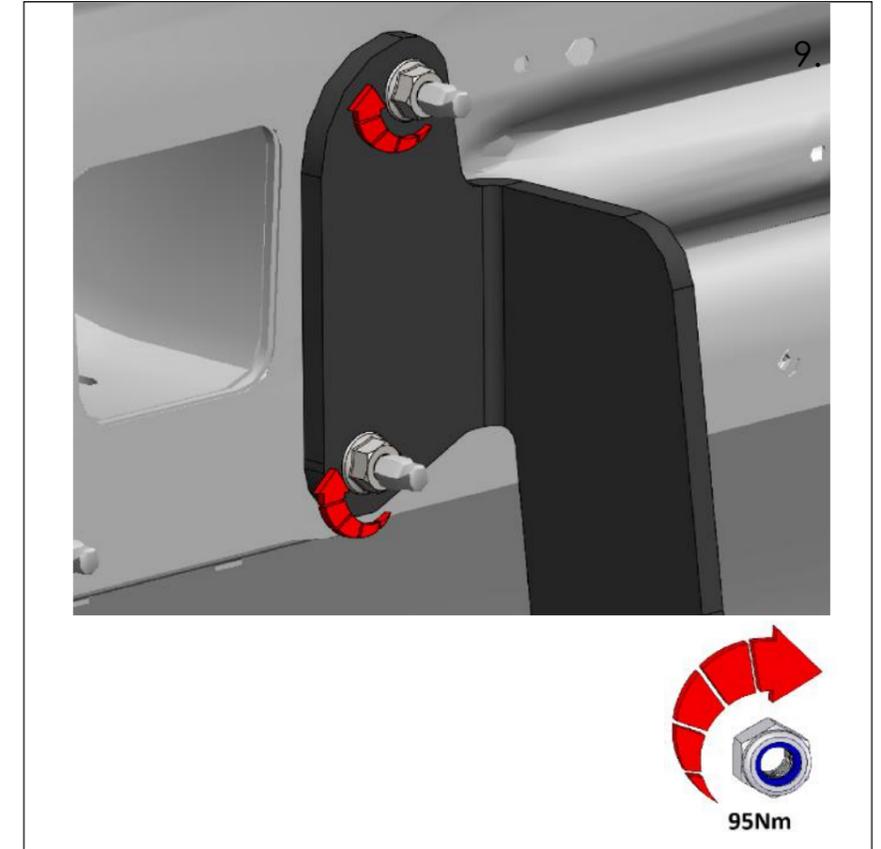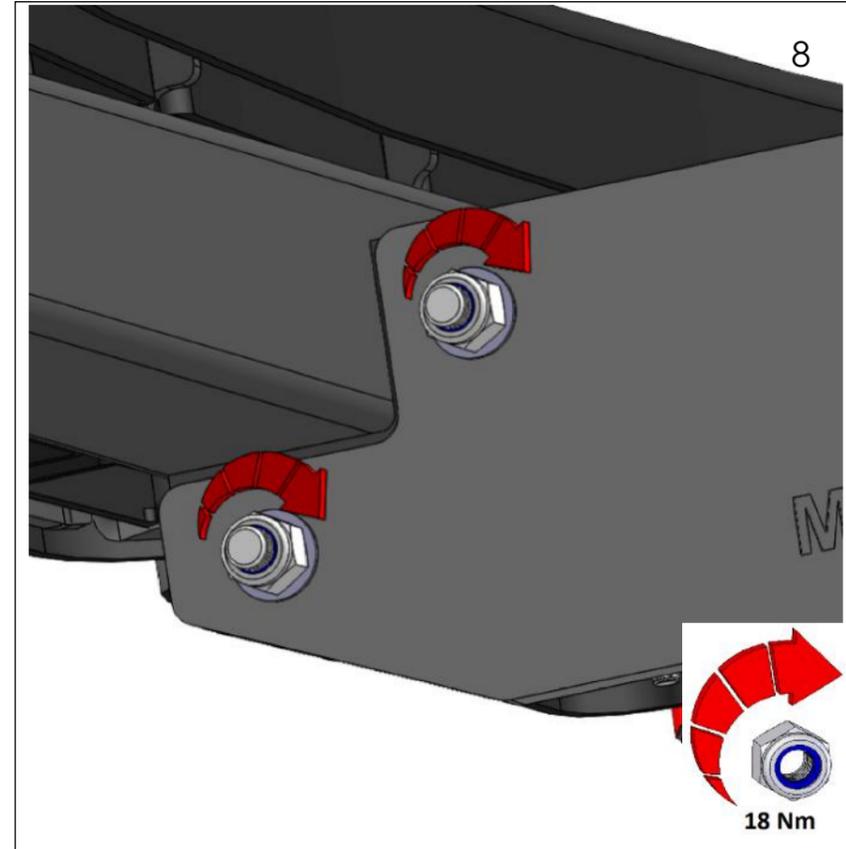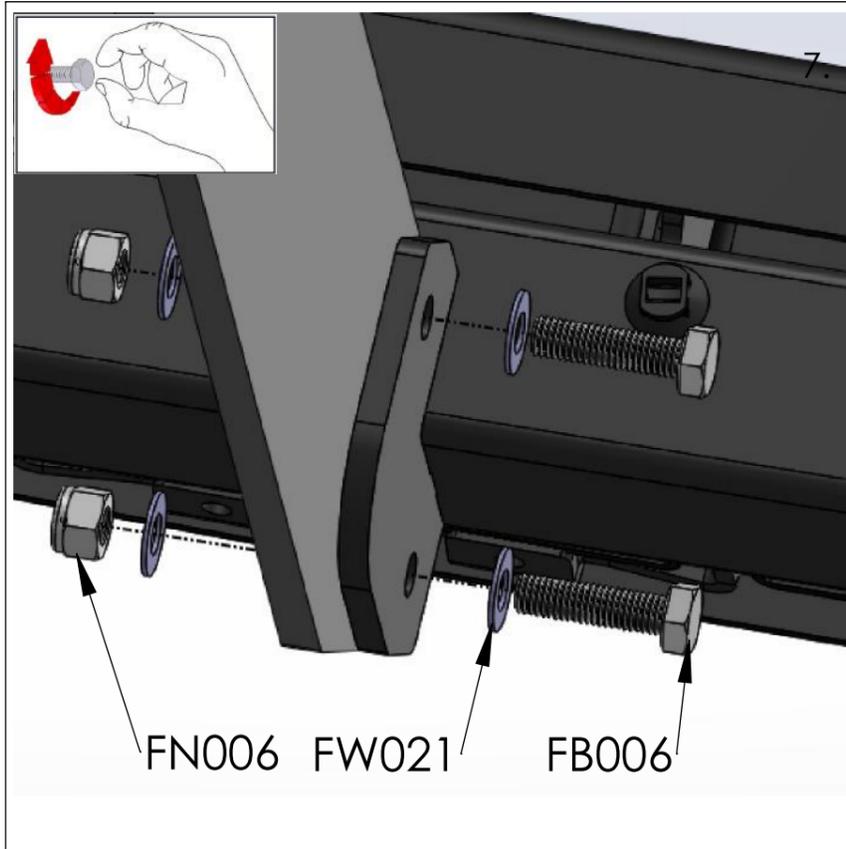

IMPACT STEP FITTING INSTRUCTIONS

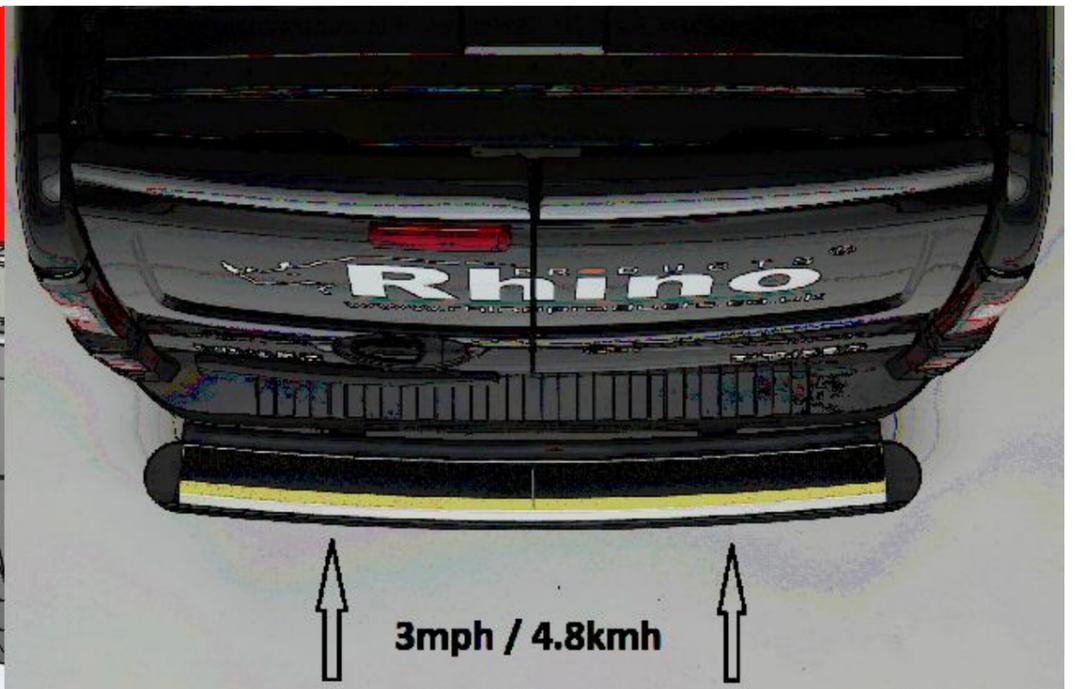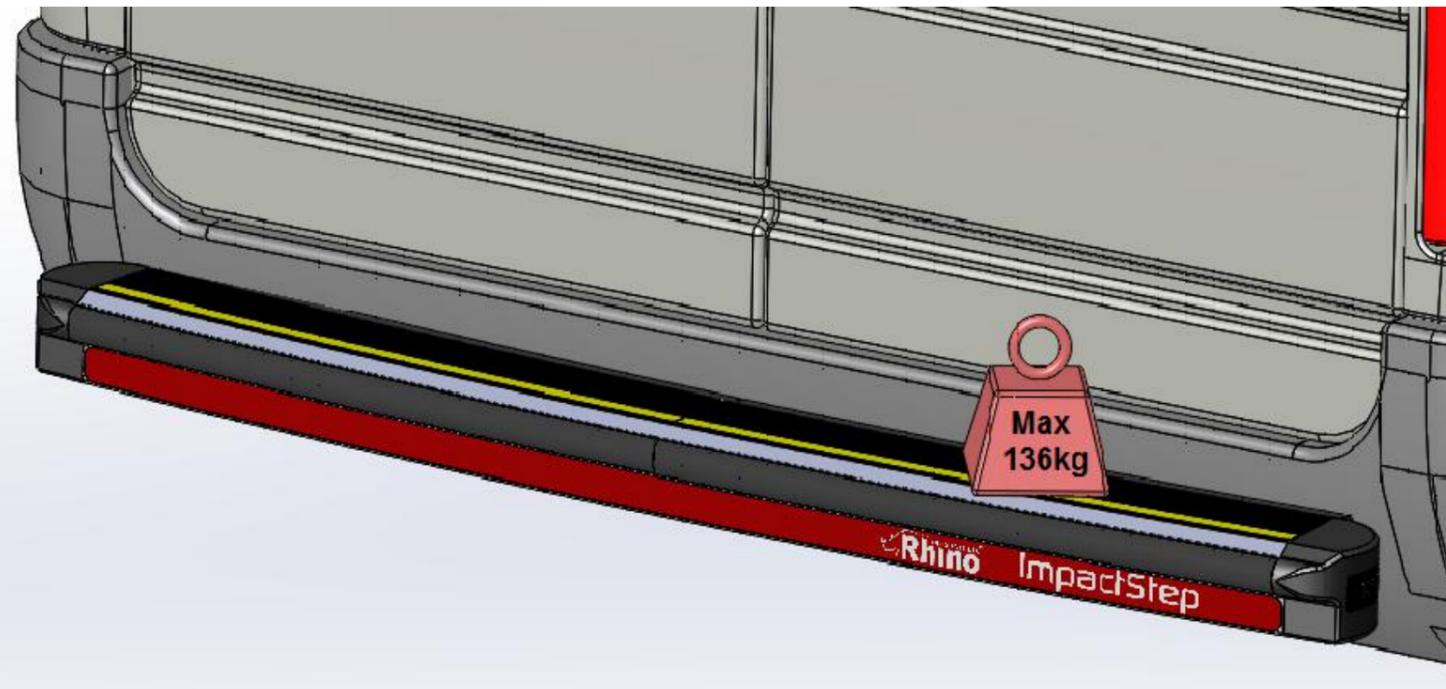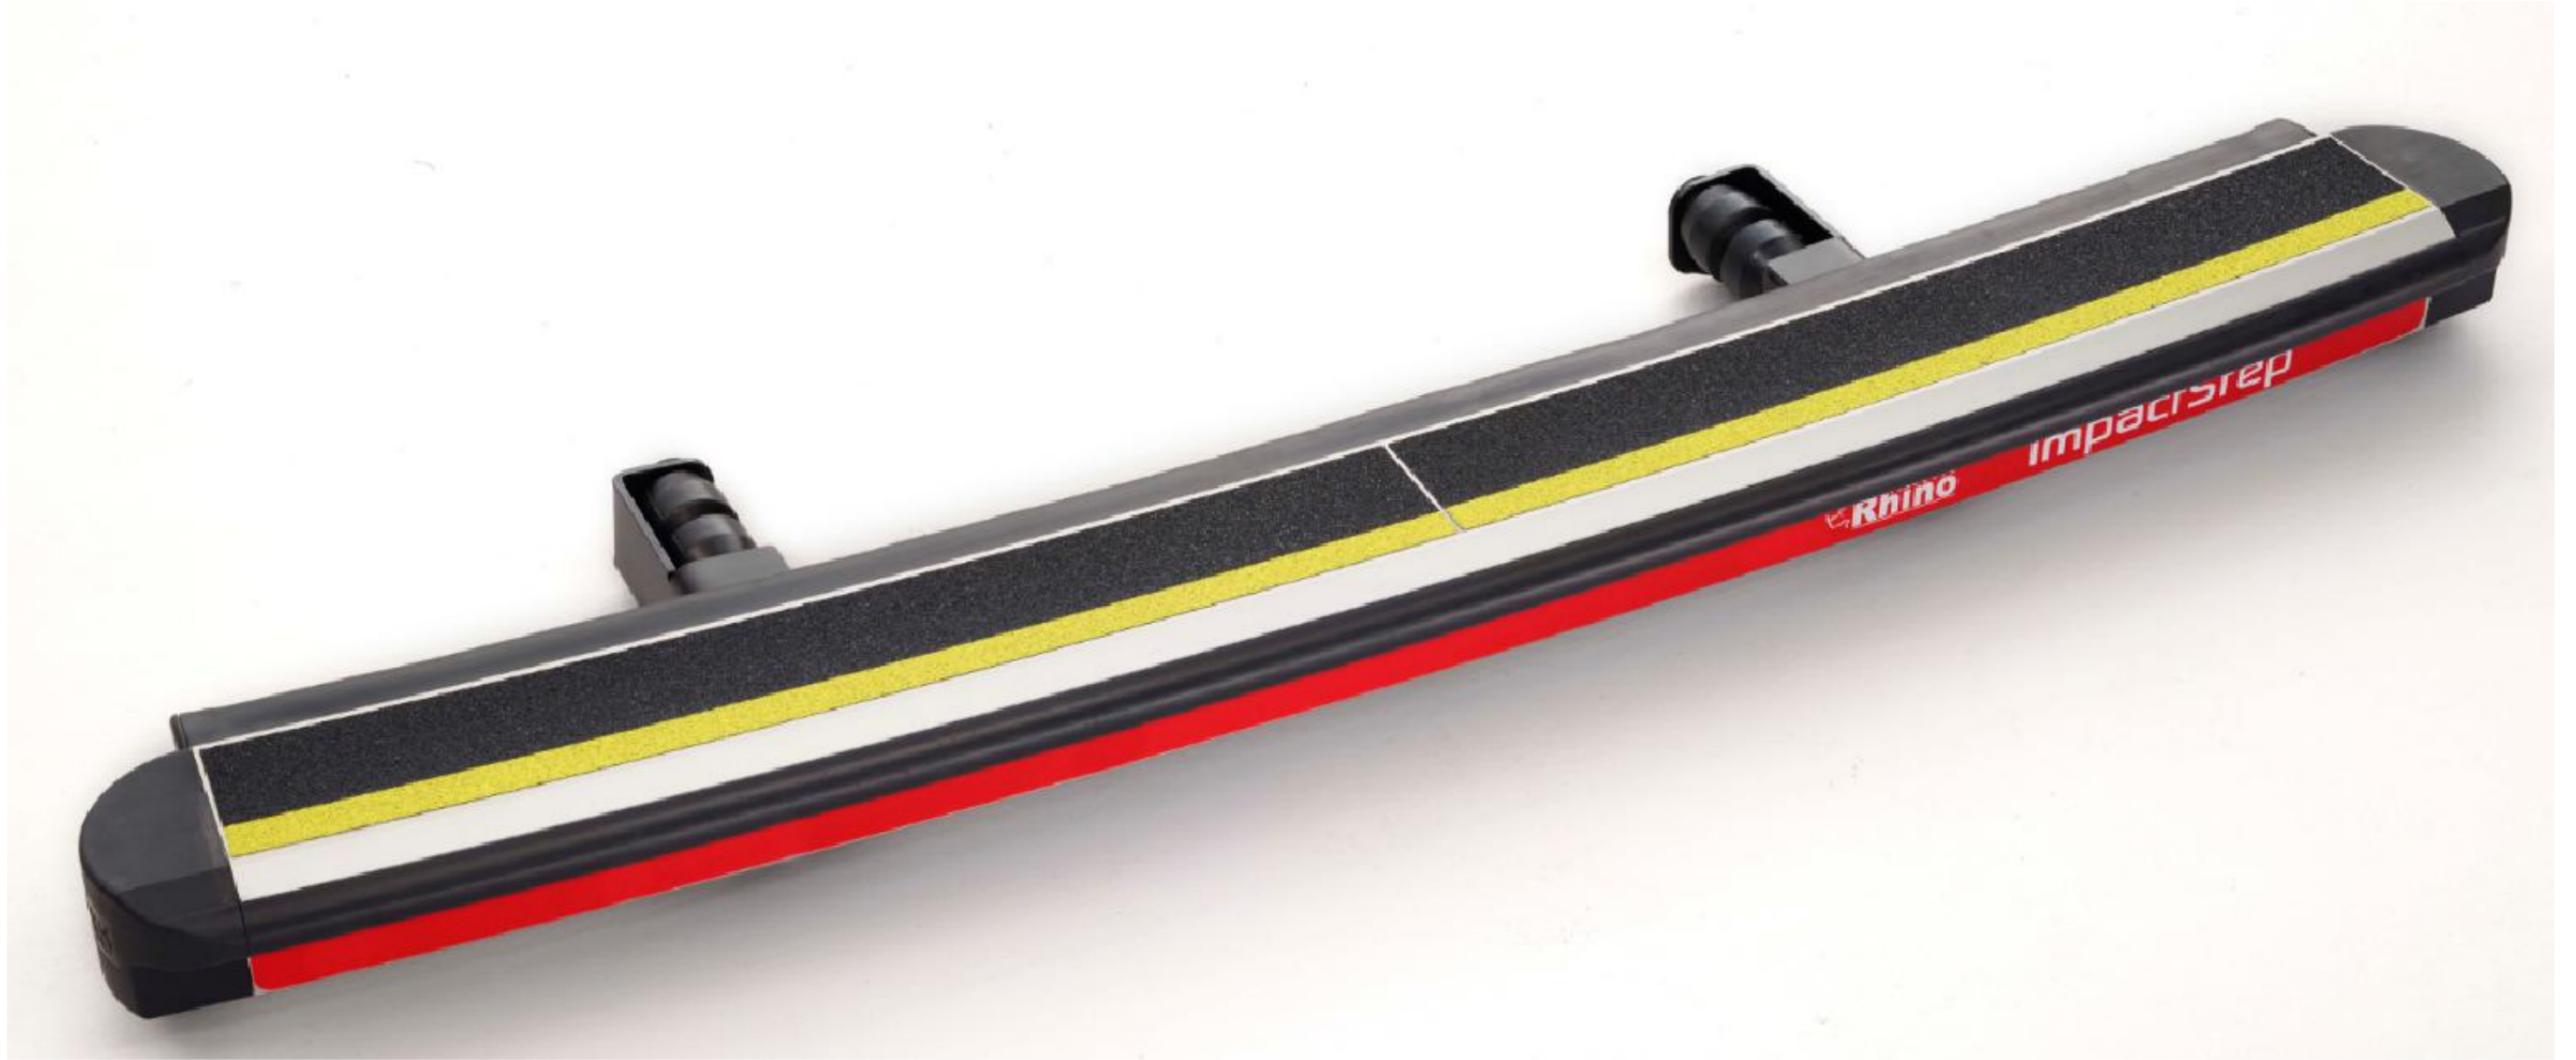

IMPACT STEP FITTING INSTRUCTIONS

FITTING KIT CONTENTS FK1282

(1:1)



FW020 (M8) x4

SAFESTEP	✗
IMPACT STEP	✓




FB006 (M8) x4



FN006 (M8) x4

SAFESTEP	✓
IMPACT STEP	✗

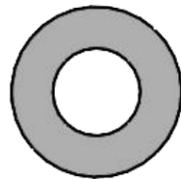

FW021 (M8) x8

SAFESTEP	8
IMPACT STEP	4



FC014 x4



PS585 x2

FITTING TIME: 30 Minutes




x 2



13mm x 1




15mm x 1



13mm x 1









19mm x 1

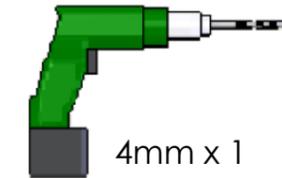

4mm x 1

FITTING INSTRUCTIONS

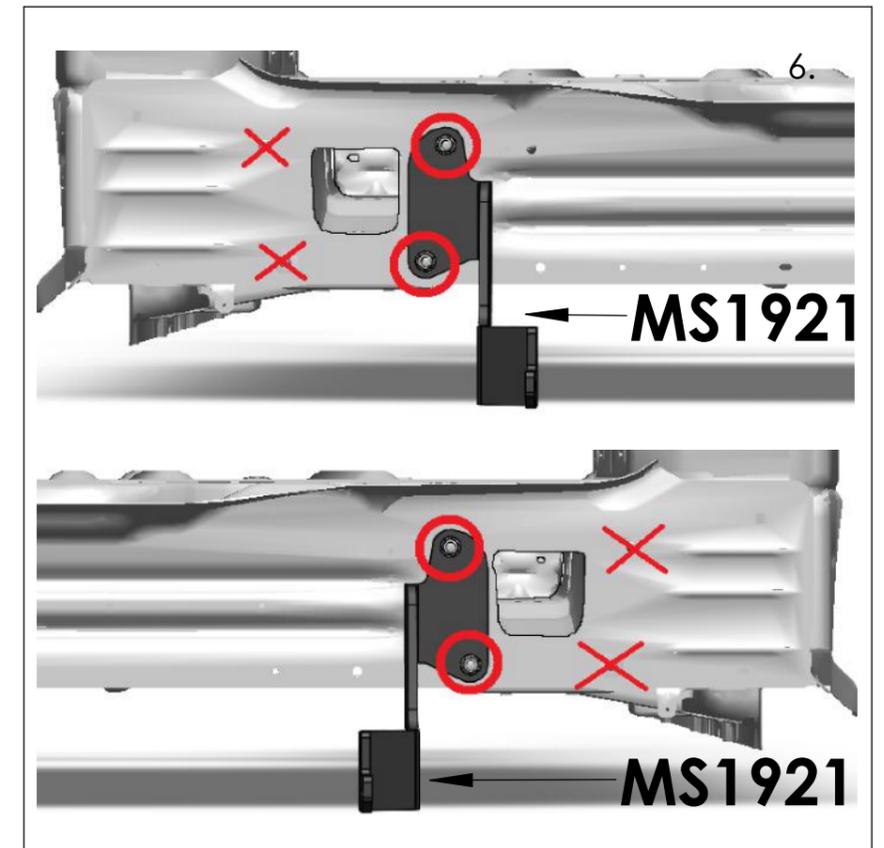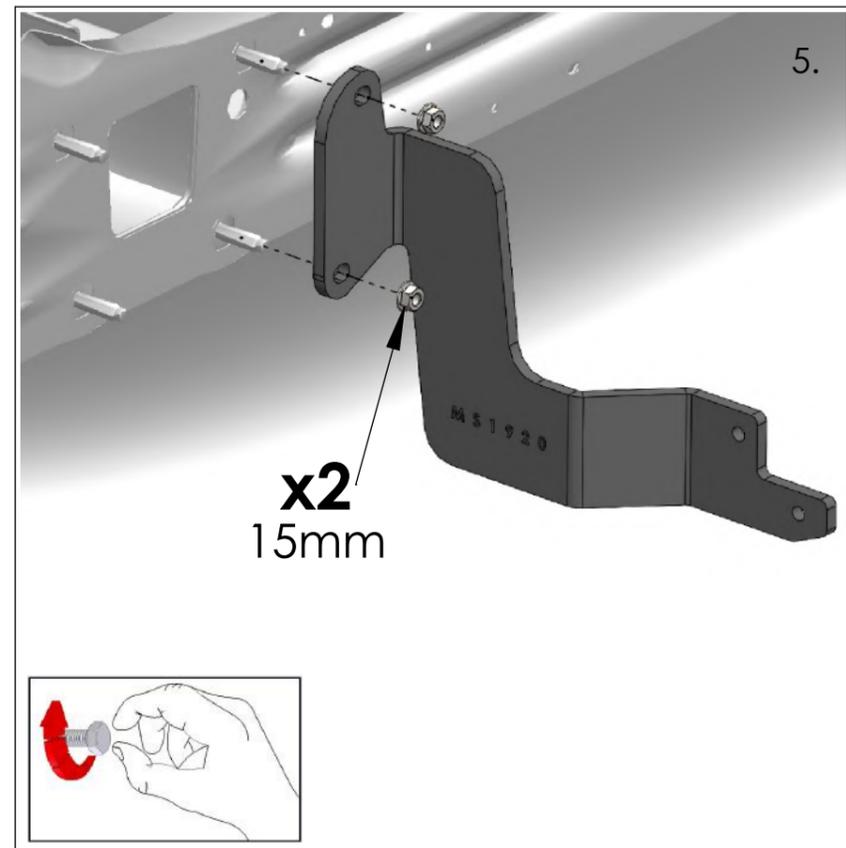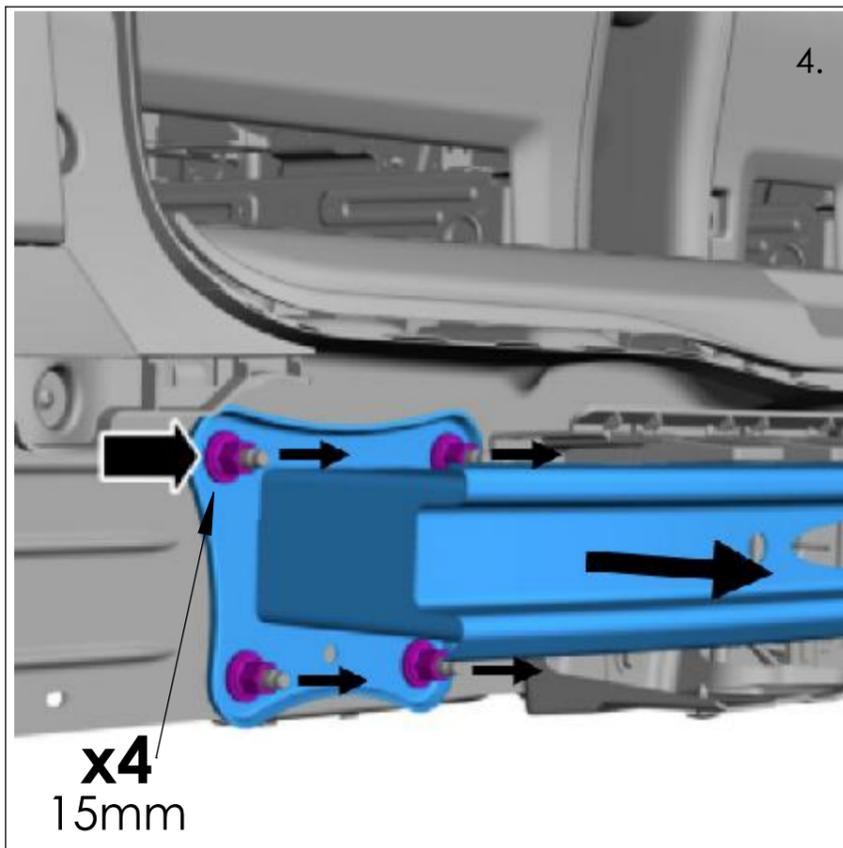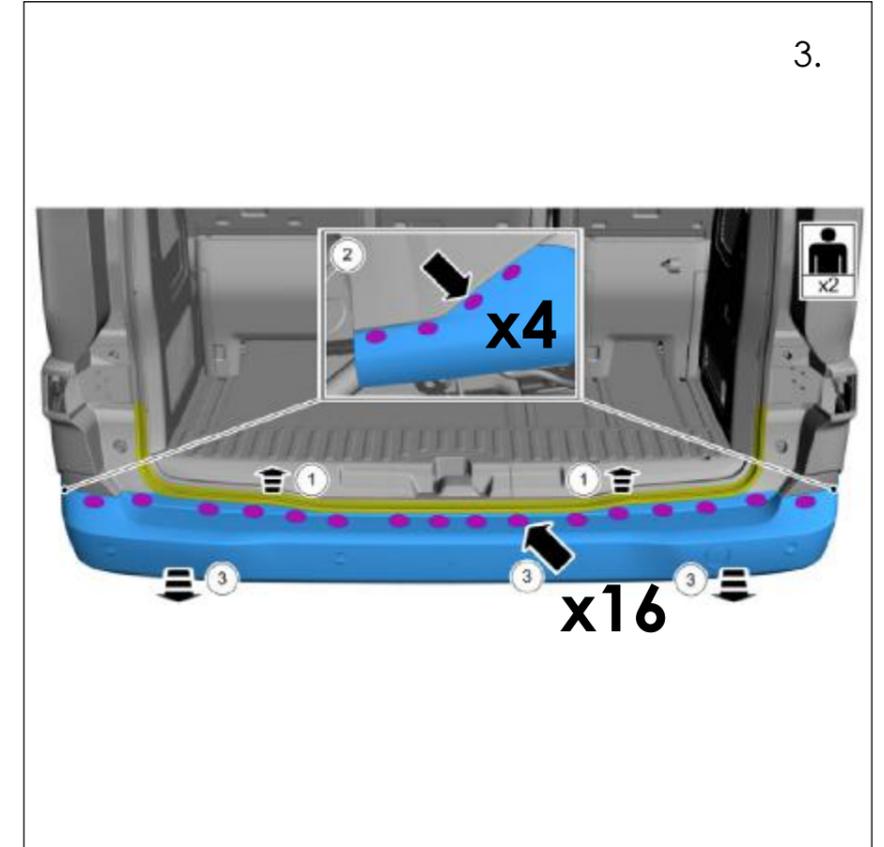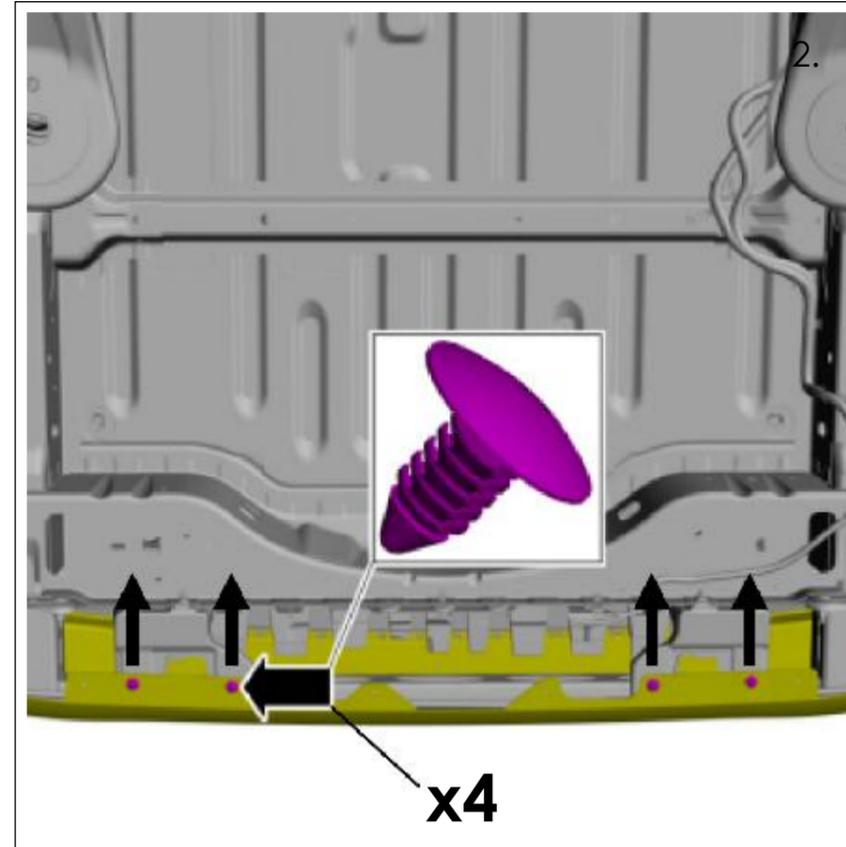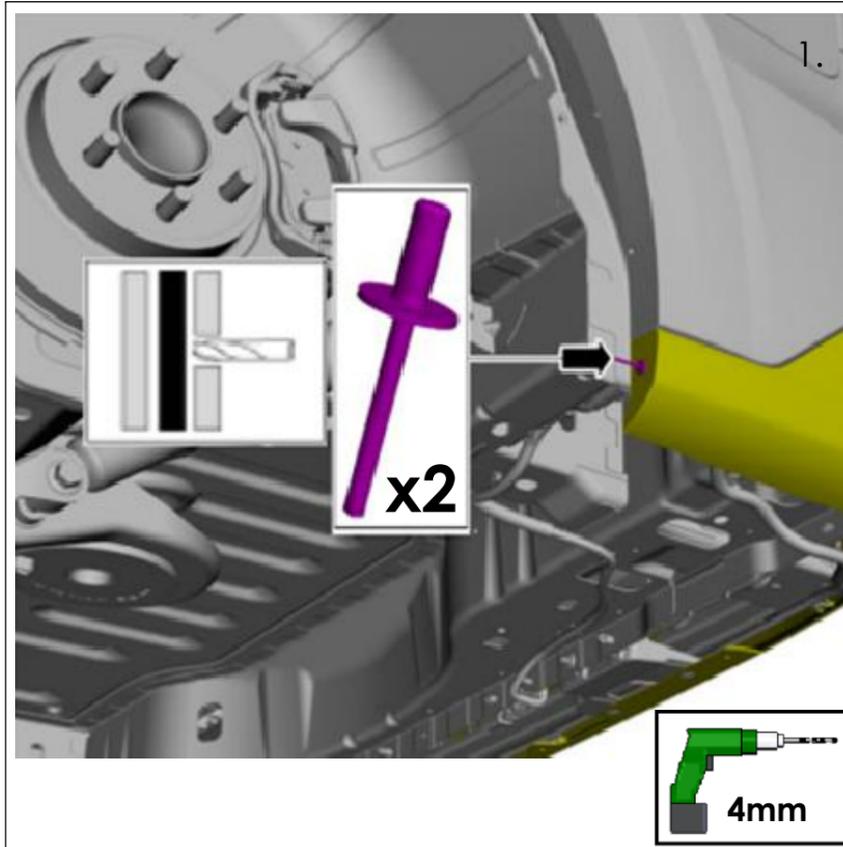

FITTING INSTRUCTIONS

