



FITTING INSTRUCTIONS

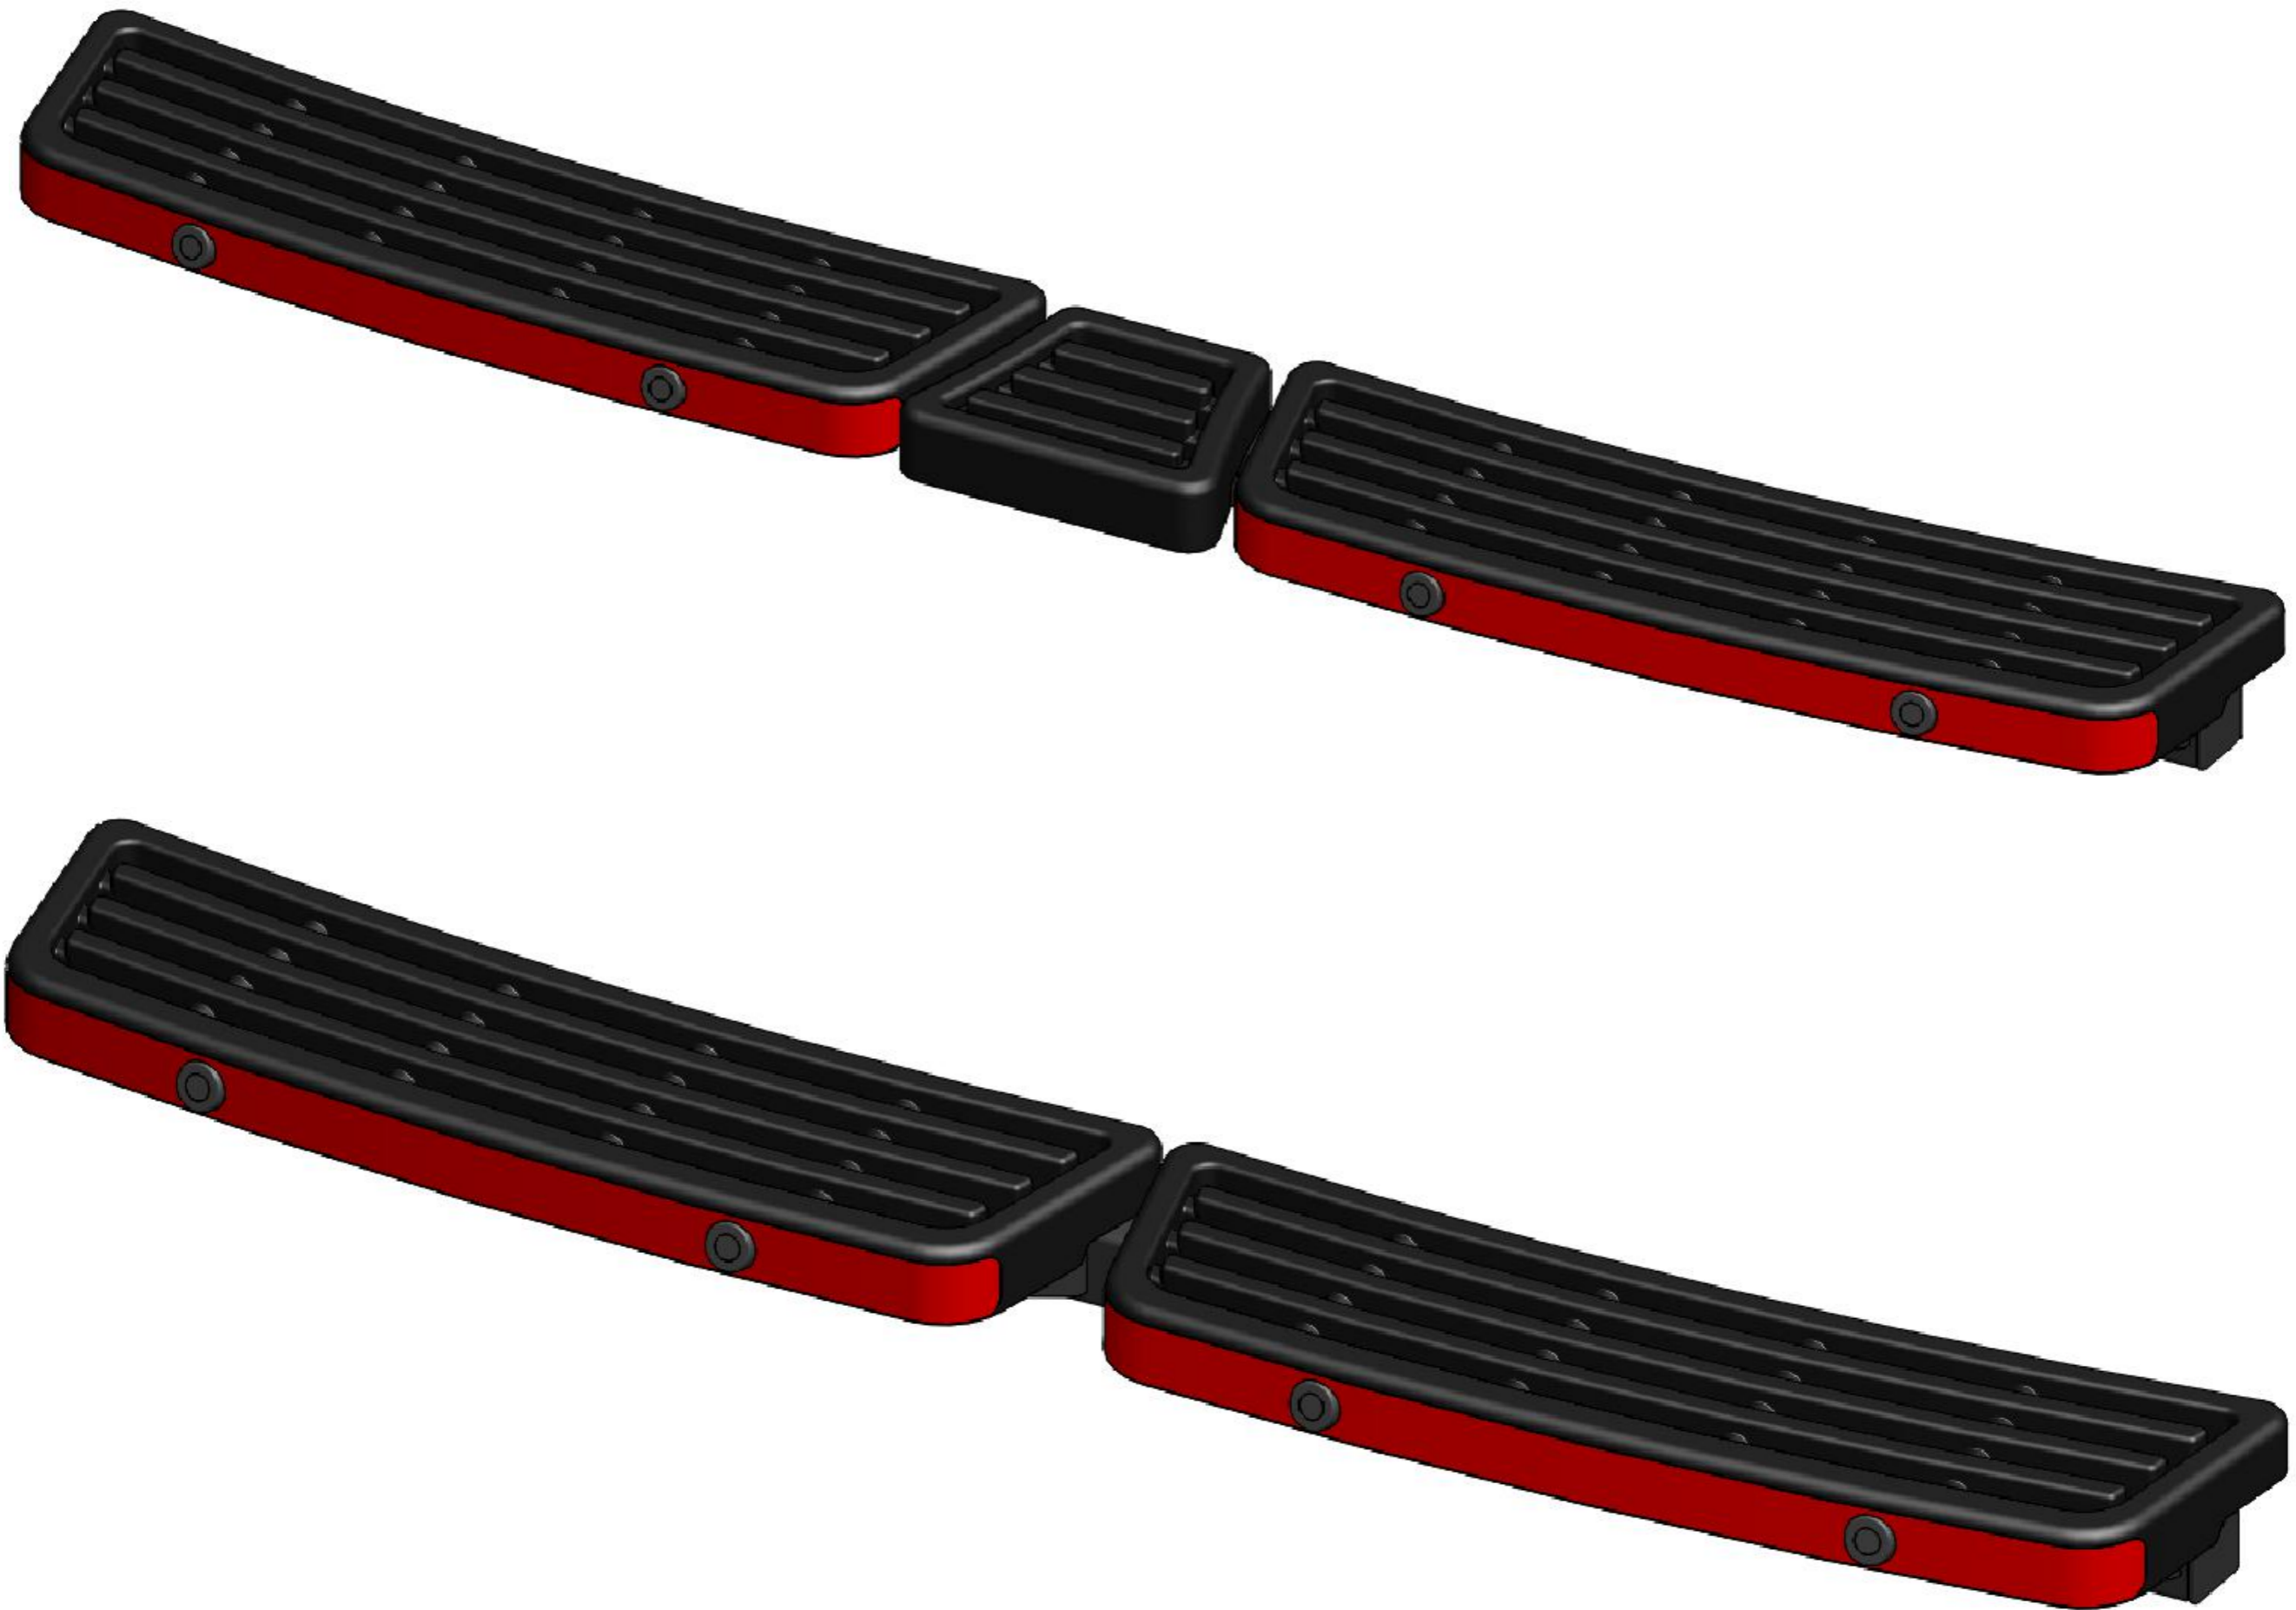

FITTING INSTRUCTIONS

FITTING KIT CONTENTS FK1070
(1:1)

1.

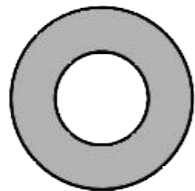


FW021 (M8) x 8



FW020 (M8) x 4

ACCESSSTEP	✗
IMPACT STEP	✓

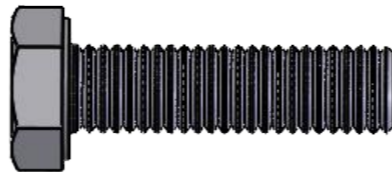



FB006 (M8 x 30) x 4




FN006 (M8) x 4

FITTING TIME: 20 Minutes

2.

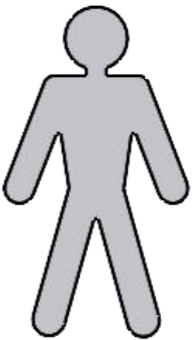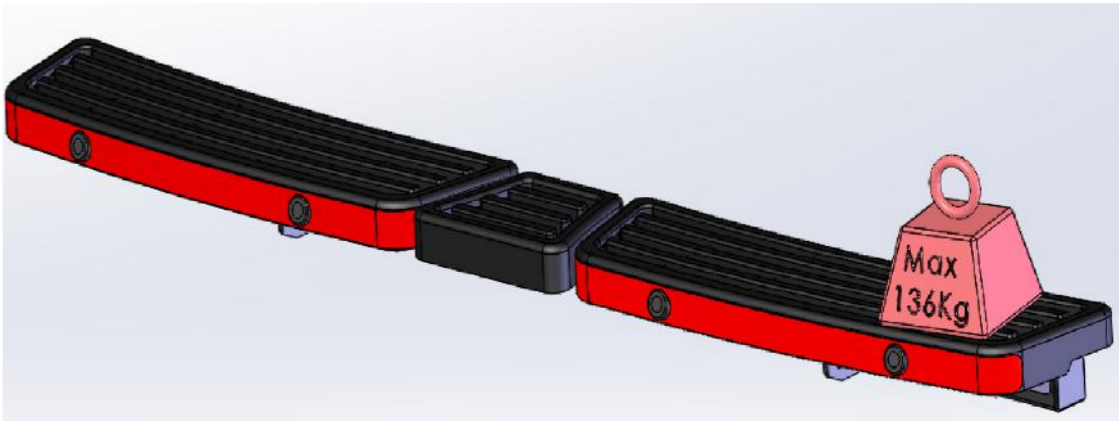


x 1

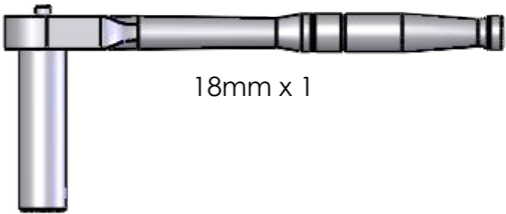

18mm x 1



13mm x 1









13mm x 1



18mm x 1

7/16" x 1

FITTING INSTRUCTIONS

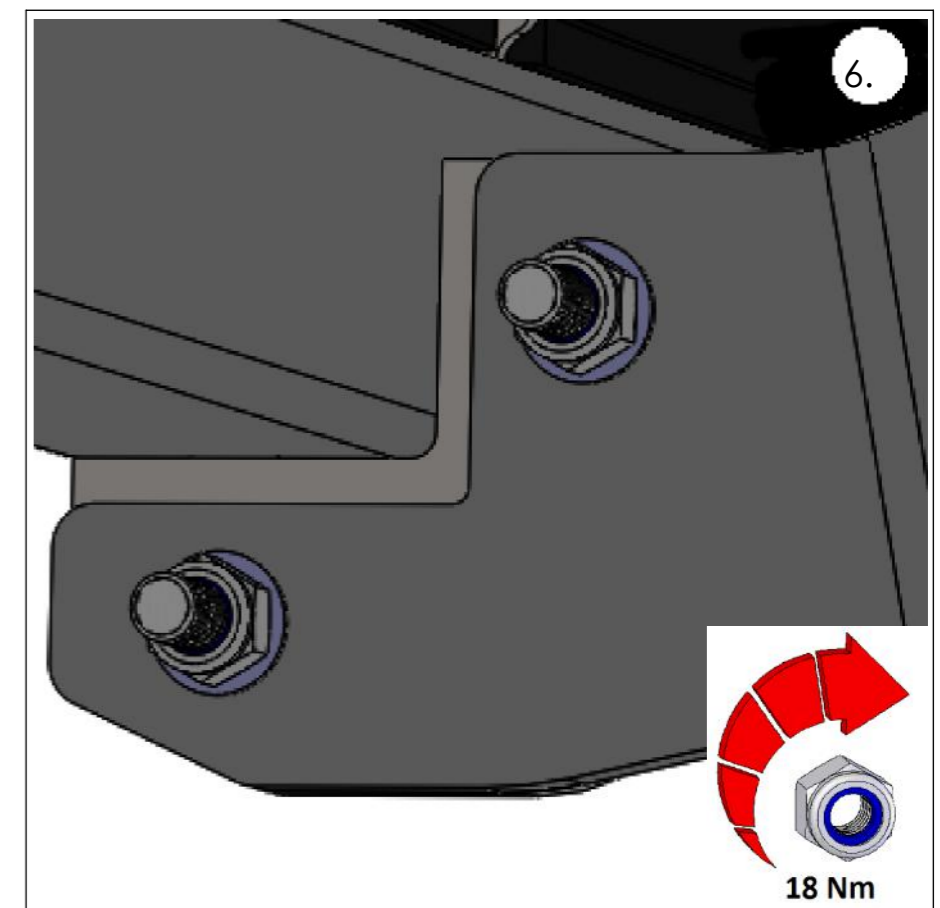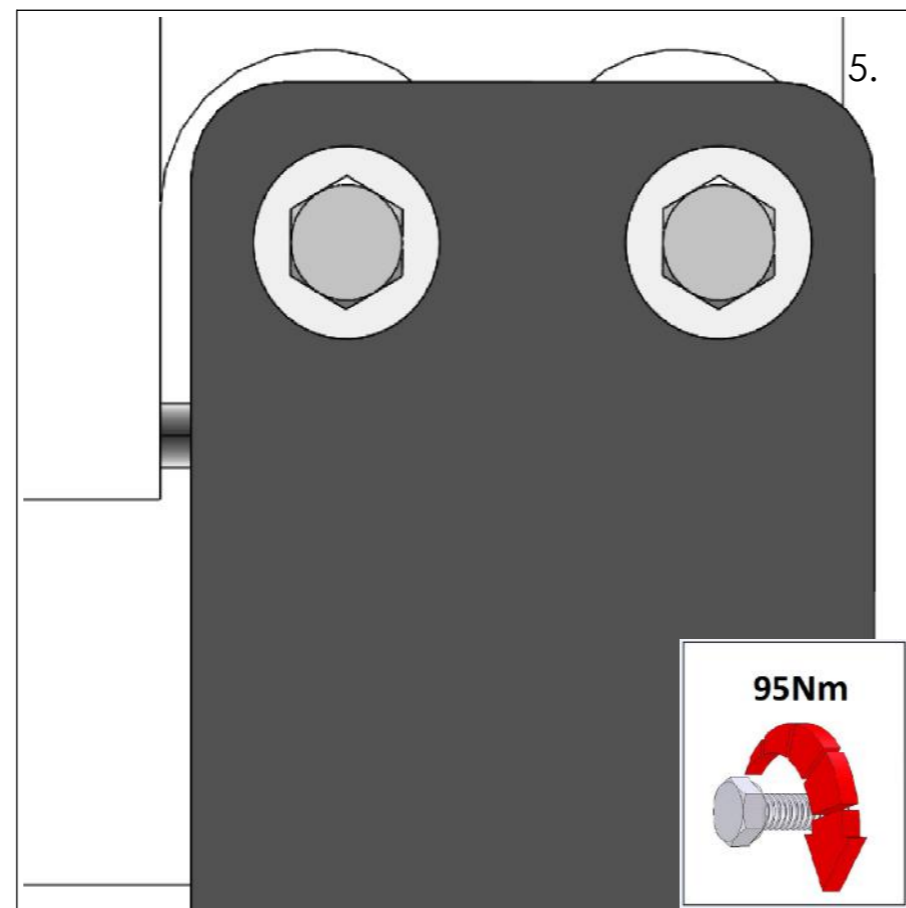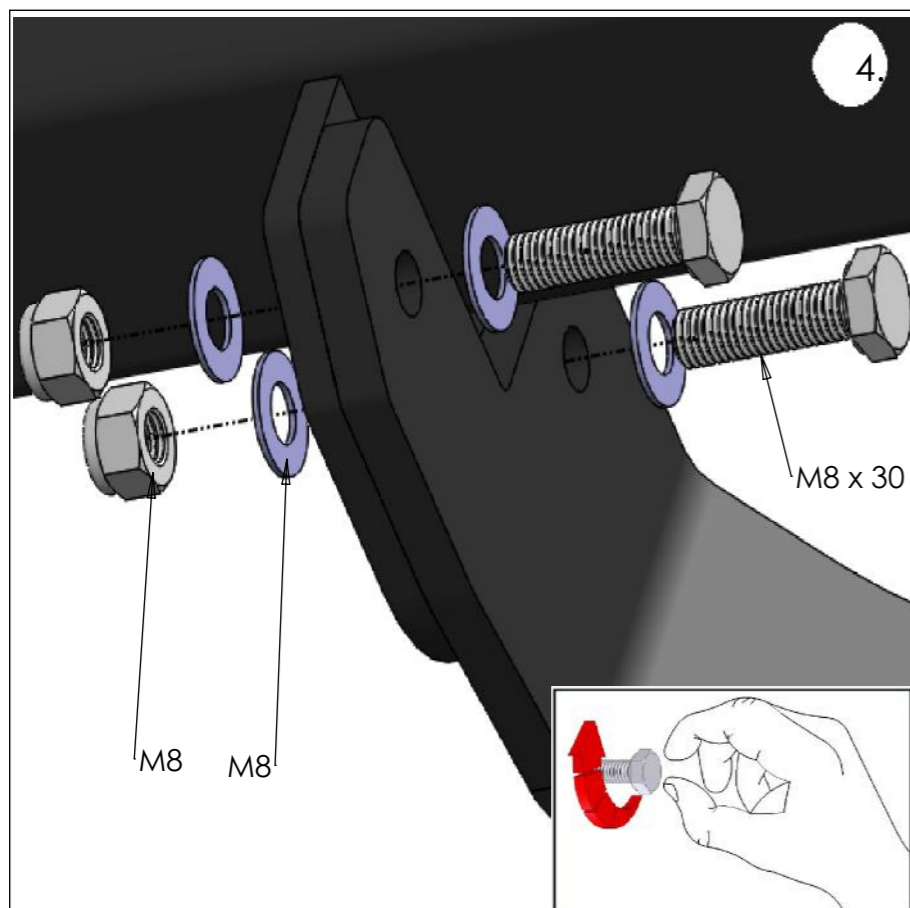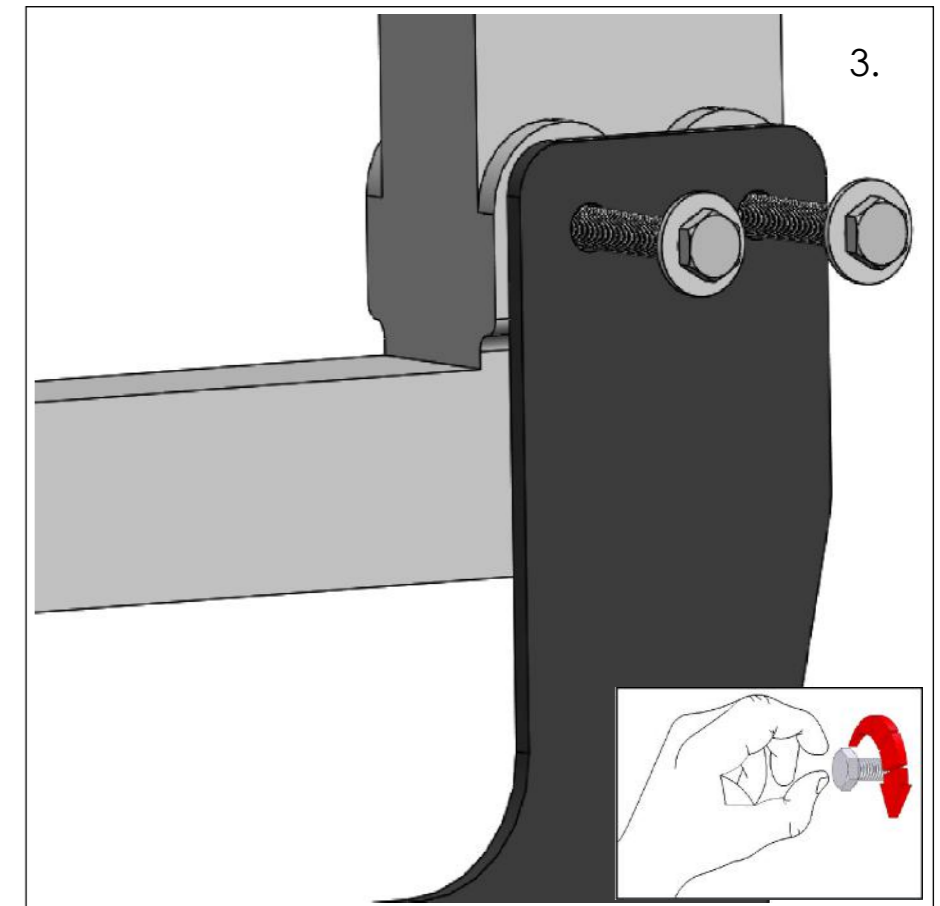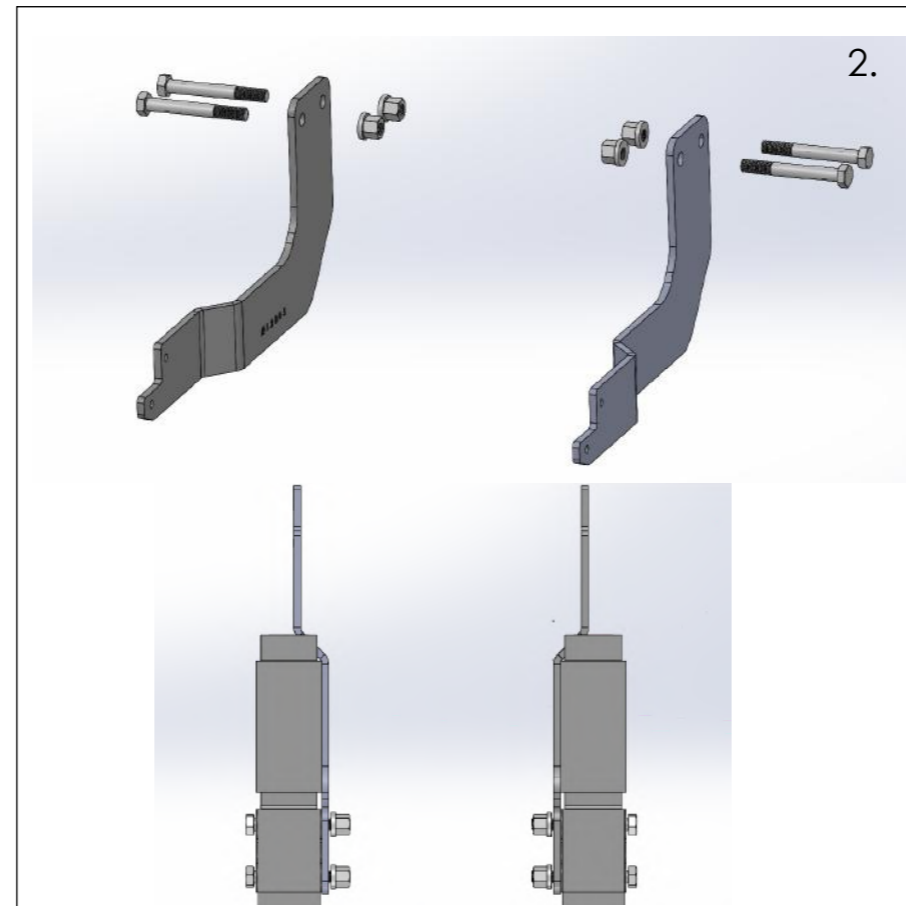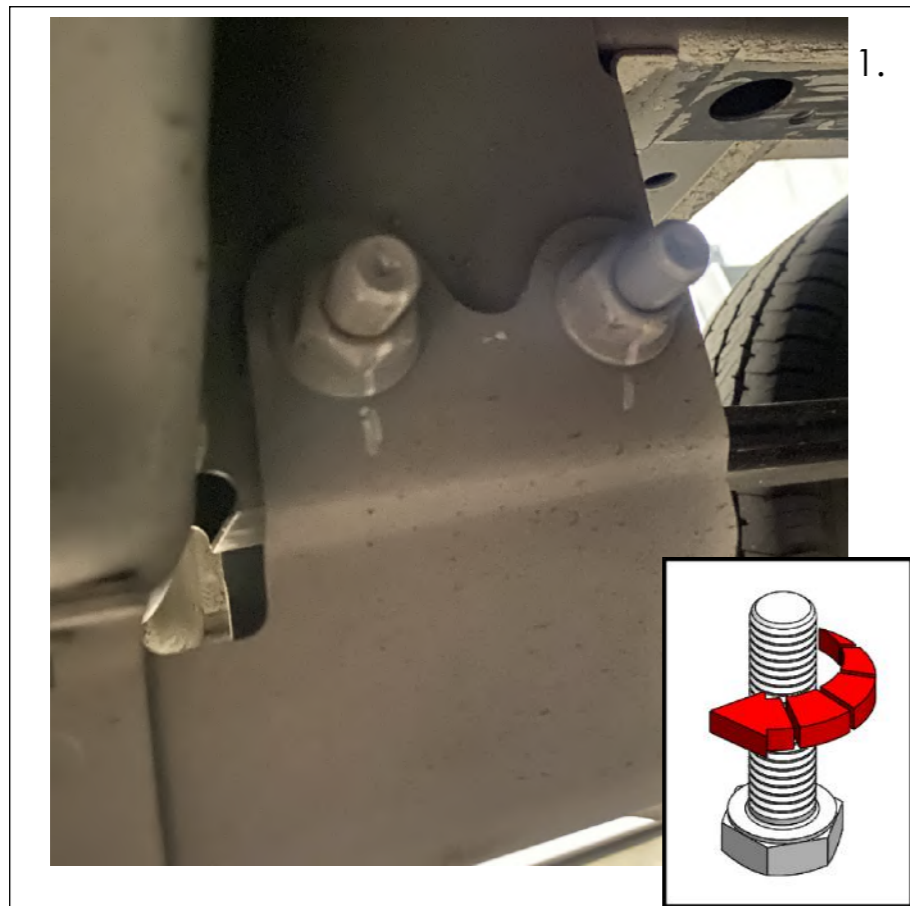


IMPACT STEP FITTING INSTRUCTIONS

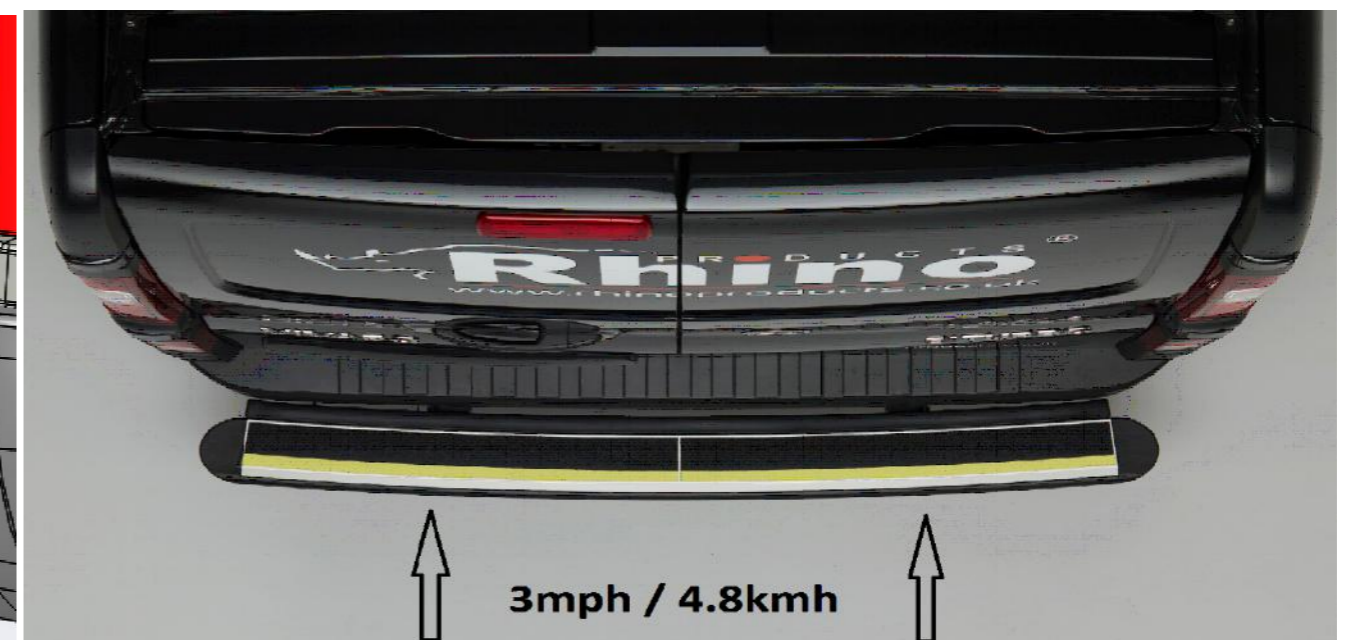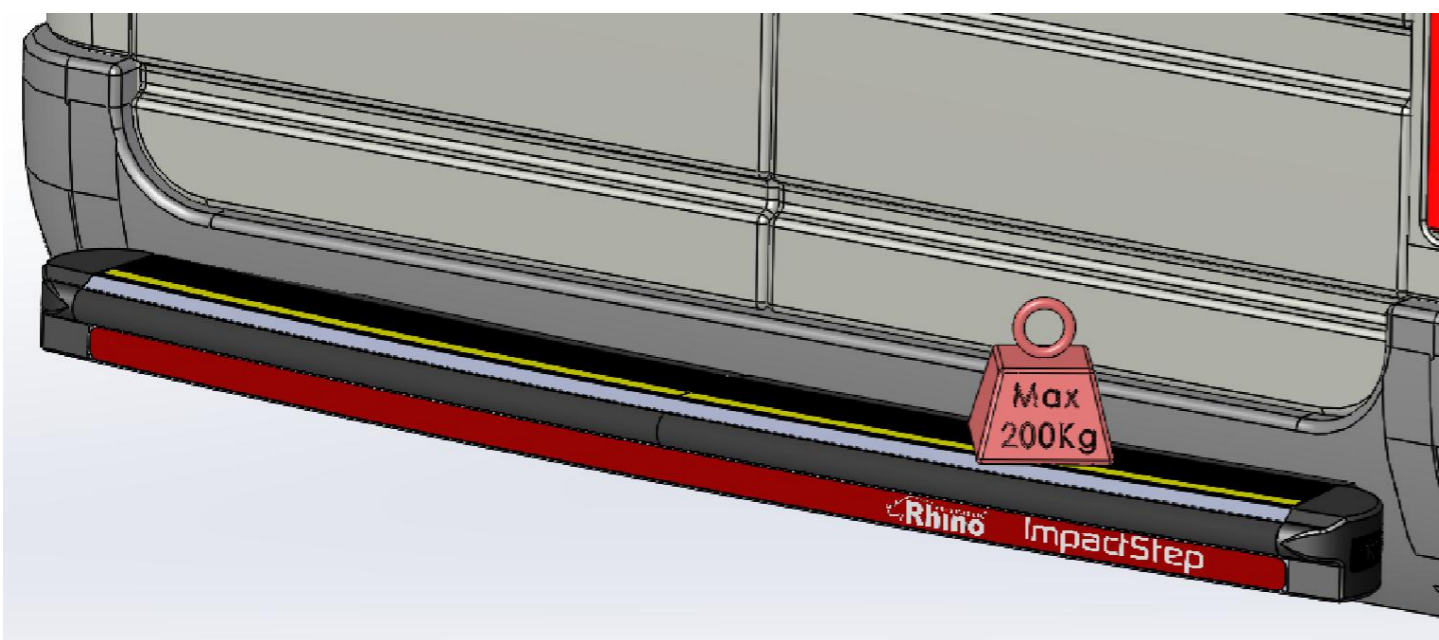

IMPACT STEP FITTING INSTRUCTIONS

FITTING KIT CONTENTS FK1070
(1:1)

1.

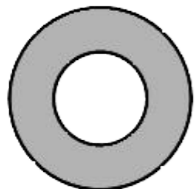

FW021 (M8) x 8



FW020 (M8) x 4

ACCESSSTEP	8
IMPACT STEP	4



FB006 (M8 x 30) x 4




FN006 (M8 x 30) x 4


ACCESSSTEP	✓
IMPACT STEP	✗

FITTING TIME: 40 Minutes

2.

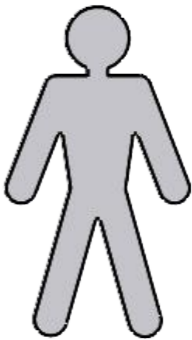


x 1

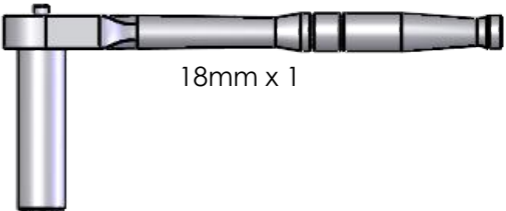

18mm x 1




13mm x 1




18mm x 1

7/16" x 1



13mm x 1

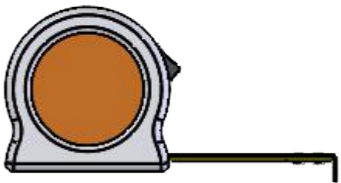

x 1

IMPACT STEP FITTING INSTRUCTIONS

