


SSK049

AccessStep/ImpactStep

Instructions

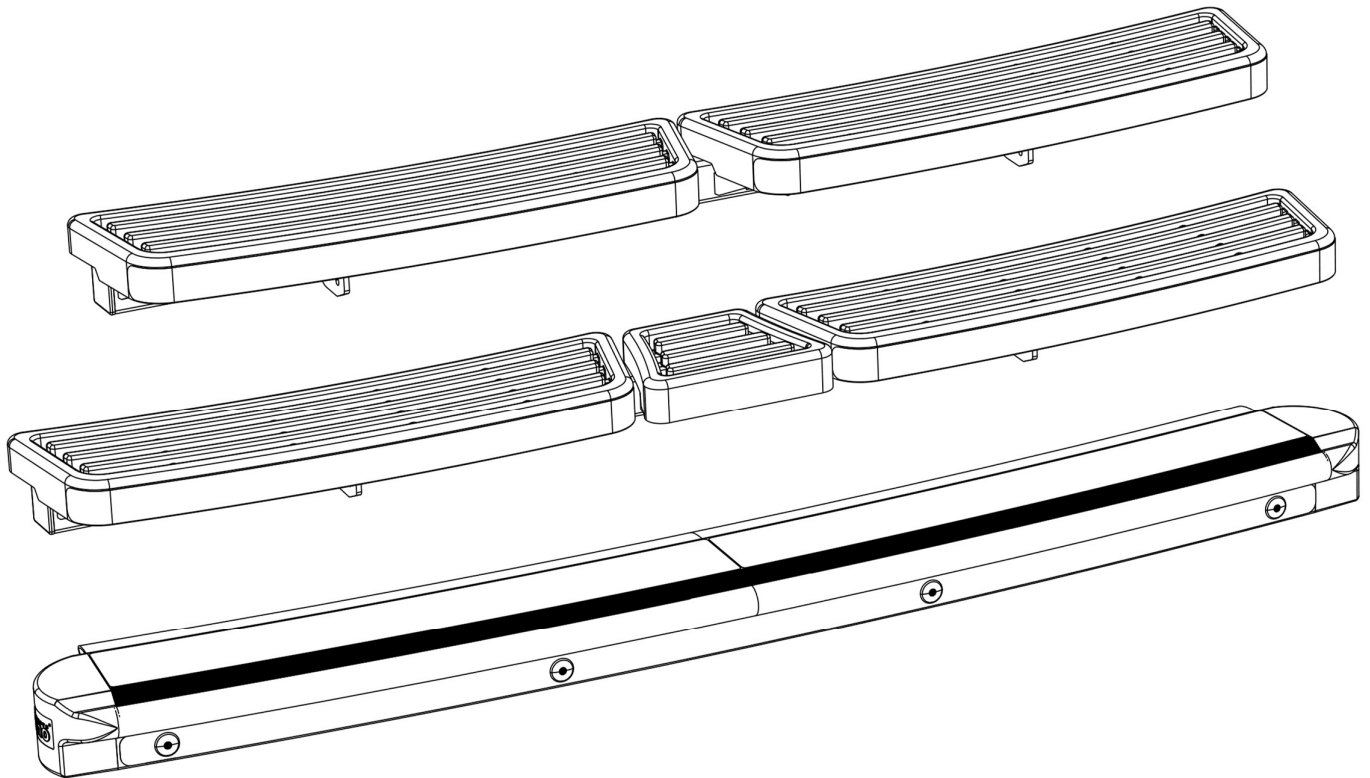


Farizon SV 2025-




≈1 Hour



136 Kg
/300 lbs




13mm, 15mm &
18mm



13mm

AccessStep – Steps 1-13

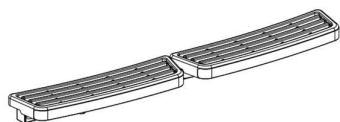


SS249B/
SS249Y
x 1




SS349B/
SS349Y
x 1




ImpactStep – Steps 14-26

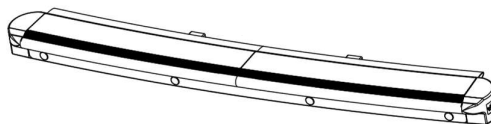

IMS49 x1

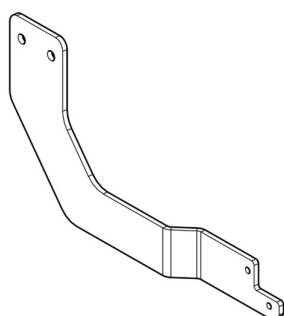


MS2137
x 1

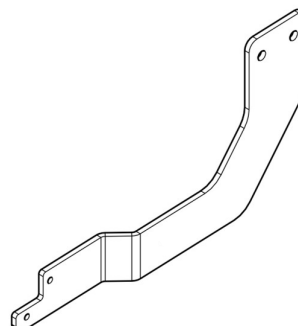


MS2138
x 1



Fitting Kit



FS089
(M12x110)
x 4



FB006
(M8x30)
x 4



FW020
(M8)
x 4



FW021
(M8)
x 8



FW026
(M12)
x 8














FN006
(M8)
x 4











FN034
(M12)
x 4



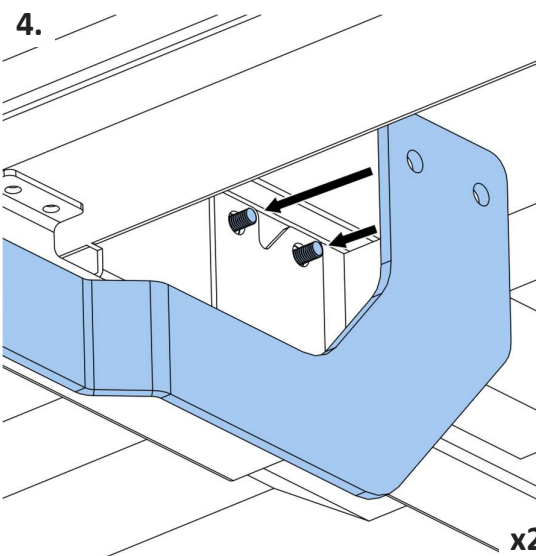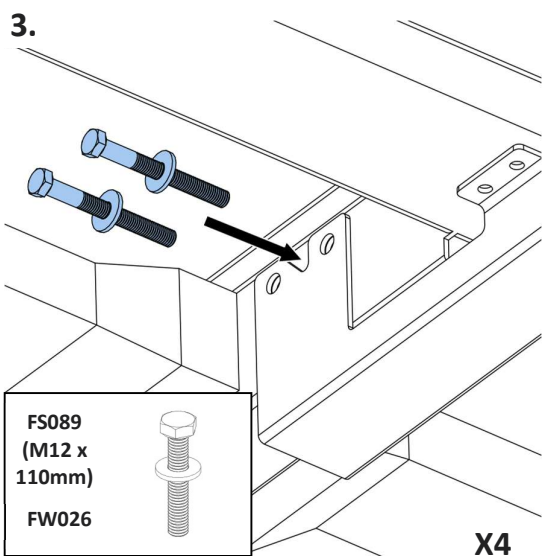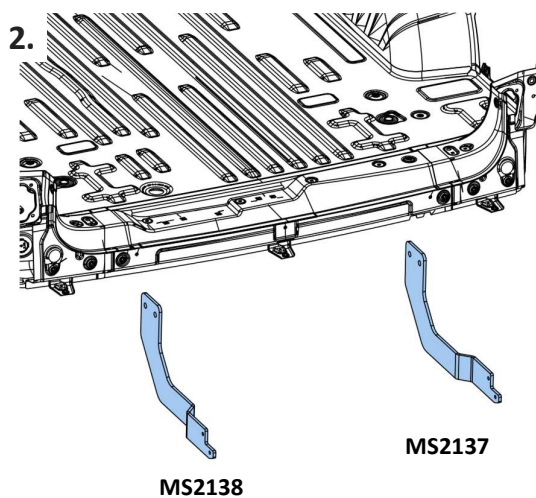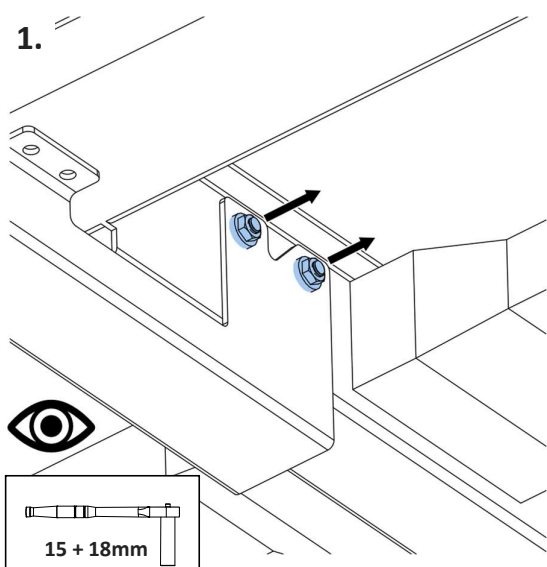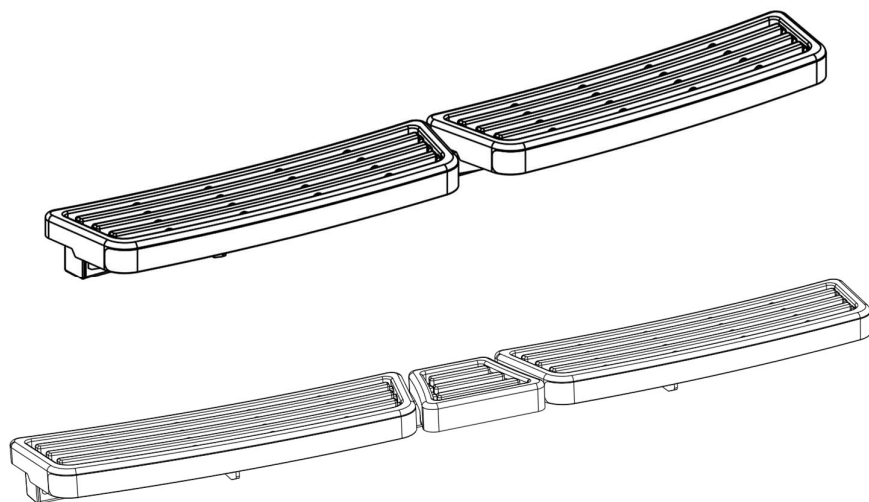


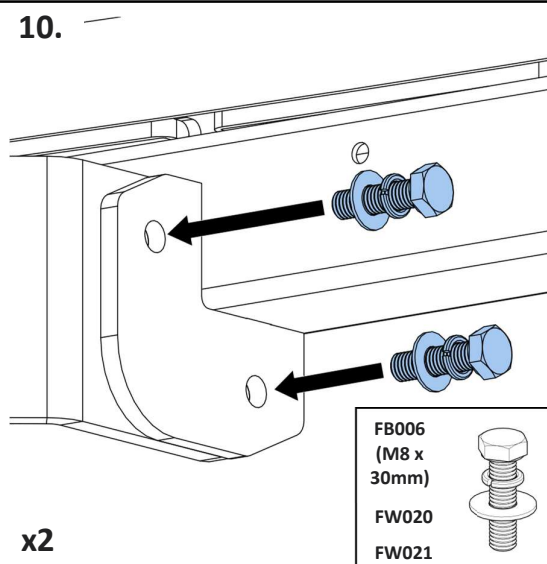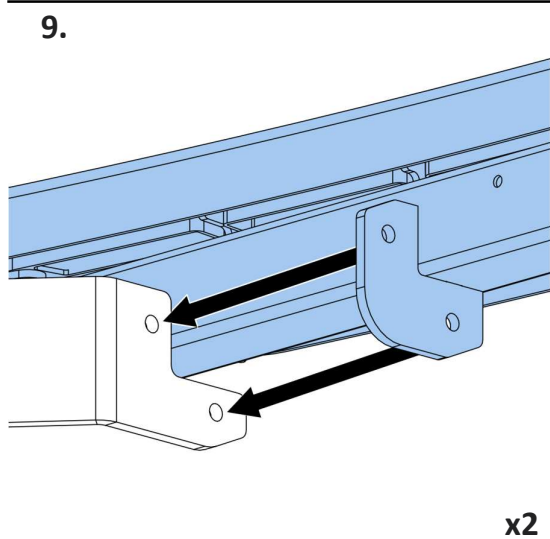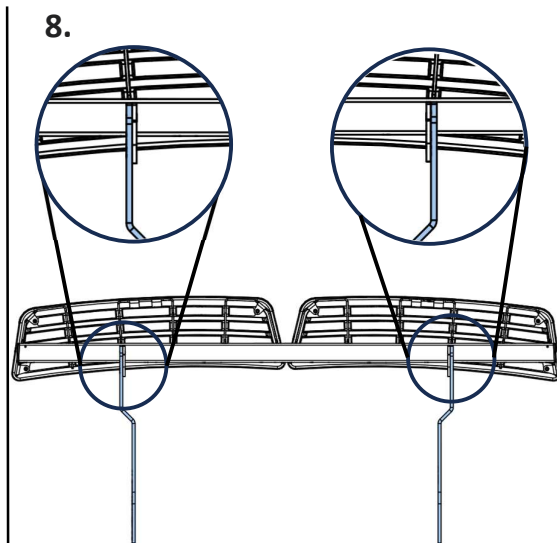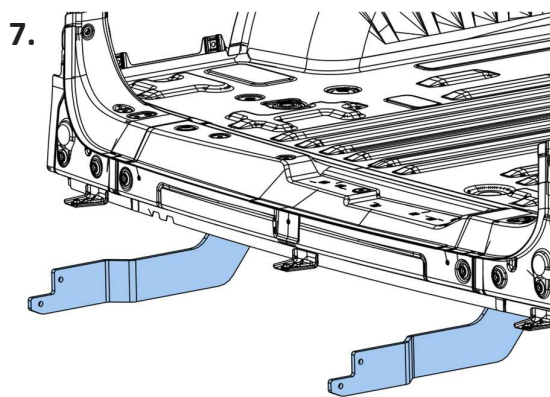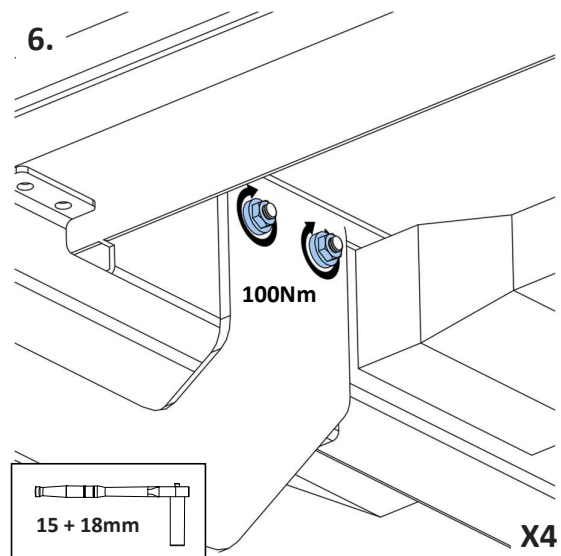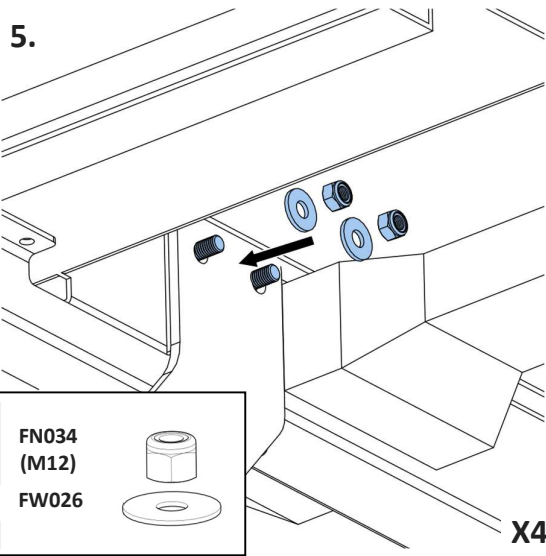

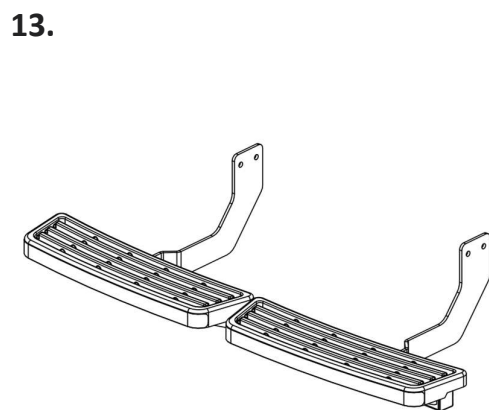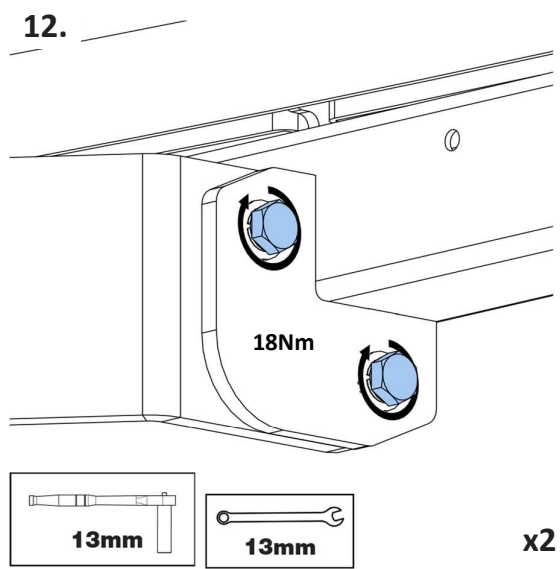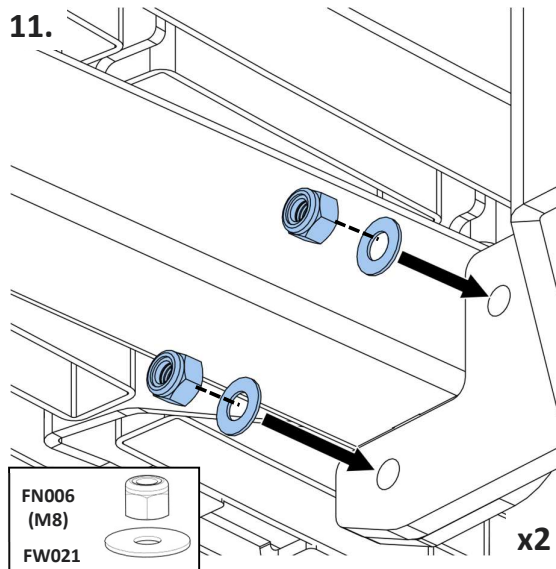


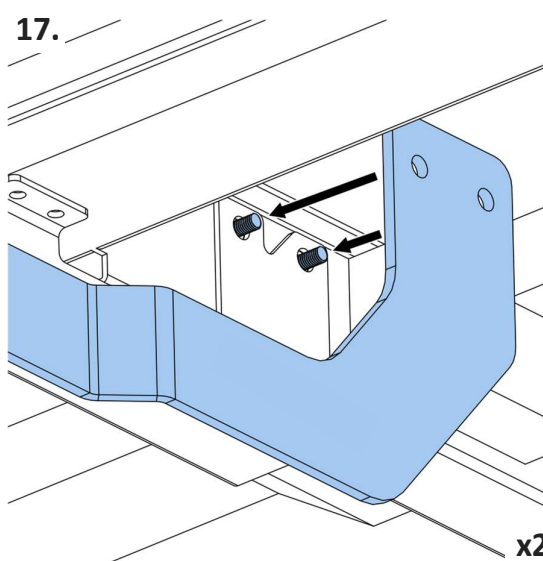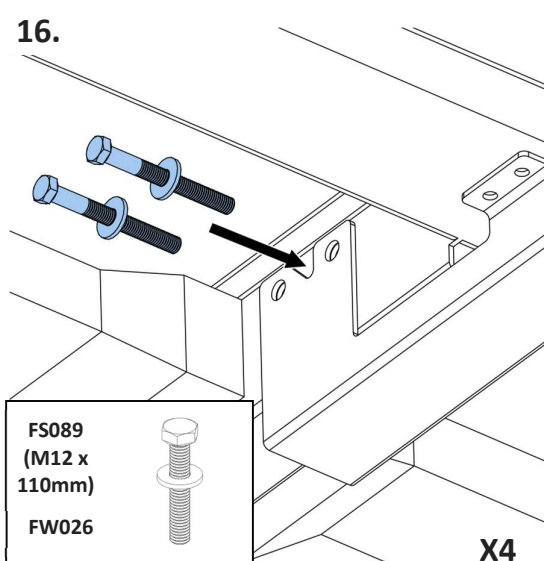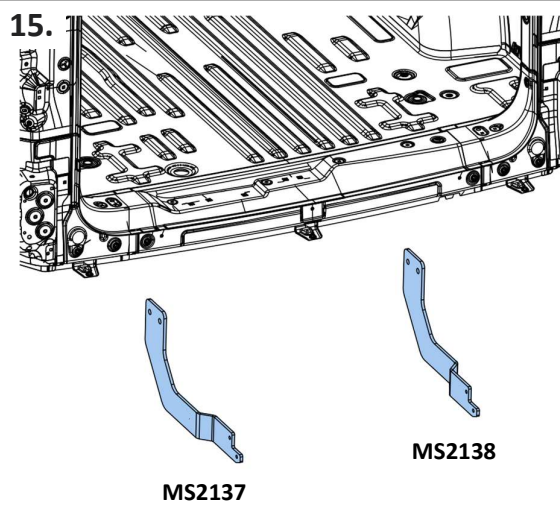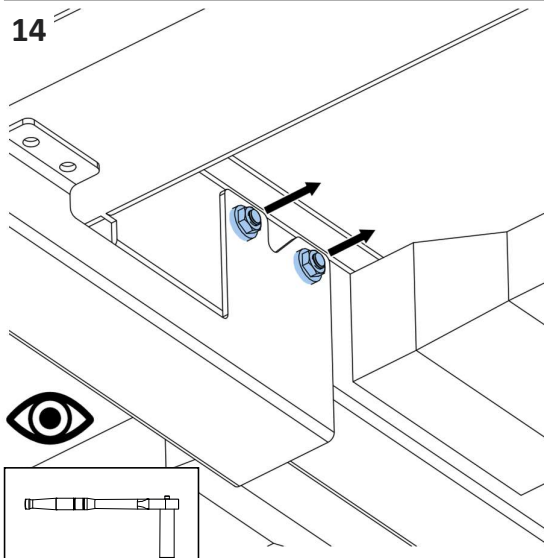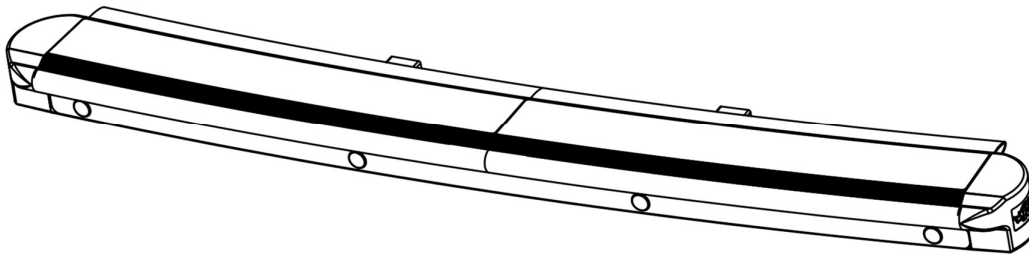


18.

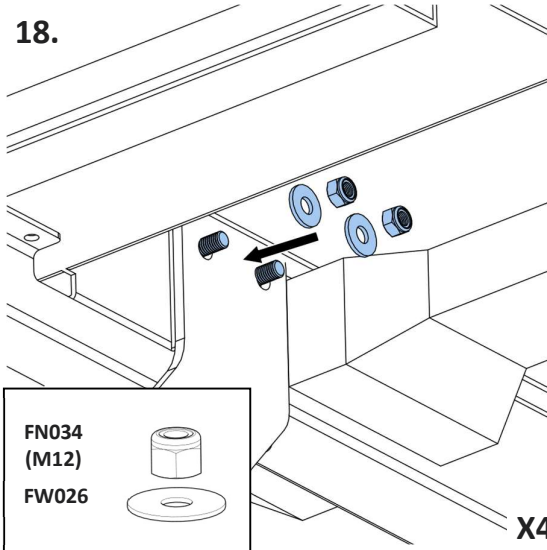


19.

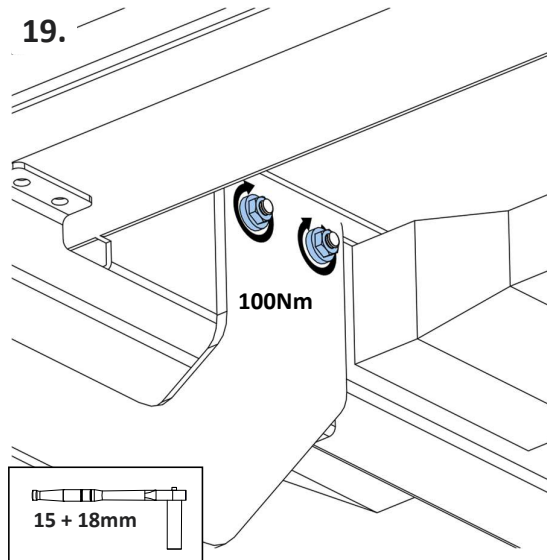


20.

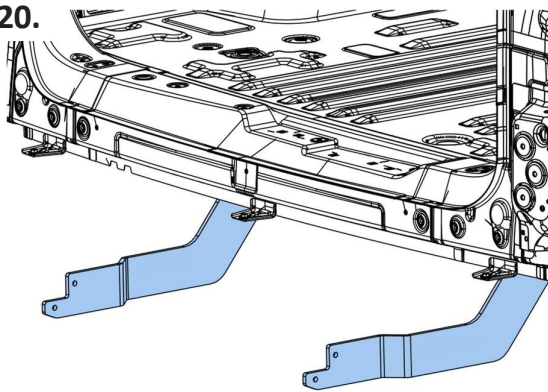


21.

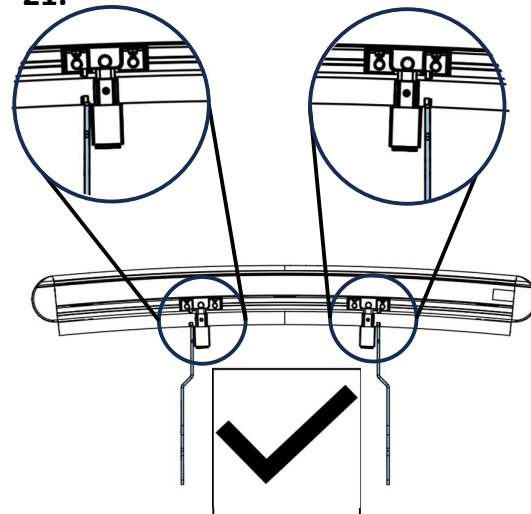


22.

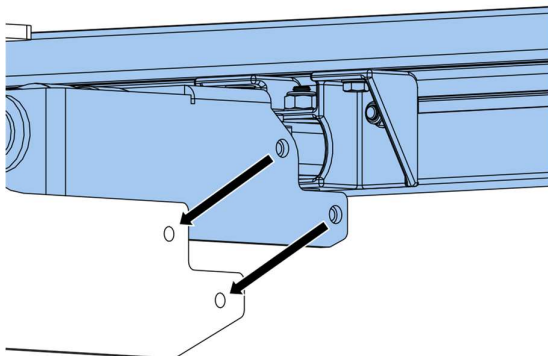


23.

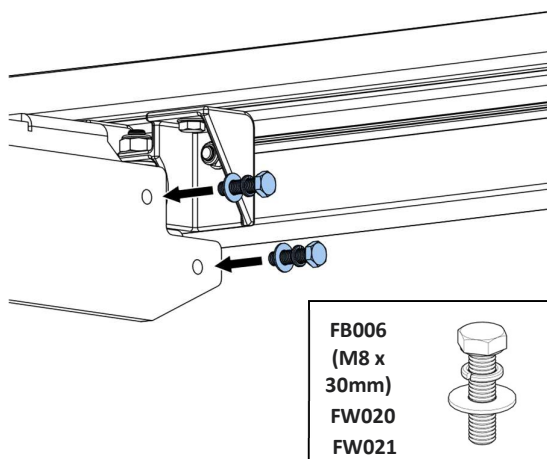

24.

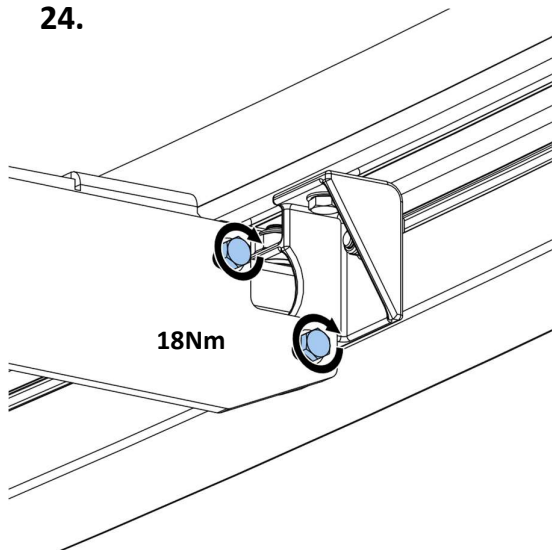

25.

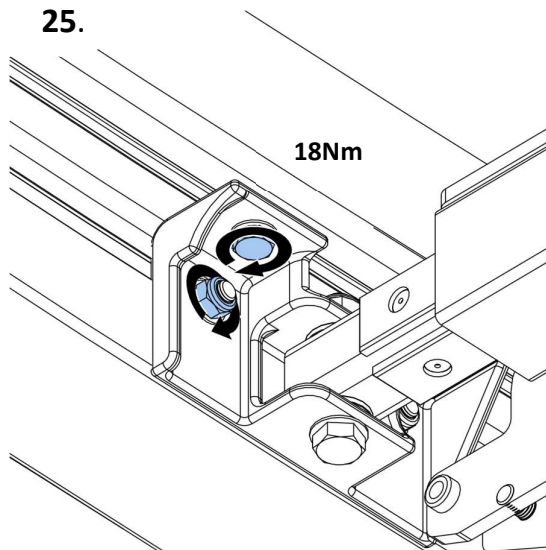

26.

