


MKISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	MK	KB	2950	09/05/23	Replaced SA393 with SA460 and replaces SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					

TA2PR/FL






KammBar

Instructions

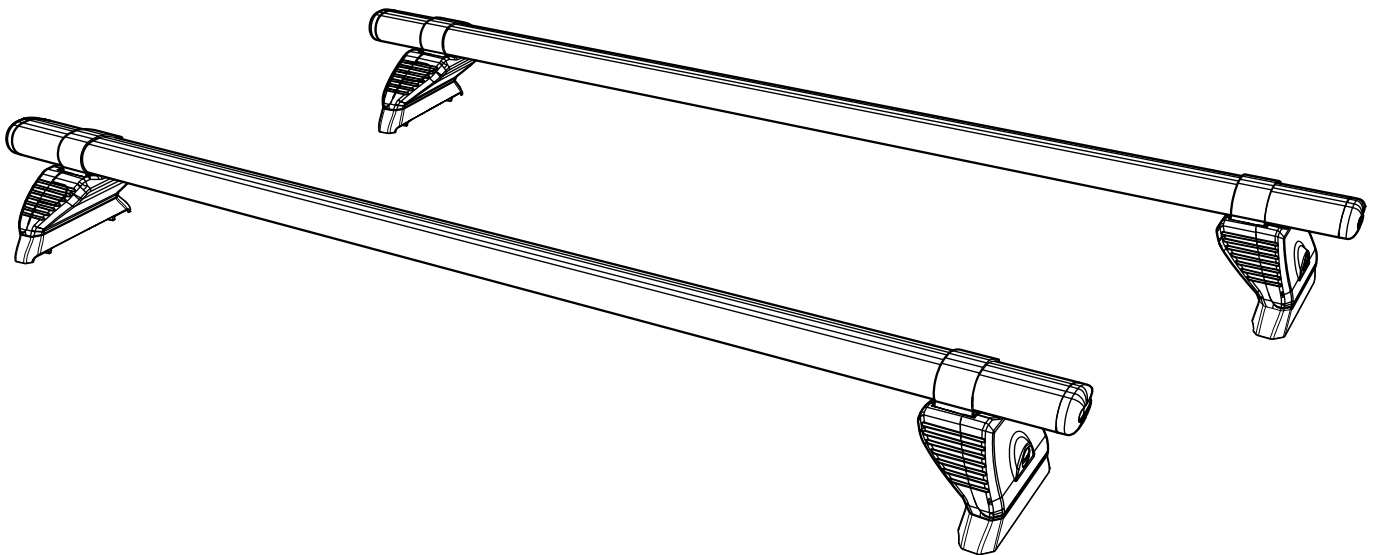


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

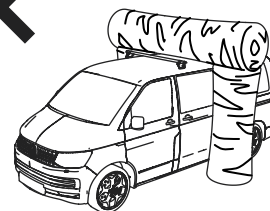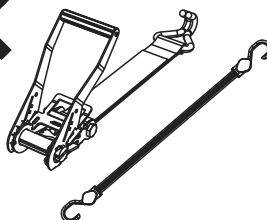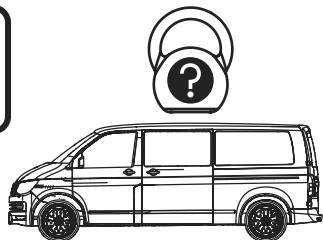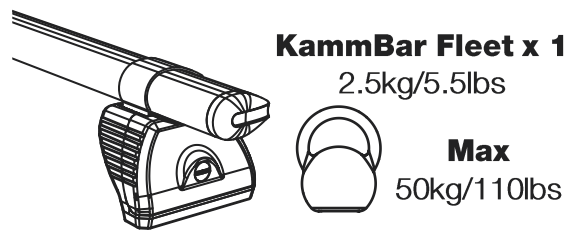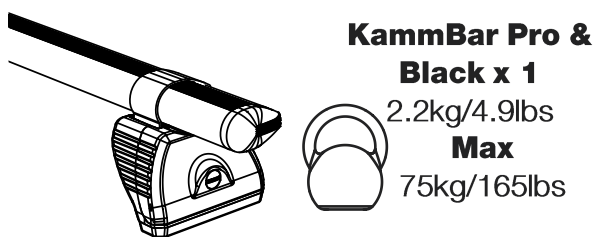


KammBar Pro & Black

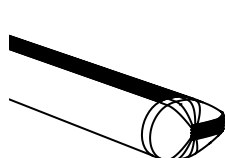


**SA419/
SA536 x 2** ☐

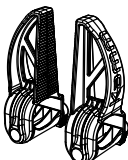

KLS2 x 1 ☐

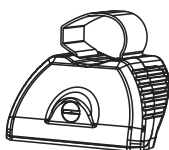


SA397 x 2 ☐

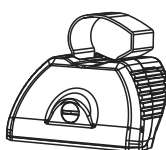


SA398 x 2 ☐


KammBar Fleet

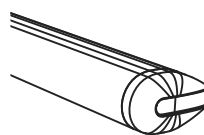


SA460 x 2 ☐



C04 x 2
optional upgrade

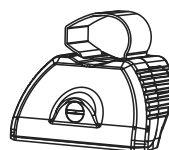


SA397 x 2 ☐

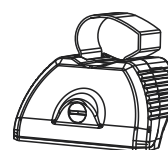


SA398 x 2 ☐

Fitting Kit



PS176 x 4 ☐




PS023 x 4 ☐



FW001 (M6) x 2 ☐




FW008 (M6) x 2 ☐




FW002 (M8) x 2 ☐



FN006 (M8) x 2 ☐




PS020 x 2 ☐




MS209 x 2 ☐




**FB001
(M6 x 55) x 2**
☐



**FS105
(M8 x 55) x 2**
☐

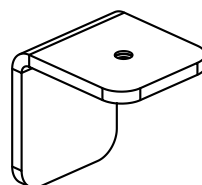


MS390 x 2 ☐

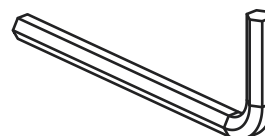


FT01 x 1 ☐


1.

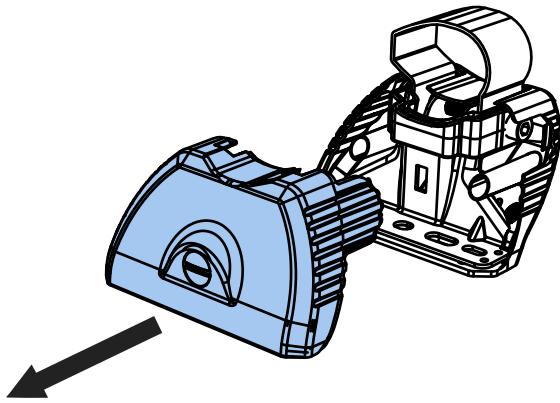

2.

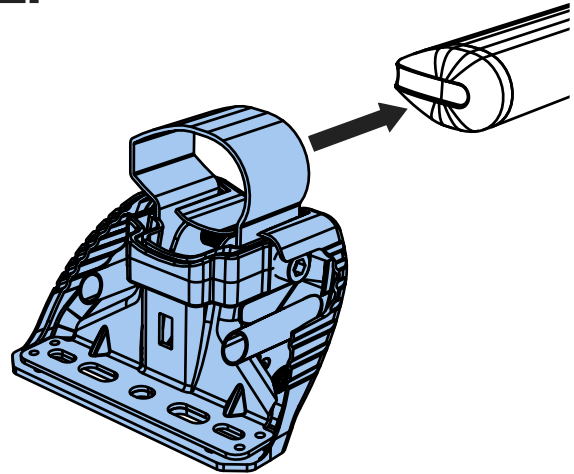

3.




SA397

PS176

SA398




PS176




SA397

PS176


SA398



PS176

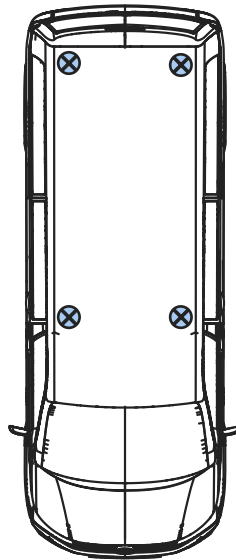


4.

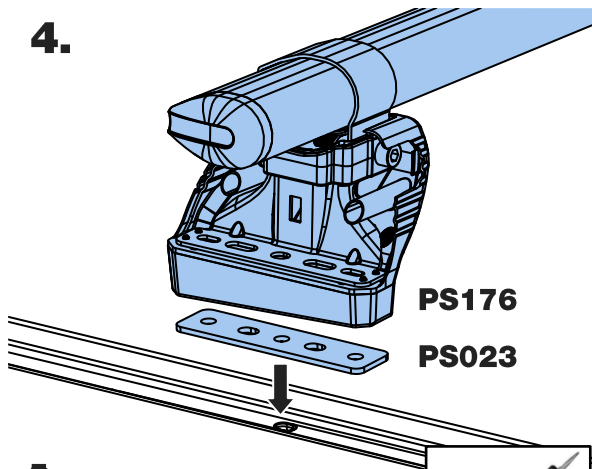


PS176

PS023


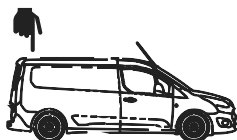


5.

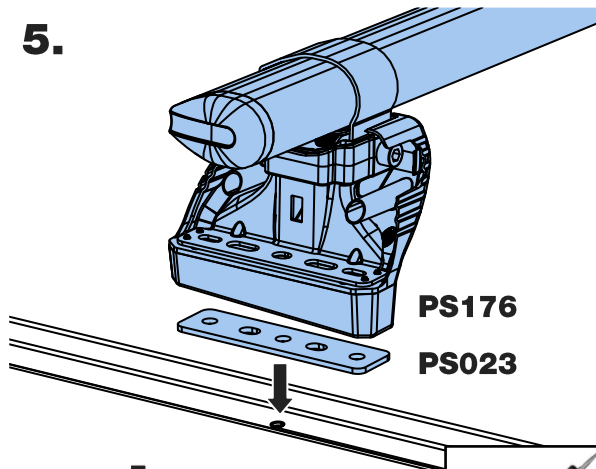


PS176


PS023

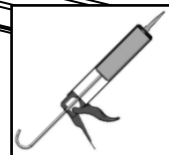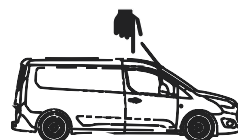


6.

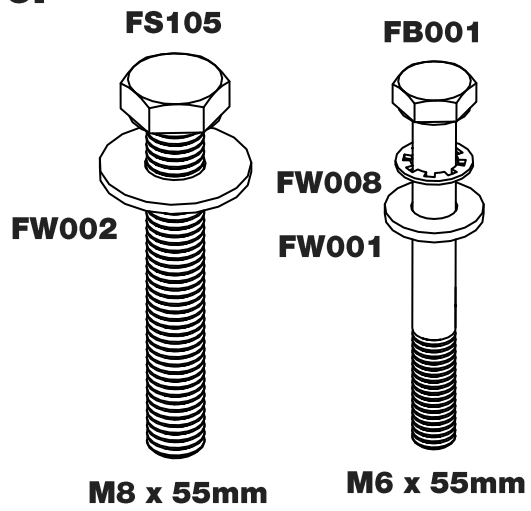


7.

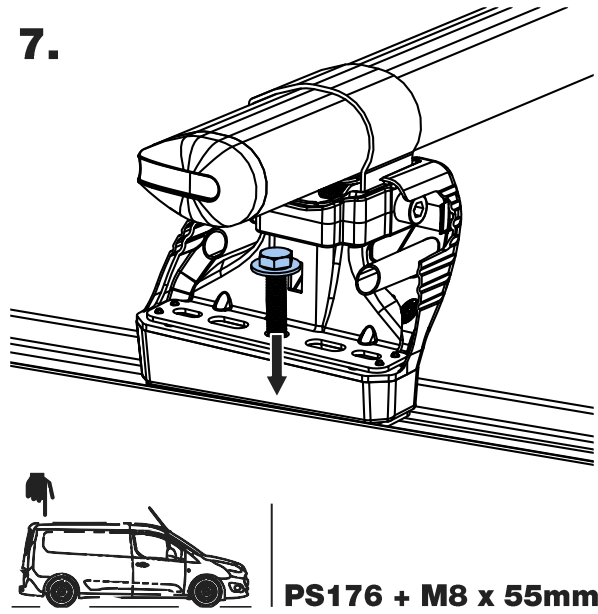


8.

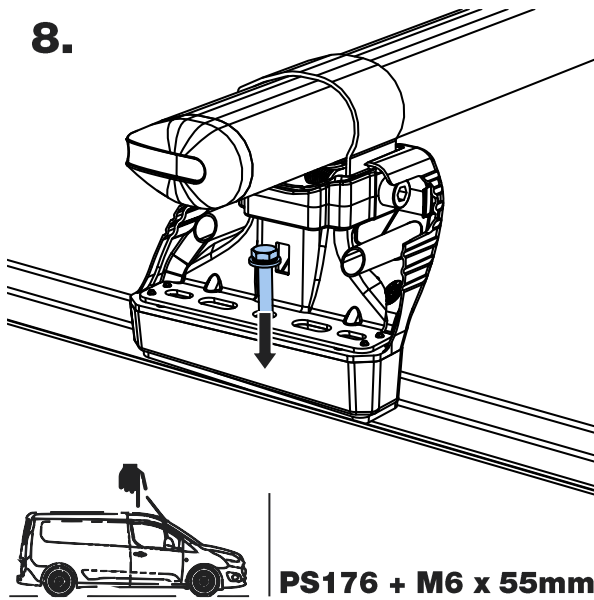


9.

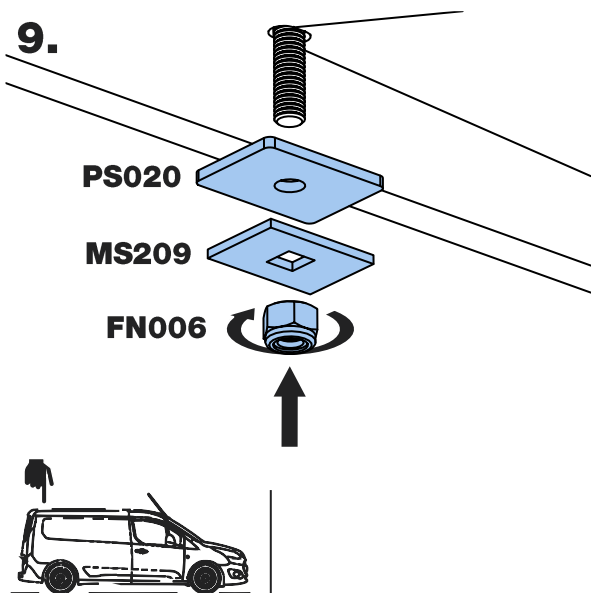


10.

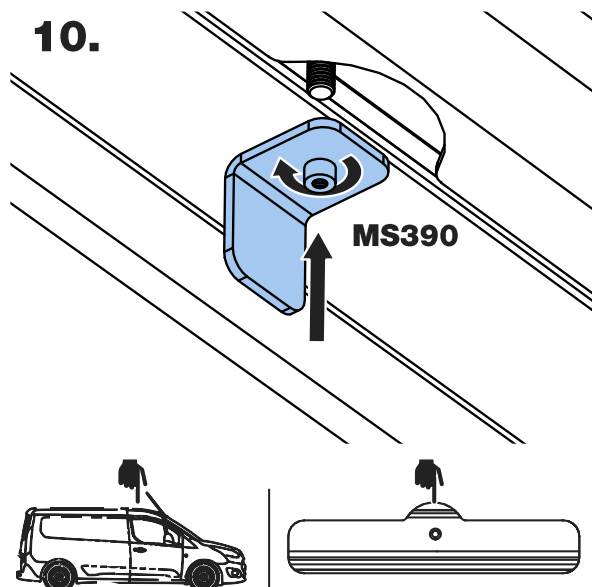


11.

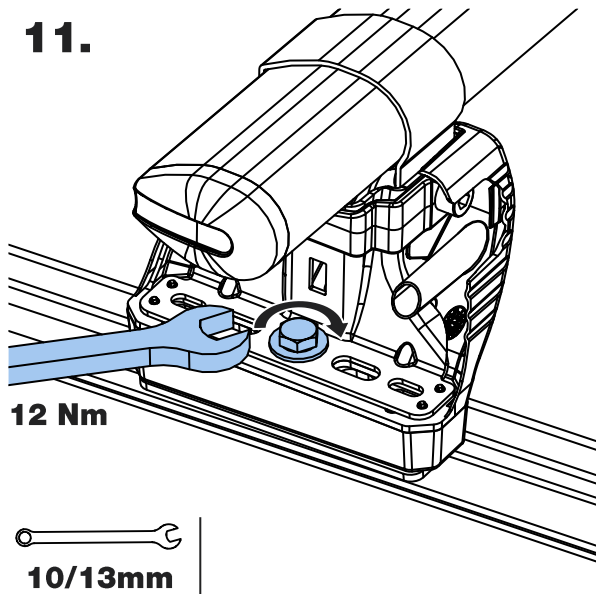


12.

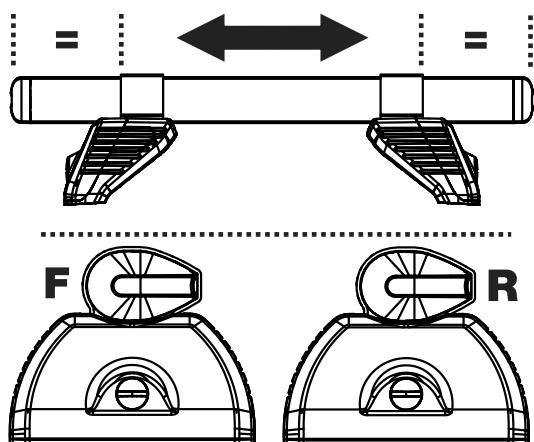

13.

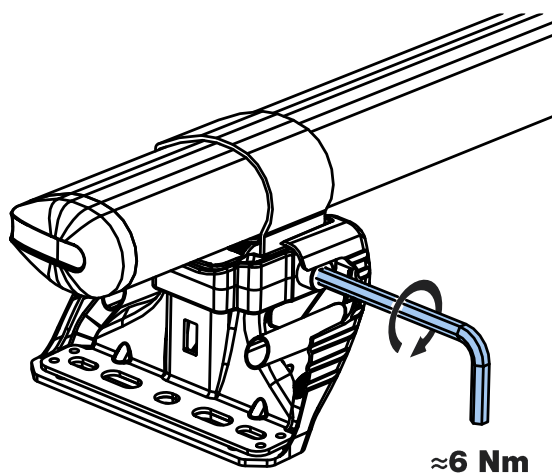

14.

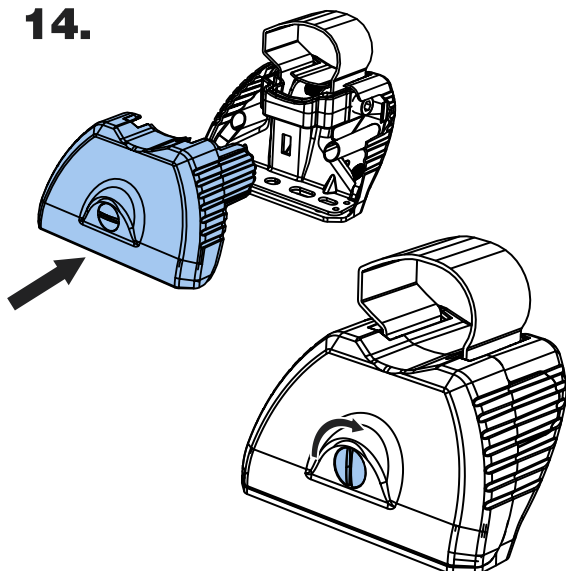

15.

