


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	JH	KB	3178	05/03/24	First Issue
b	FT	KB	3302	10/07/24	Added arial bracket steps
c	YZL	KB	3331	29/08/24	Updated Arial Bracket steps to include new parts.
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					

TF2PR/FL






KammBar

Instructions

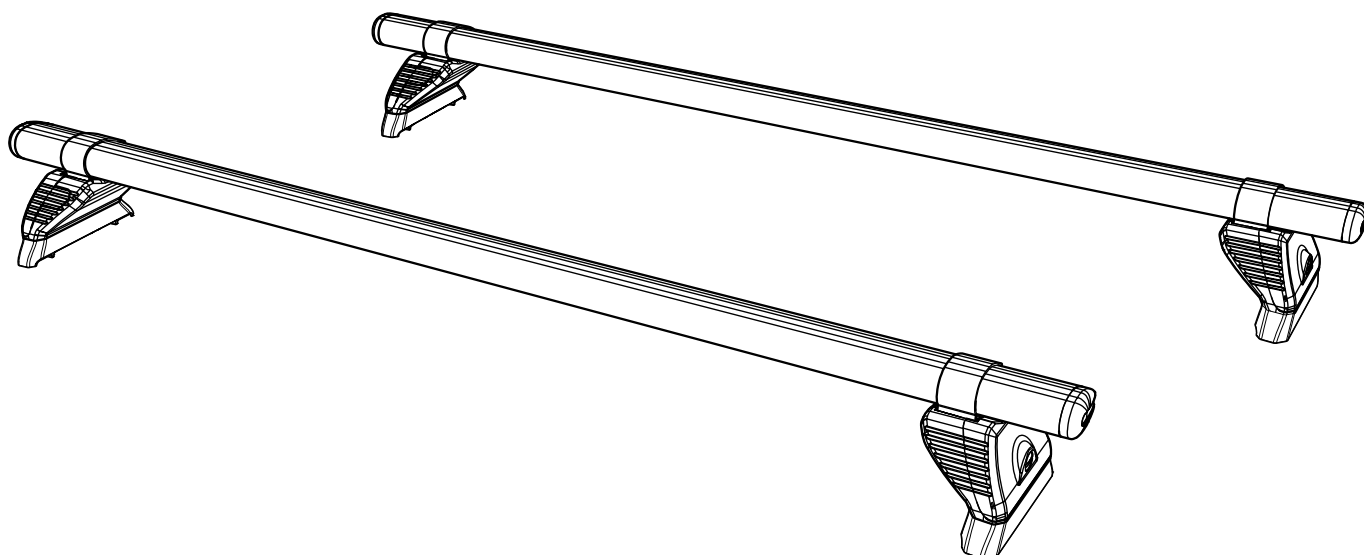


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

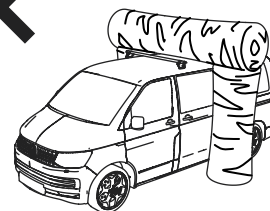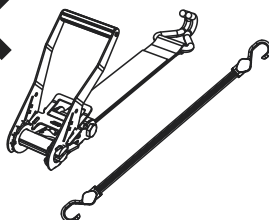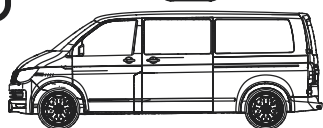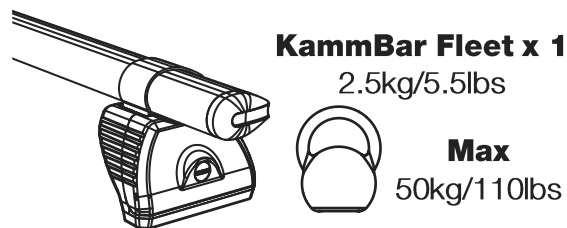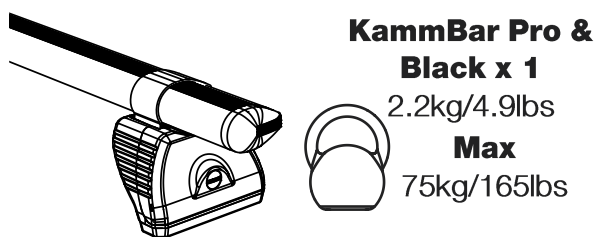


KammBar Pro & Black

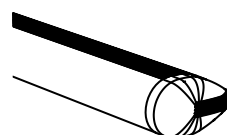


**SA419/
SA536 x 2** ☐

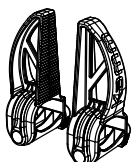

KLS2 x 1 ☐

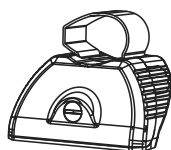


SA397 x 2 ☐

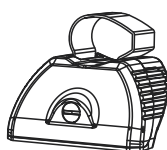


SA398 x 2 ☐


KammBar Fleet

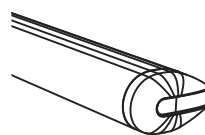


SA393 x 2 ☐




C04 x 2
optional upgrade

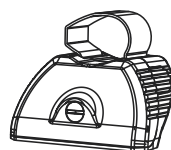


SA397 x 2 ☐

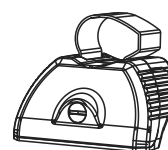


SA398 x 2 ☐




PS183 x 2 ☐




PS176 x 2 ☐



PS046 x 4 ☐

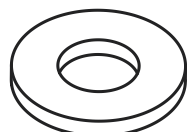


FW001 (M6) x 8 ☐

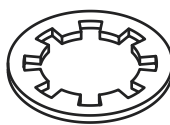


FW008 (M6) x 8 ☐




FT01 x 1 ☐

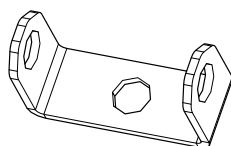

MS2007 x 1 ☐



FN029 x 1 ☐




FS156 x 1
M5 x 8mm ☐




FB001
(M6 x 55)
x 6 ☐

FB005
(M6 x 60)
x2 ☐



FS311 x 1
M5 x 25mm ☐




TP158 x 1 ☐


1.



FORD - 2002542

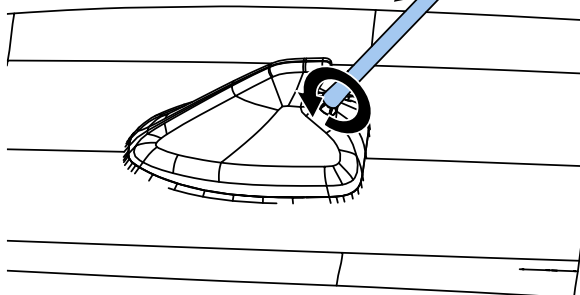


2.

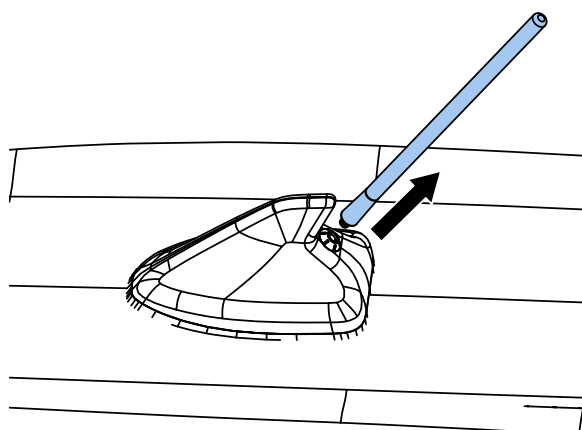

3.

MS2007

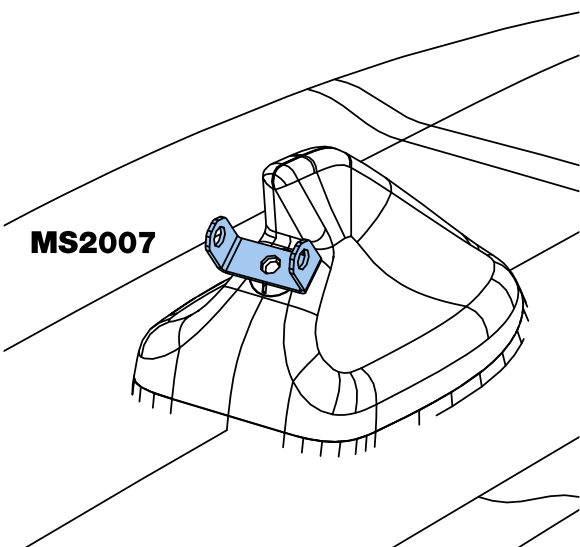

4.

**FS156
M5 x 8mm**


5Nm



5.

FORD - 2002542


TP158







6.


FN029

FS311

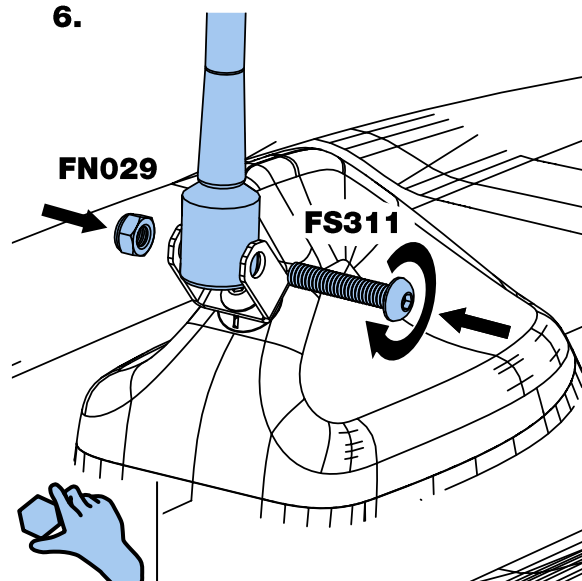


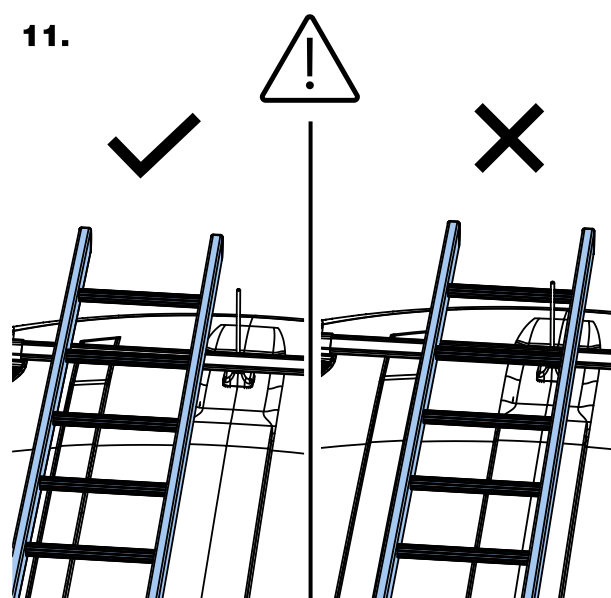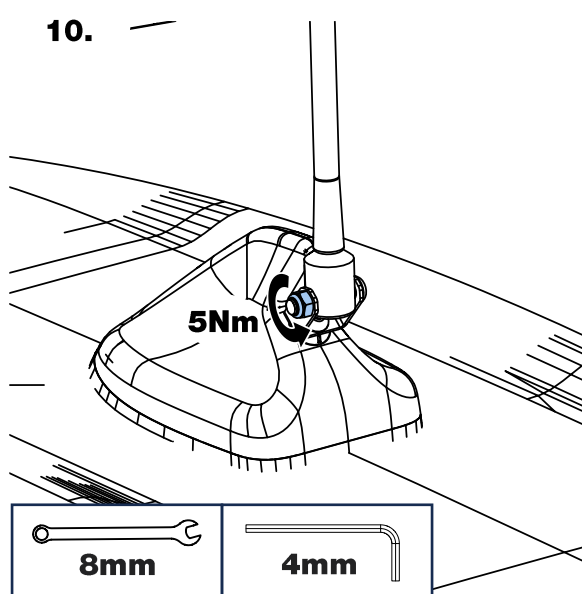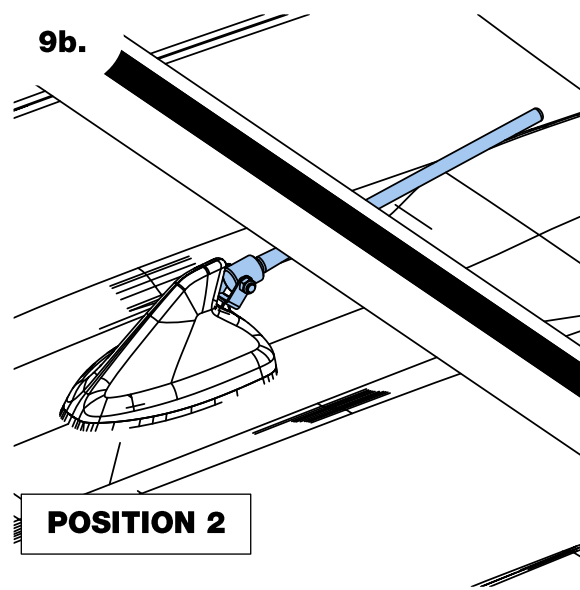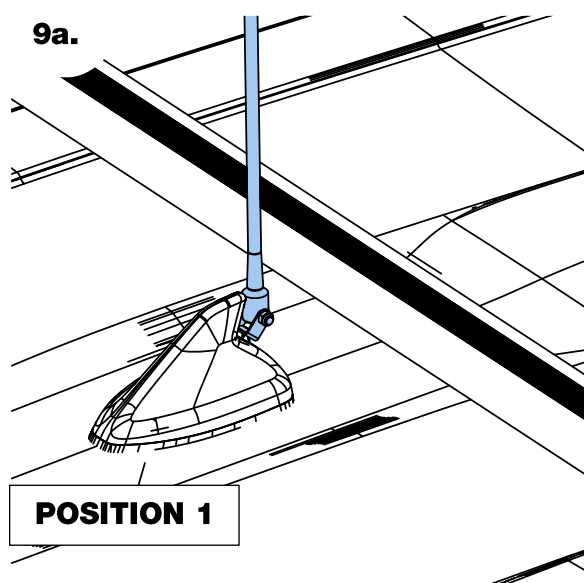


12.

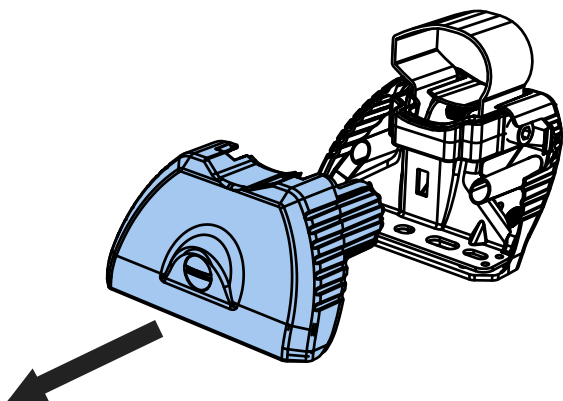


13.

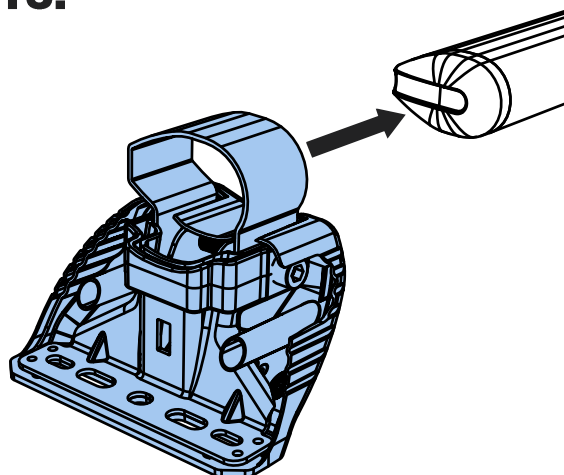


14.

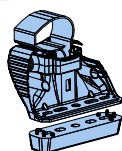


**SA397
PS183**

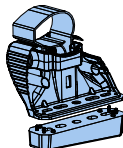


**SA397
PS176**

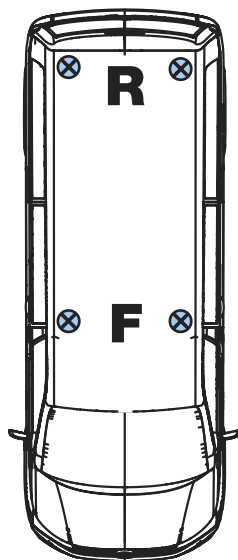


**SA398
PS183**

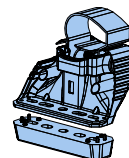

**SA398
PS176**

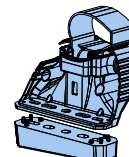


15.

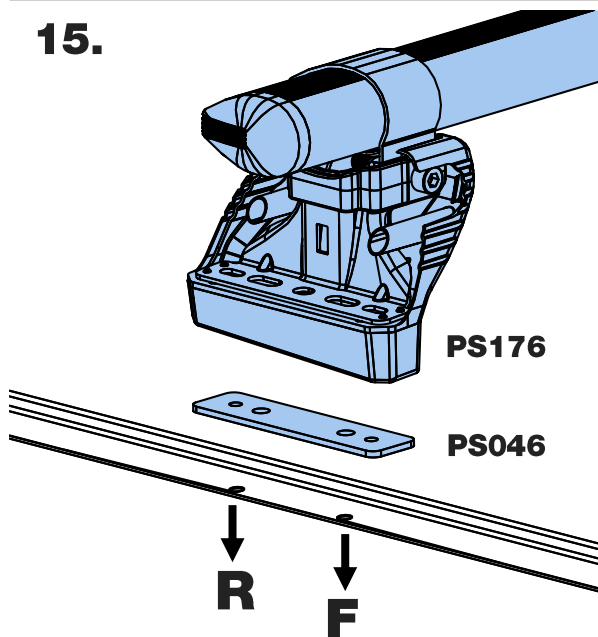

PS176

PS046


16.

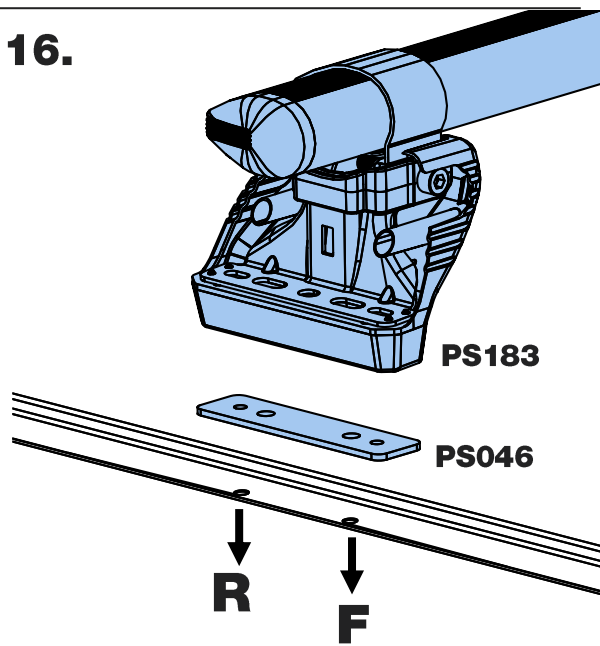


PS183

PS046


17.

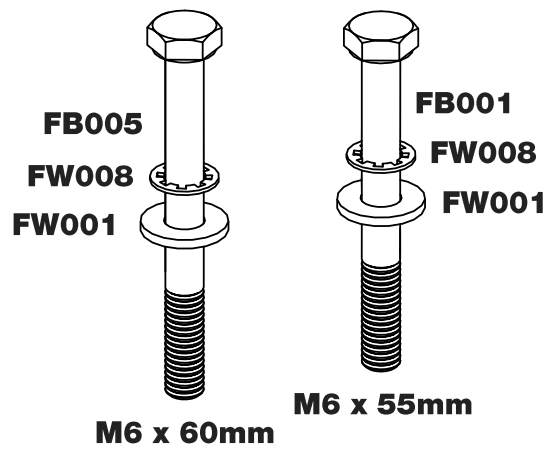


18.

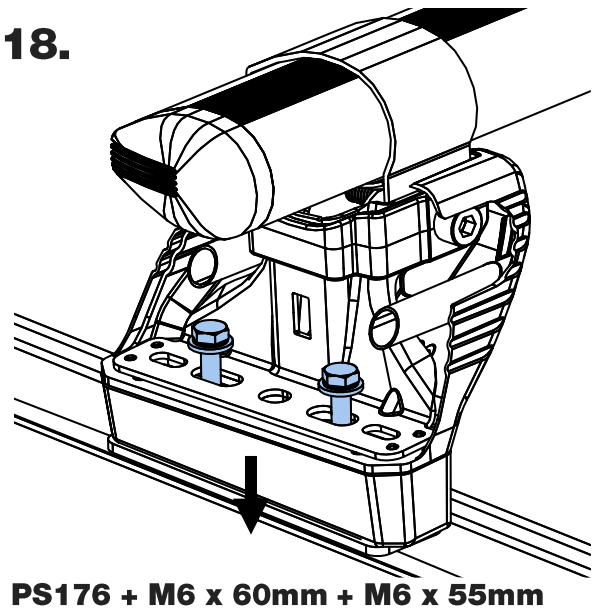


19.

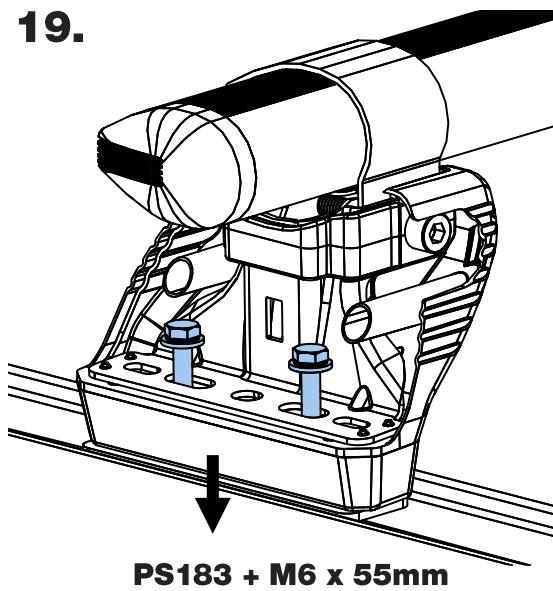


20.

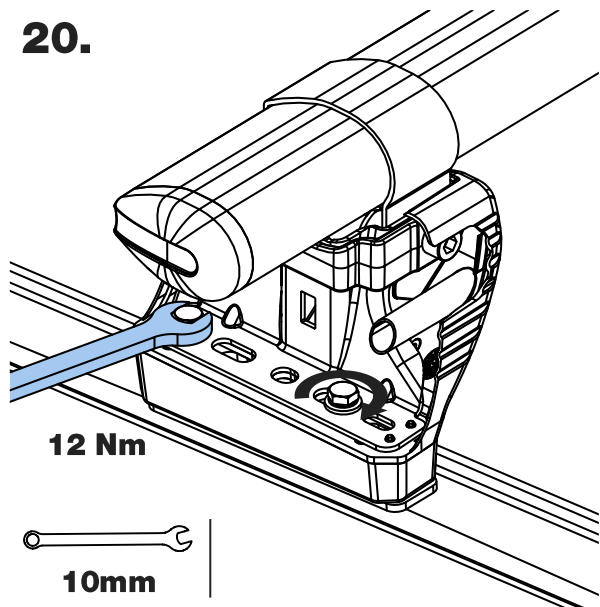


21.

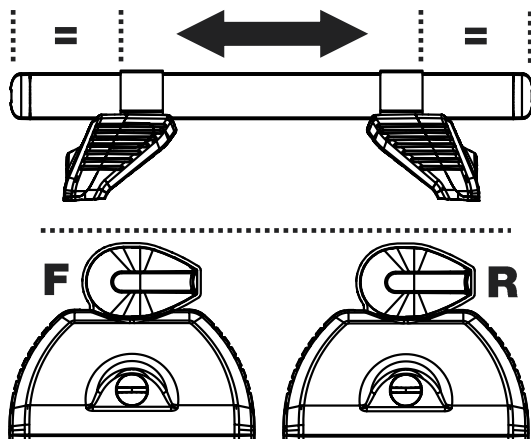

22.

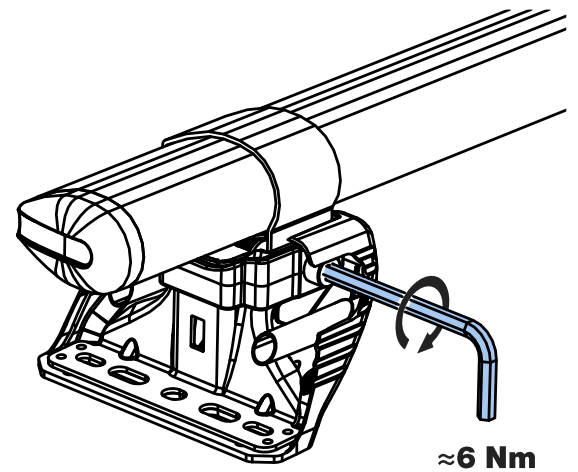

23.

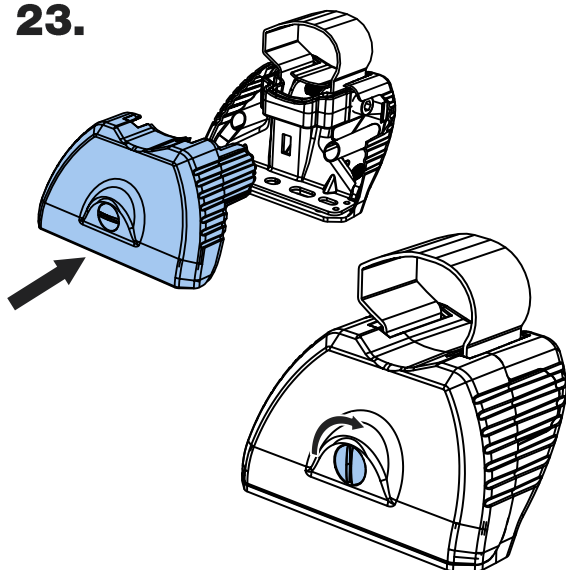

24.

