


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	LE	KB	2699	05/05/22	First Issue
b	LE	KB	2786	18/08/22	Removed TUV label + amended eye icon information (P.3)
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					

TS11Y TowStep

Instructions

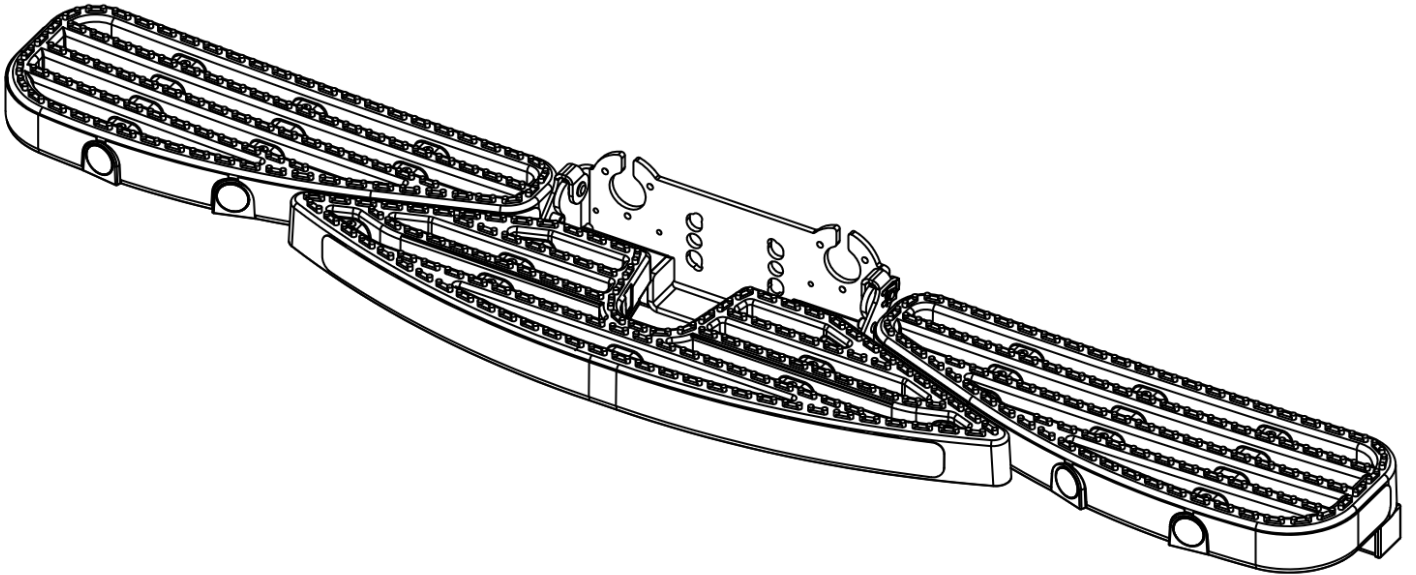

TS11YFI:

CITROEN Dispatch 2019-, Relay/Jumper 2006-

FIAT Ducato 2006-

FORD Transit 2014-, Transit Custom 2012-2018

IVECO Daily 2014-

MAN TGE 2017-

MAXUS Deliver9 2020-

MERCEDES Sprinter 2018-


PEUGEOT Boxer 2006-, Expert 2019-

RENAULT Master 2010-, Trafic 2014-

TOYOTA Proace 2019-

VAUXHALL/OPEL Movano 2010-, Vivaro 2014-



VW Crafter 2017-, T5/T6 2015-

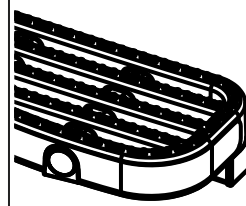


TowStep x 1
13.09kg/28.86lbs



Max
150kg/330lbs




24mm



17mm




8mm




x 1

TowStep

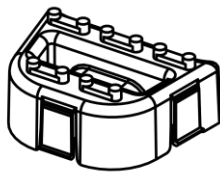


PS508 x 1 ☐

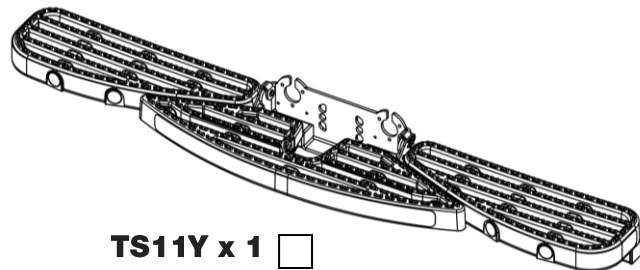

TS11Y x 1 ☐

Fitting Kit



FS132
(M16 x 50)
x 4 ☐



FS140
(M5 x 16)
x 3 ☐




FS136
(M10 x 50)
x 4 ☐




FS137
(M5 x 40)
x 3 ☐




FN045 (M10) x 4
☐

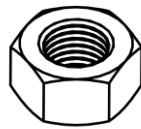

FN043 (M16) x 4
☐

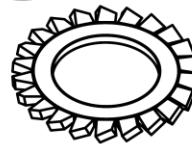


FW023 (M10) x 4
☐

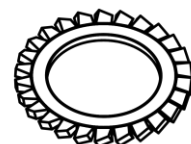


FW024 (M16) x 4
☐



FN029 (M5) x 6
☐



MS504 x 1
☐



MS1150 x 1
(Dixon Bate Only)
☐



PS502 (6mm) x 4
☐





PS503 (16mm) x 4
☐





M16 x 2	Standard 50mm Tow Ball		MS1150 ✗	
	Bradley Ball & Pin (185080815)		MS1150 ✗	PS508 ✓
	Dixon Bate (185002015)		MS1150 ✓ 3b.	
	Crochet à boule 70C (2905019)		MS1150 ✗	PS508
	MULTIS - Crochet à boule mixte (2905080)		MS1150 ✗	✗
M16 x 4	MULTIS - Crochet à boule mixte (2905083)		MS1150 ✗	
	Crochet à boule 70C (2905024)		MS1150 ✗	PS508 ✗
M10 x 4	Universal 4 Hole Flange		MS1150 ✗	
	MULTIS - Crochet à boule mixte (2905081)		MS1150 ✗	PS508 ✗
	Crochet à boule 70C (2905022)		MS1150 ✗	✗
	Euro 4 Bolt & Pin (185075015)		MS1150 ✗	PS508 ✓





A. M10 x 4

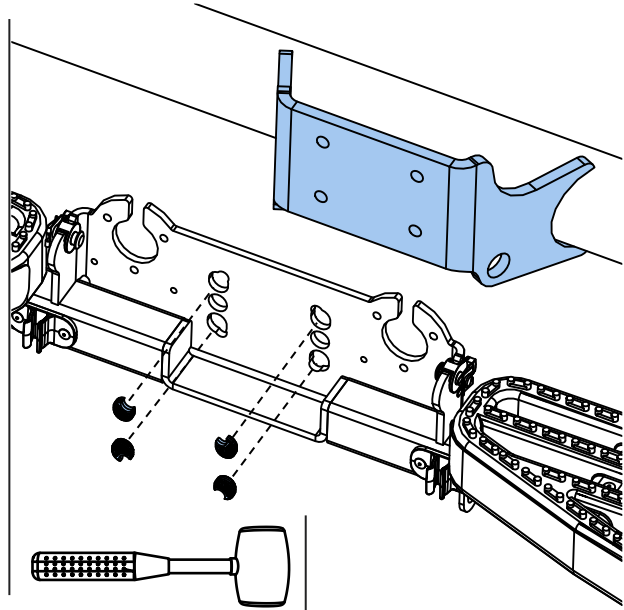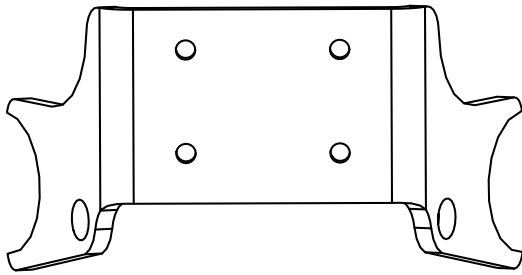


B. WITTER

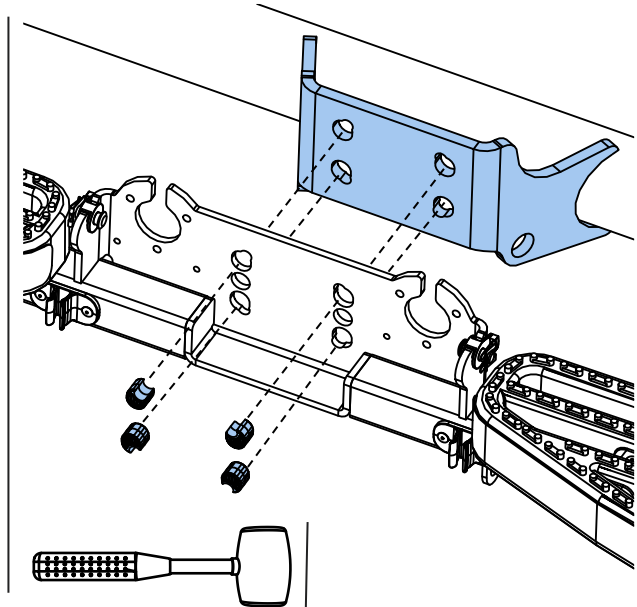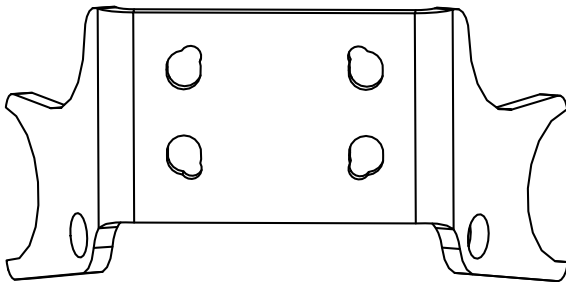


C. M16 x 4

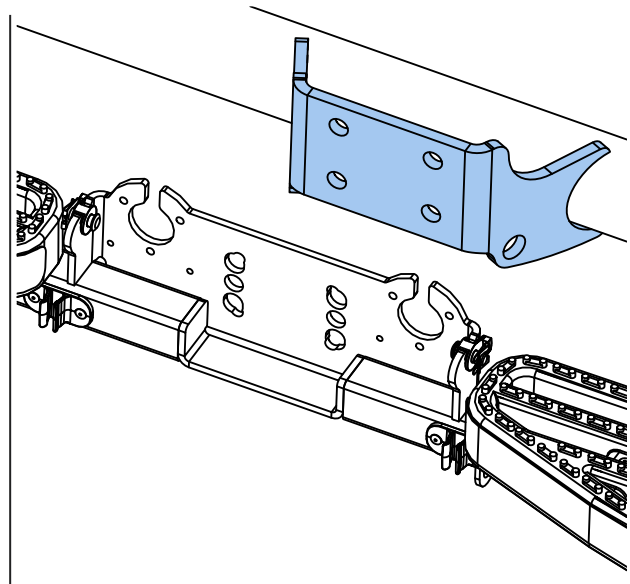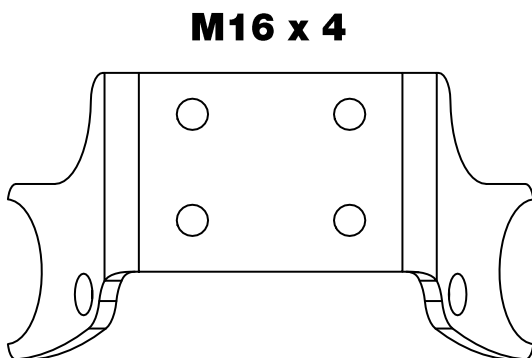


1.

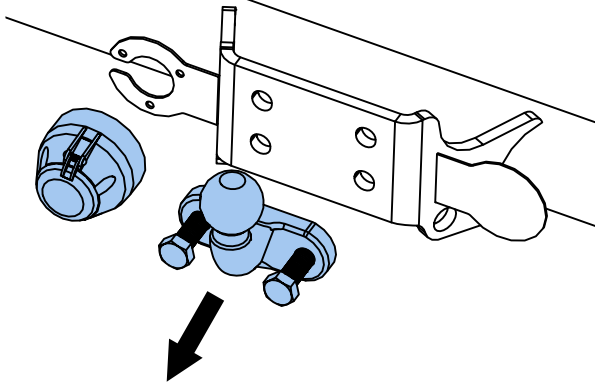


2.

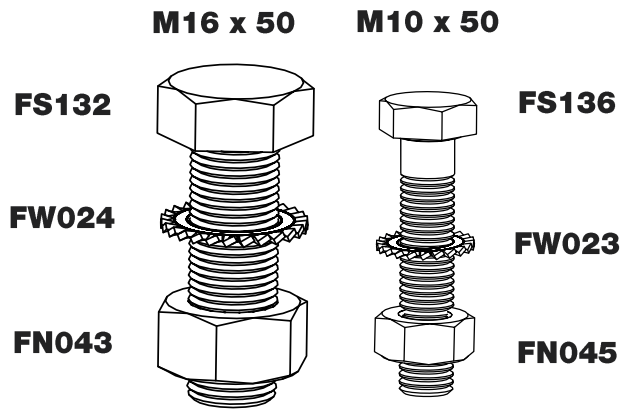

3a.


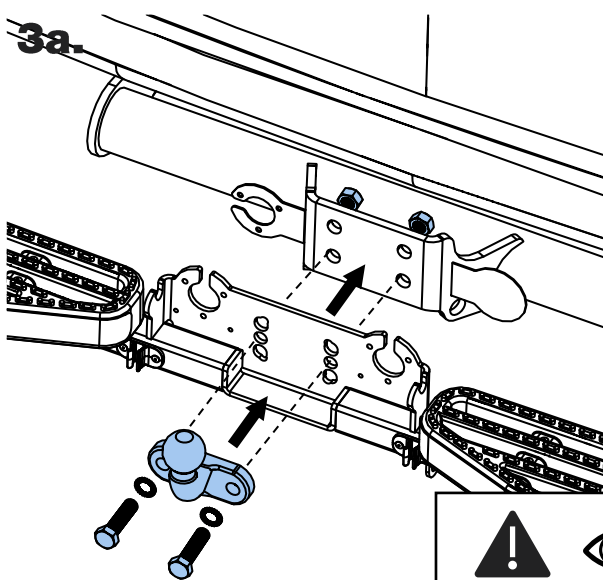


3b.

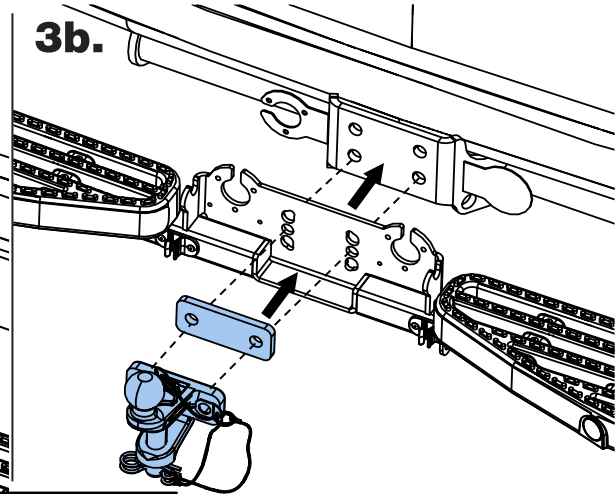


(Dixon Bate Only)

4.






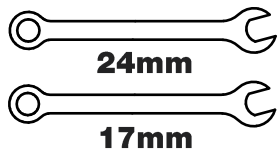
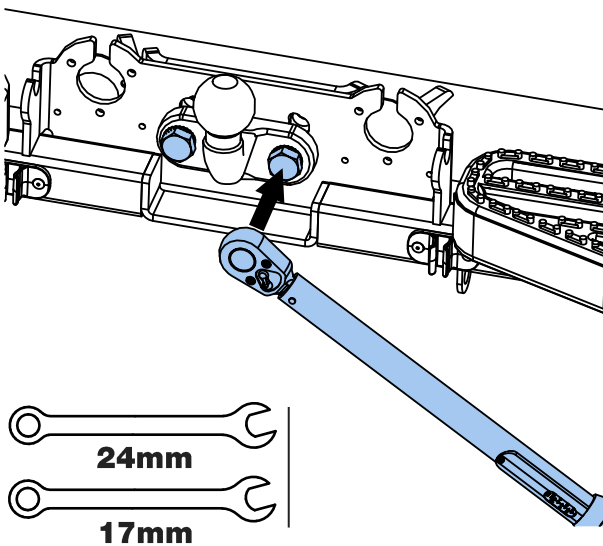








5.

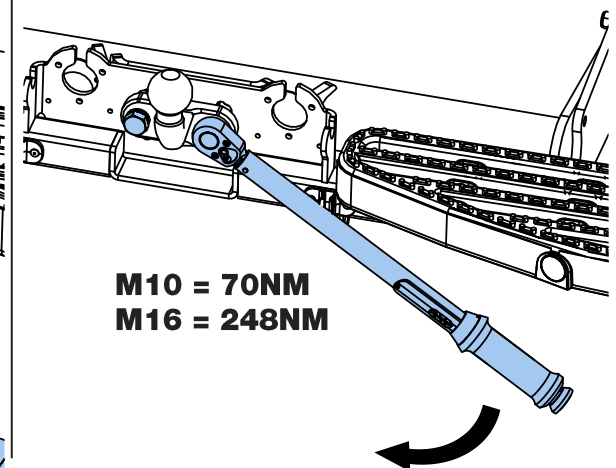


**M10 = 70NM
M16 = 248NM**

6.

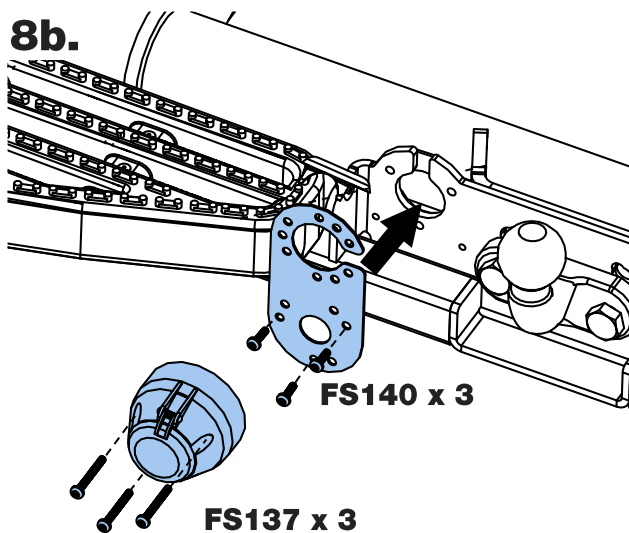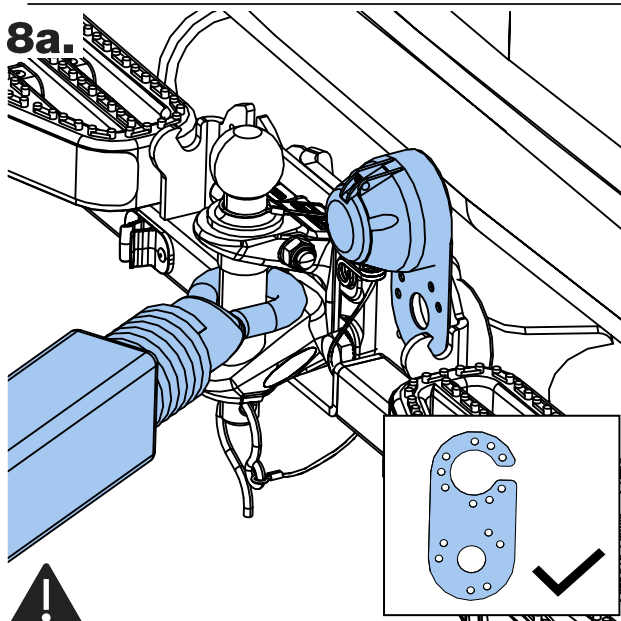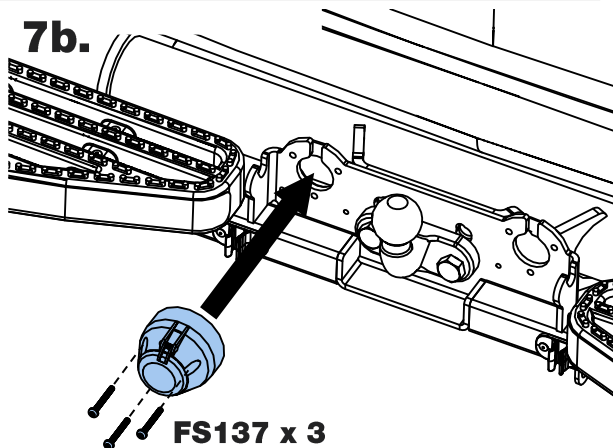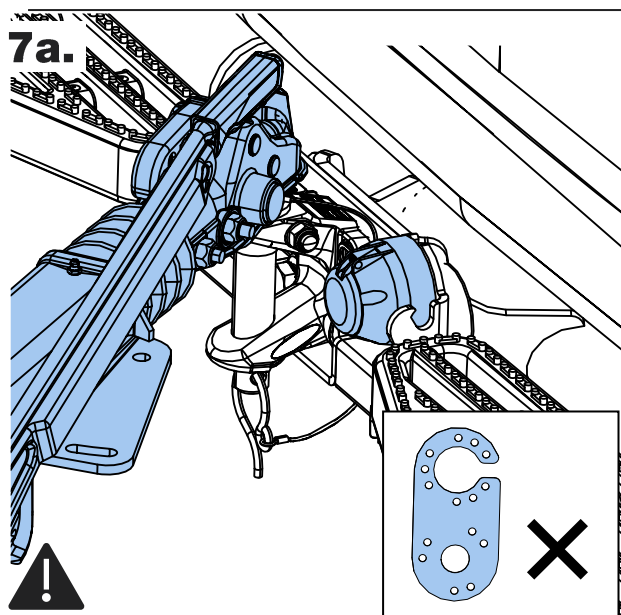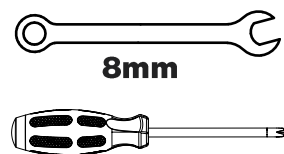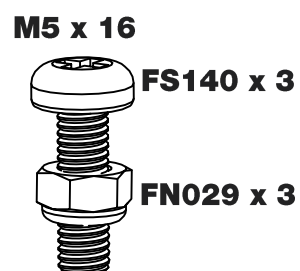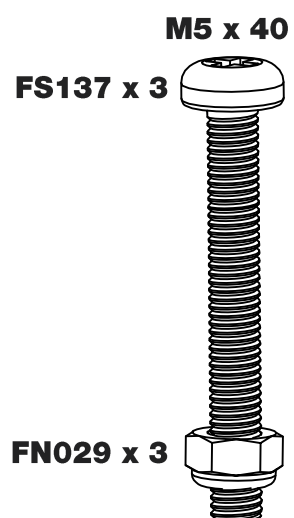

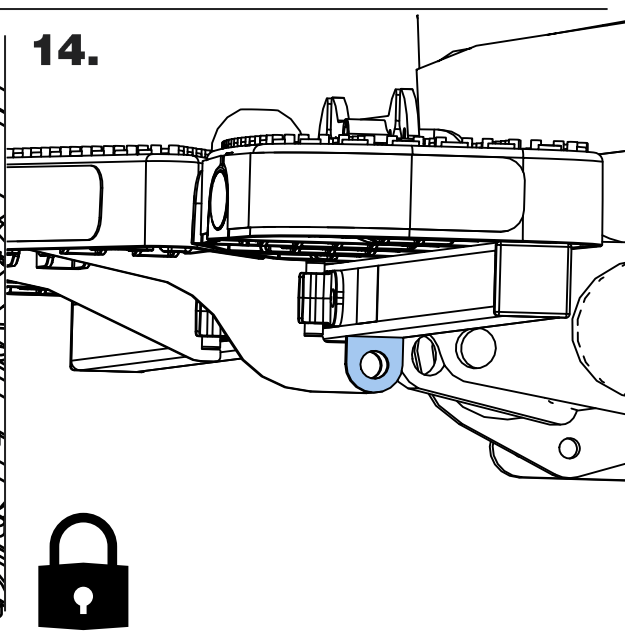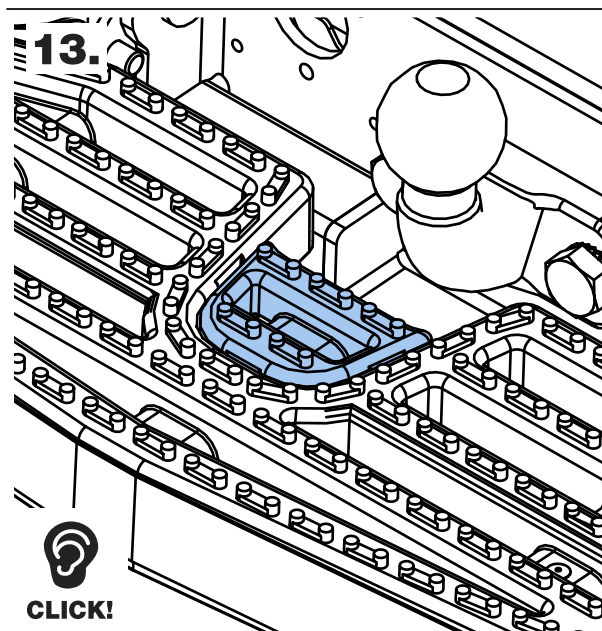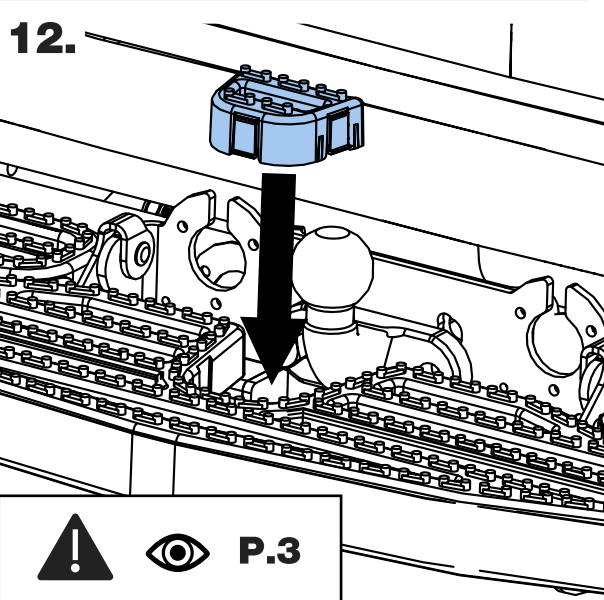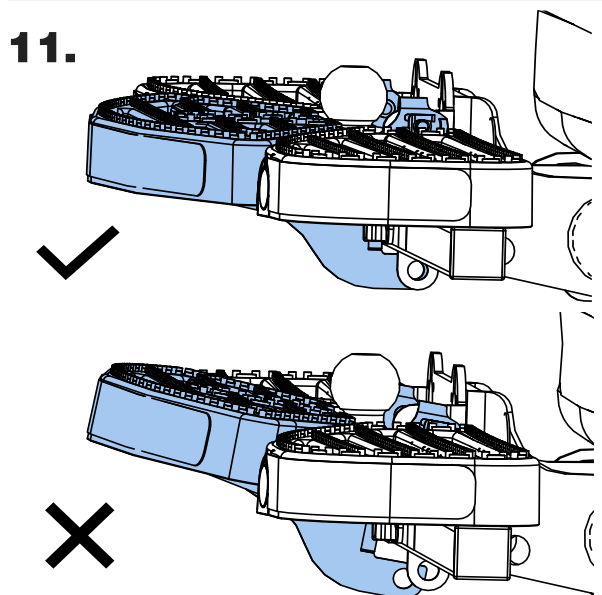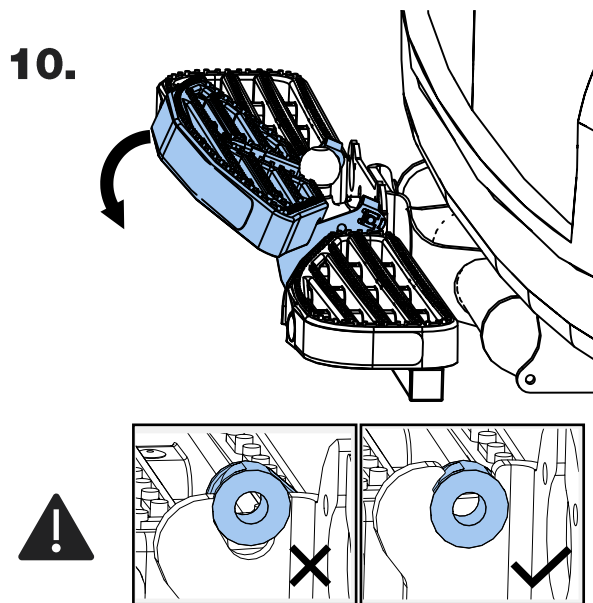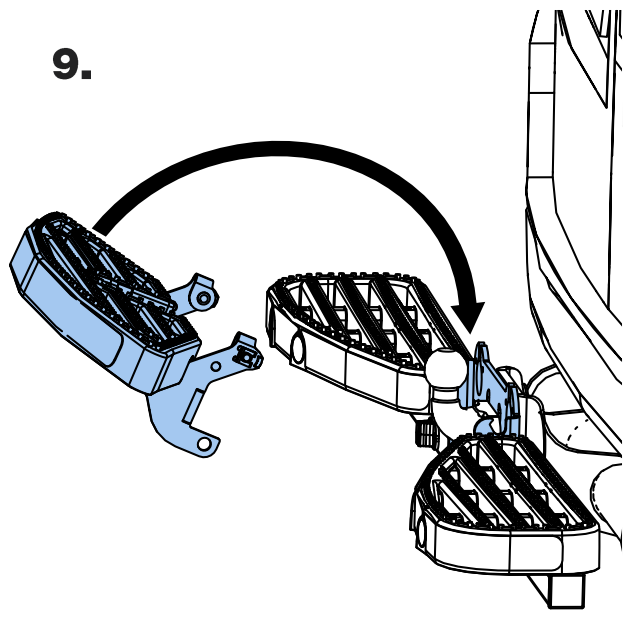

15.

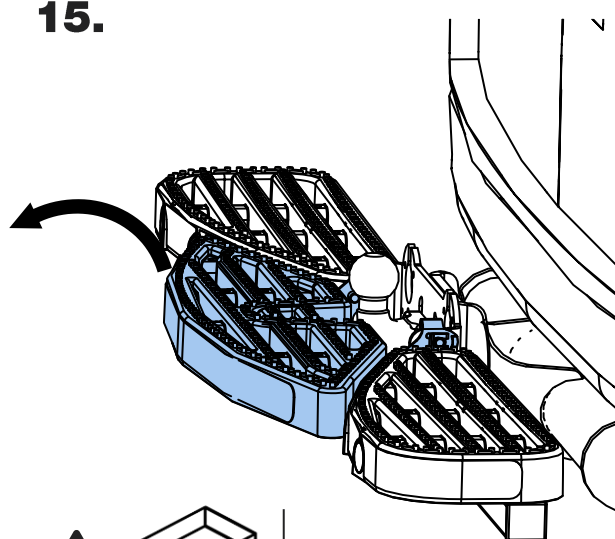

16.

