


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	AVR	KB	3464	07/04/25	First Issue
b					
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					

XF2BAFI


XF2BA KammBar

Instructions

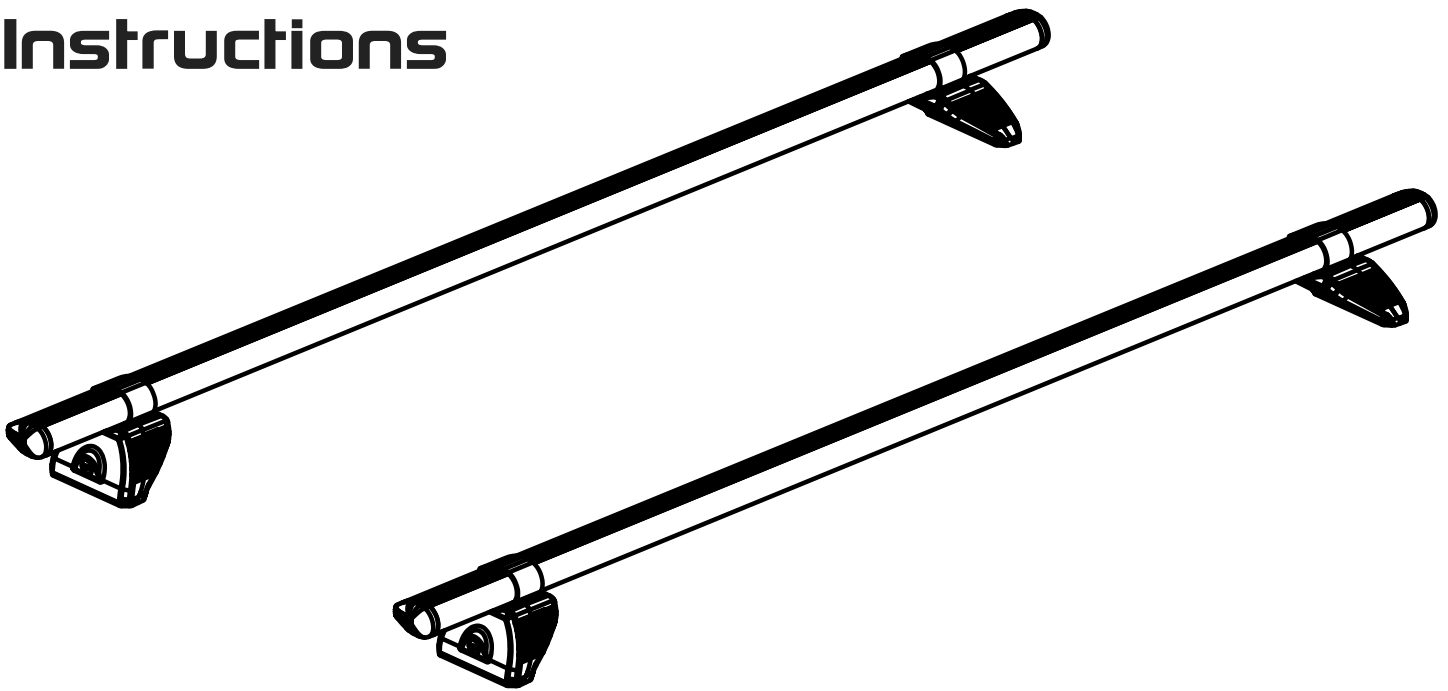


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

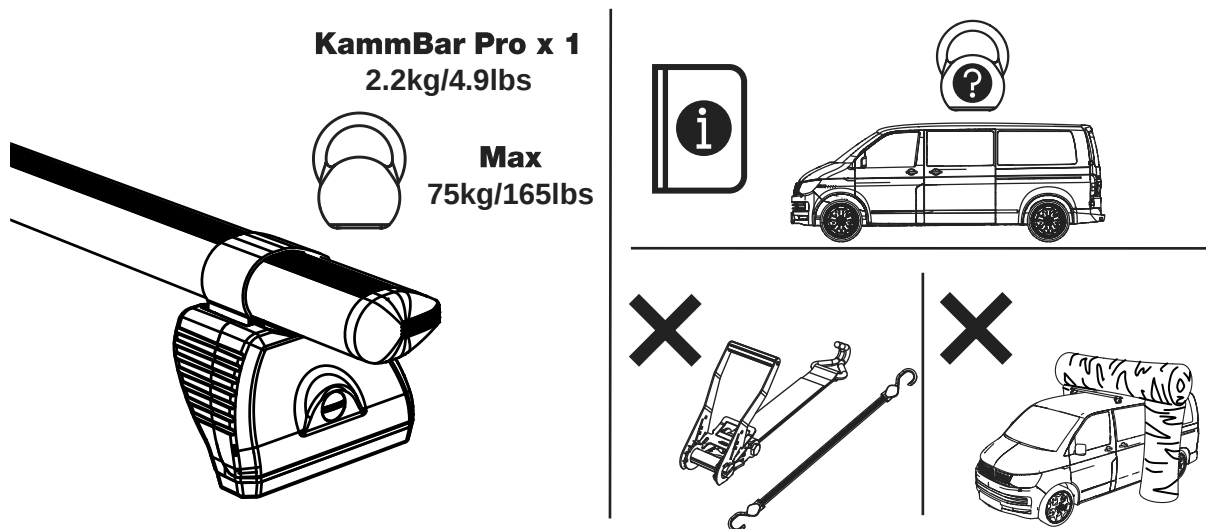


KammBar Pro

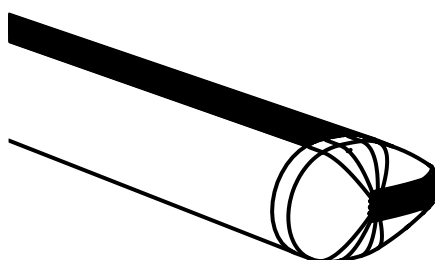


SA538 x 2 ☐

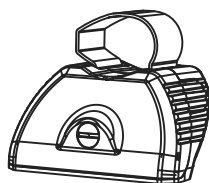

SA397 x 2 ☐

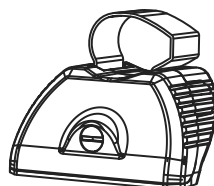


SA398 x 2 ☐

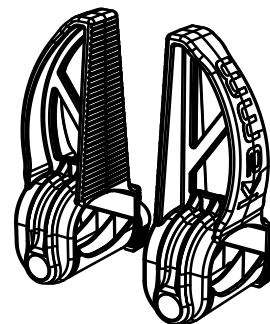


KLS2 x 1 ☐


Fitting Kit

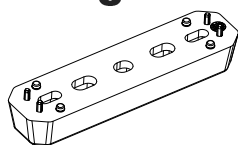


PS183 x 2 ☐

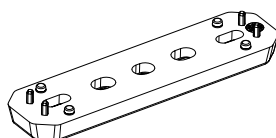

PS178 x 2 ☐

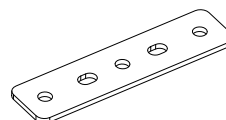


PS023 x 4 ☐

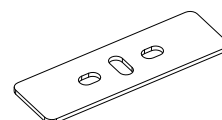


MS1511 x 4 ☐




FN006 (M8)
x 4




FW002 (M8)
x 8



FS105
(M8 x 55) x 2






FS101
(M8 x 45) x 2




FW009 (M8)
x 4



FT01 x 1 ☐

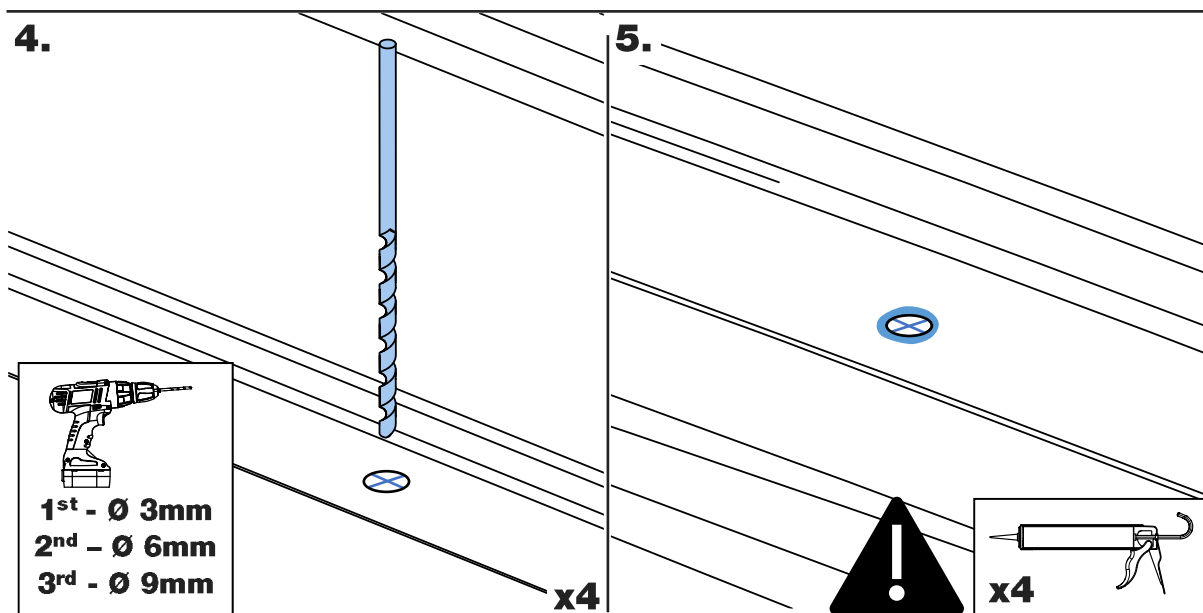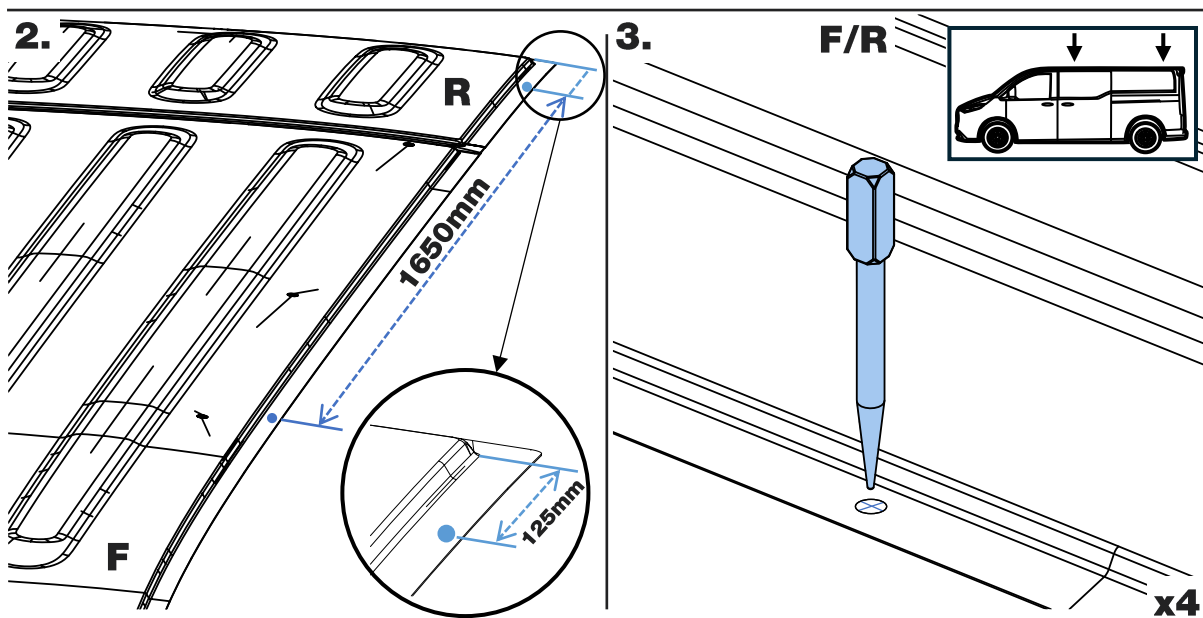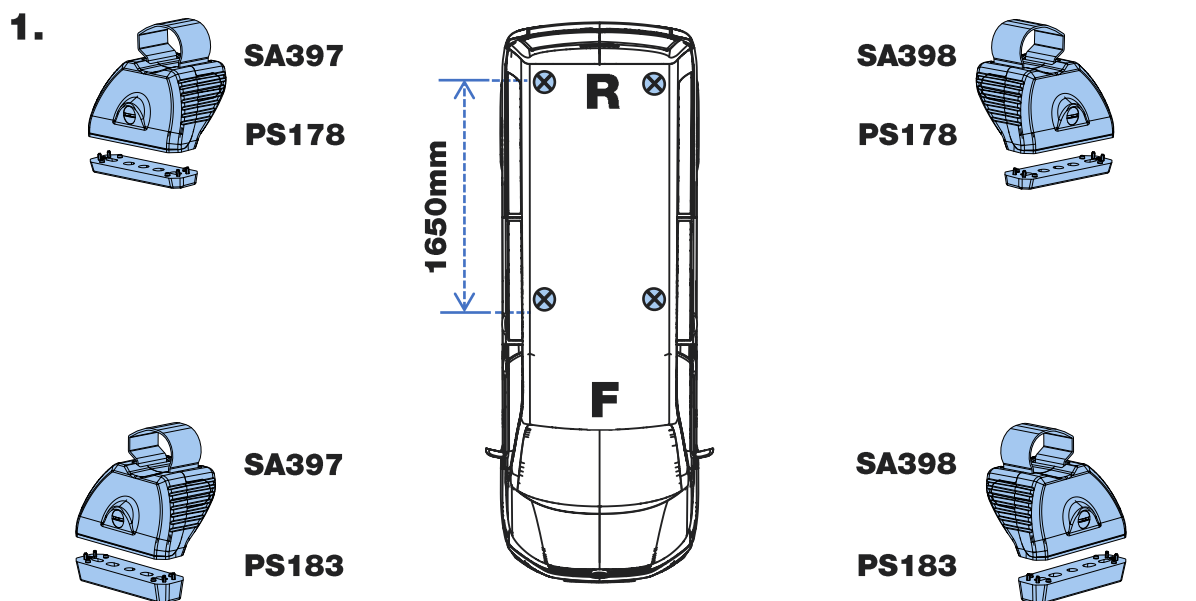


6.

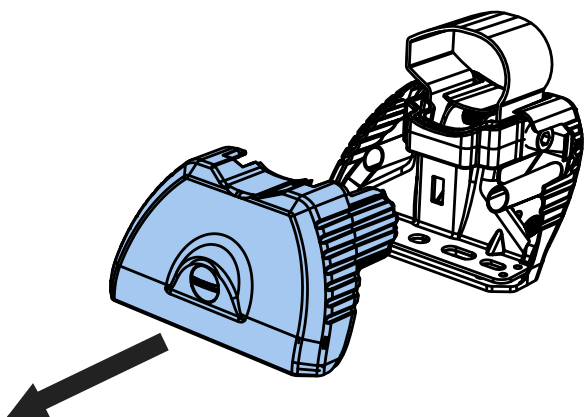


x4

7.

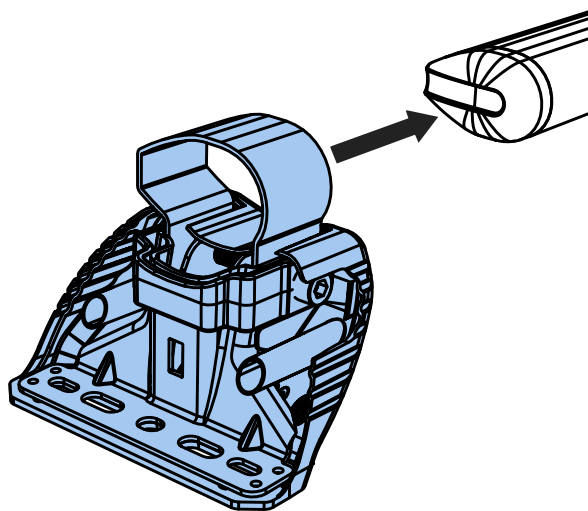


x4

8.

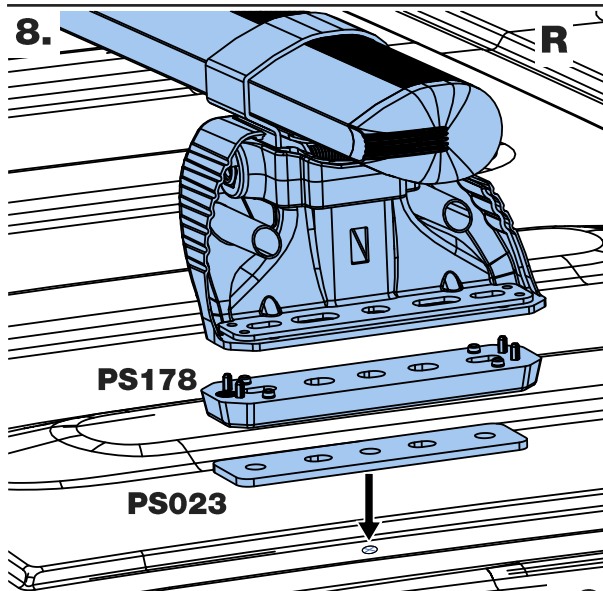


x2

9.

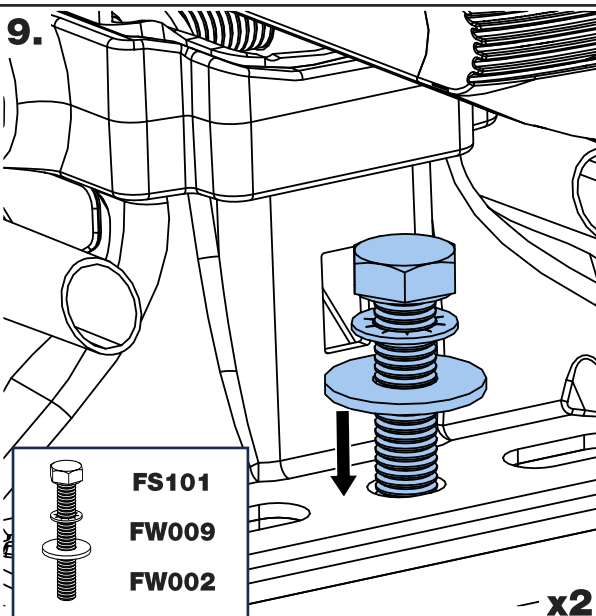


x2

10.






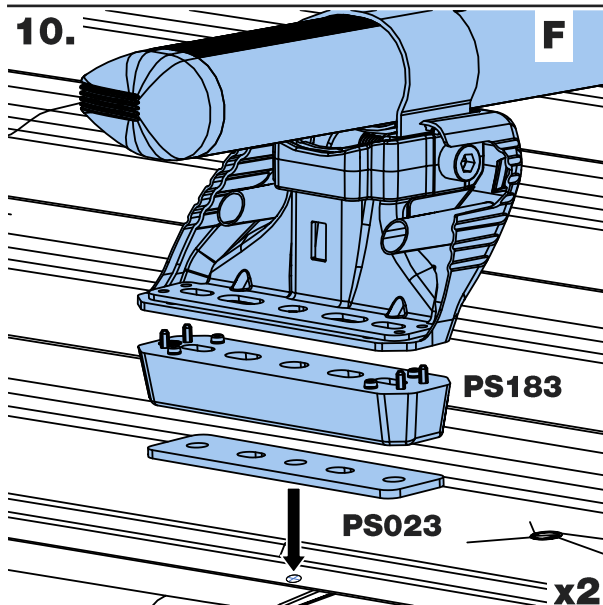


x2

11.

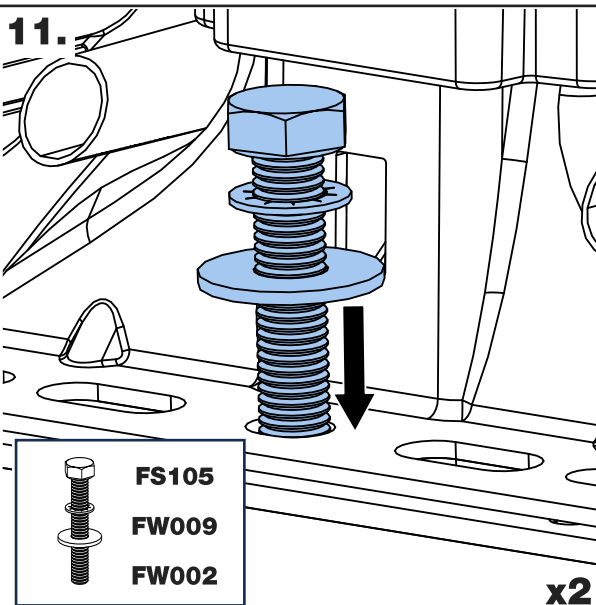

x2

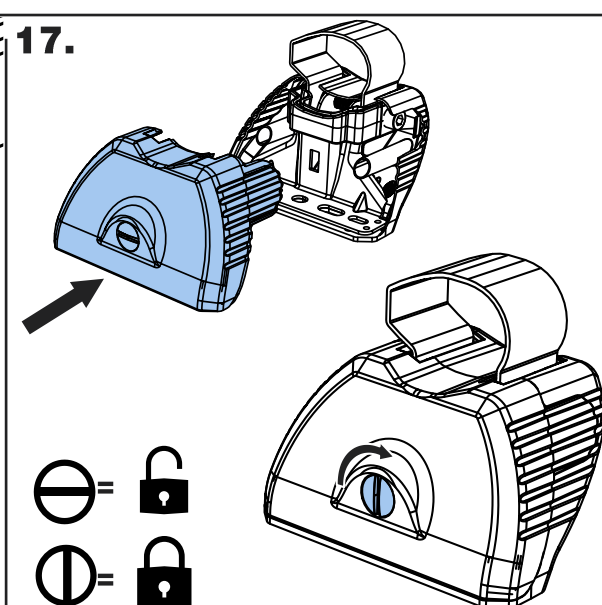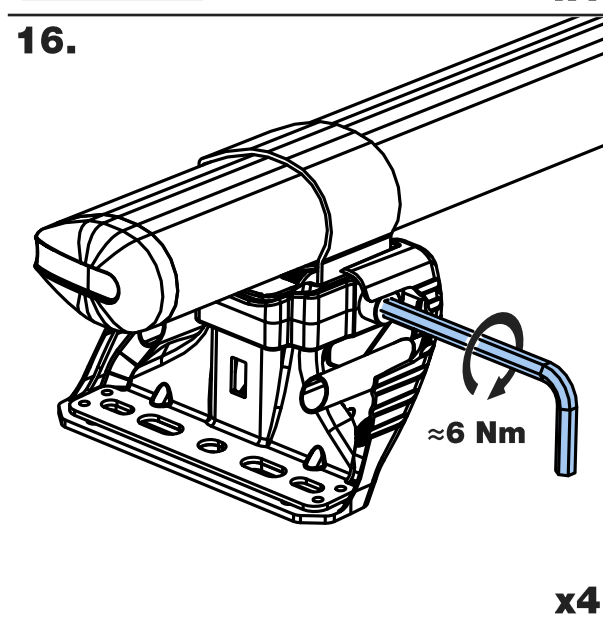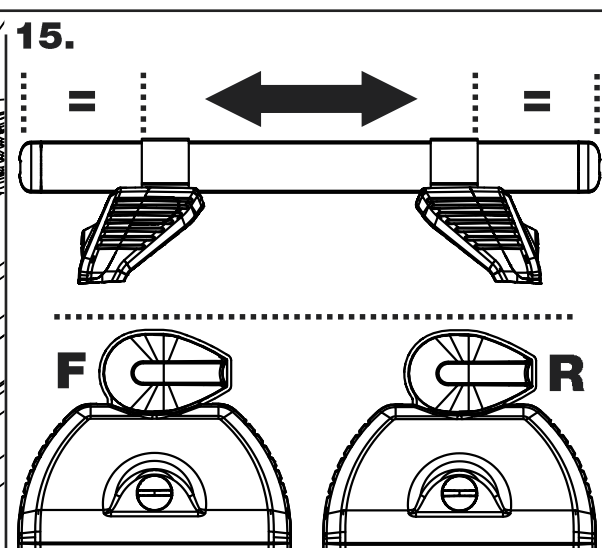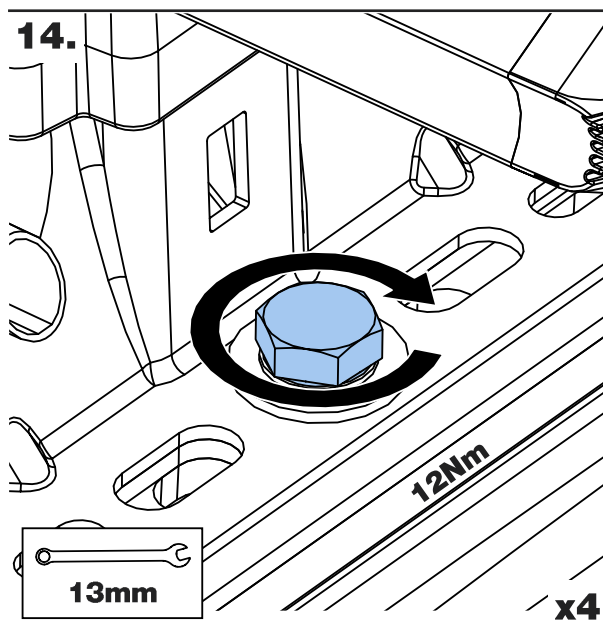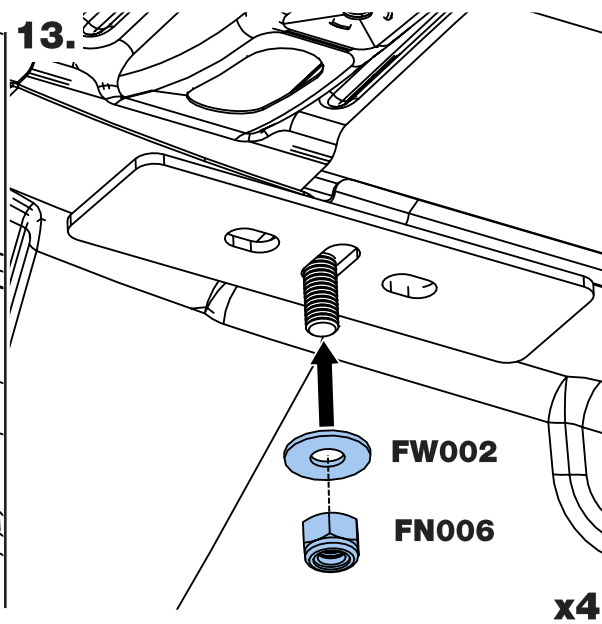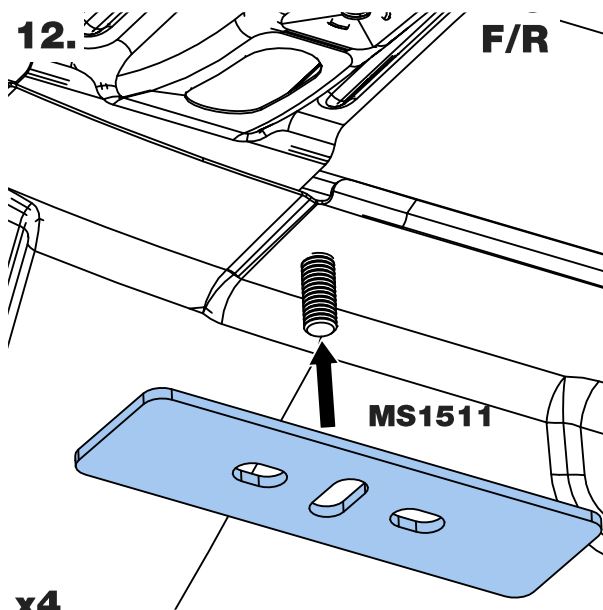

18.

