

Installation Manual

NISSAN NOTE 5DR
NIS-NOTE-5-A



COMPONENTS INCLUDED



FIXING CLIPS



CL-M05 x 6



CL-P02 x 1



CL-M02 x 2




CL-T01 x 1



CL-W01 x 1



SIDE SHADE INSTALLATION

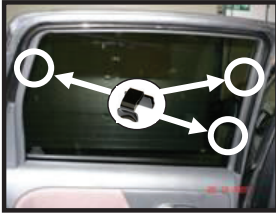

 **WARNING**

Please read these fitting instructions BEFORE installing the sunshades. Take care not to scratch any paint work when fitting the clips

PORT SHADE INSTALLATION



Installation

NISSAN NOTE 5DR

NIS-NOTE-5-A




TAILGATE SHADE INSTALLATION

WARNING

1. It is important that you clean the surface using the wipes provided before installing the clips
2. Once the clips have been fitted, leave them to stand for 30 mins before installing the sunshades.
3. Clips must not be removed once fitted.



1.

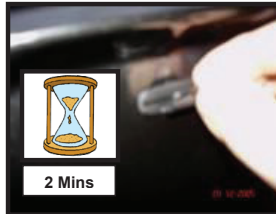

2.



3.



4.



5.

