

Installation Manual

PEUGEOT 1007 3DR
PEU-1007-3-A




COMPONENTS INCLUDED



SIDE WINDOWS X2



FRONT SIDE WINDOWS X2

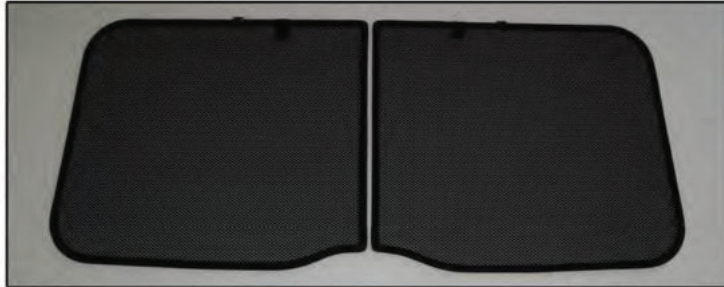

TAILGATE WINDOW X2




CL-M02 x 6




CL-P02 x 4



CL-M03 x 2

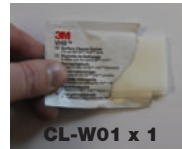

CL-W01 x 1

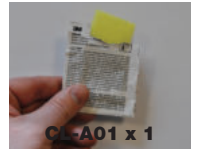

CL-A01 x 1







Installation

PEUGEOT 1007 3DR

PEU-1007-3-A

SIDE SHADE INSTALLATION

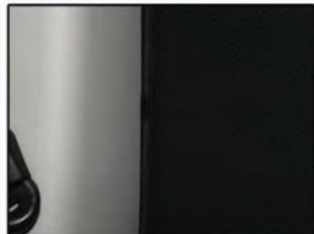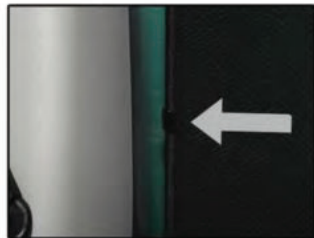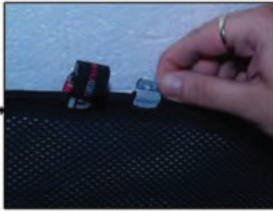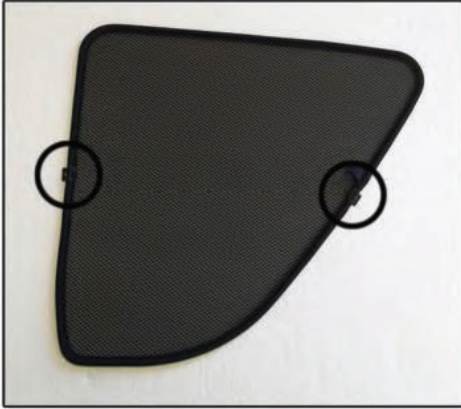

Installation

PEUGEOT 1007 3DR

PEU-1007-3-A



SIDE SHADE INSTALLATION



X2


Installation

PEUGEOT 1007 3DR

PEU-1007-3-A



FRONT SIDE SHADE INSTALLATION



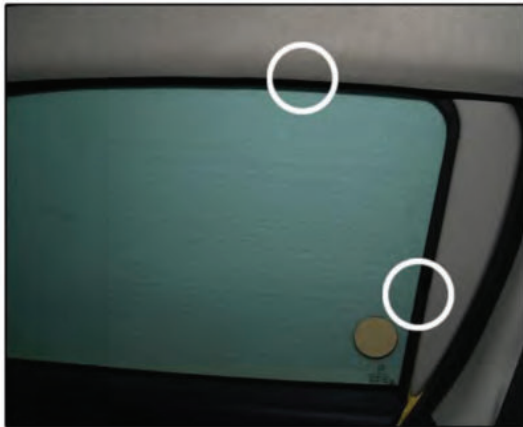


Installation

PEUGEOT 1007 3DR

PEU-1007-3-A

FRONT SIDE SHADE INSTALLATION

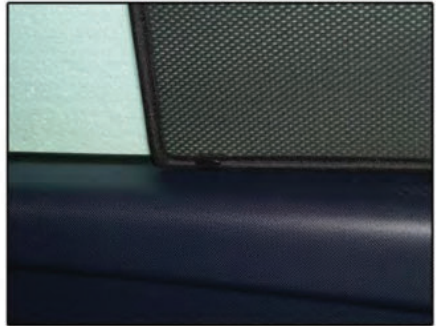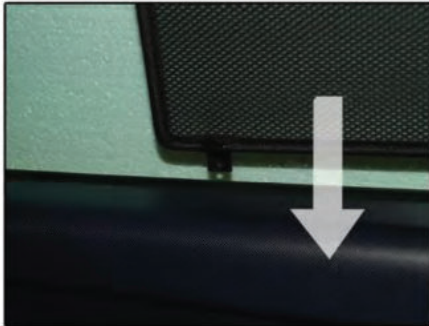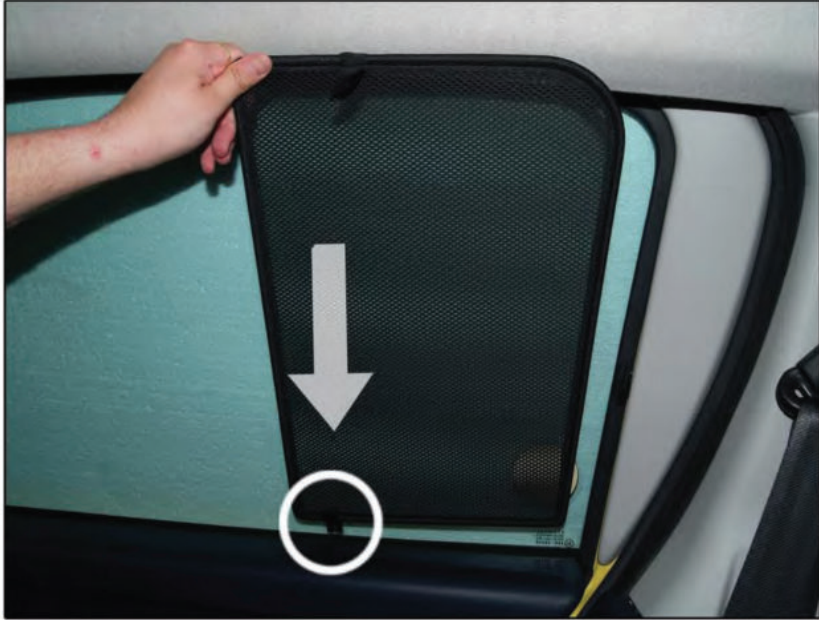


Installation

PEUGEOT 1007 3DR

PEU-1007-3-A

FRONT SIDE SHADE INSTALLATION

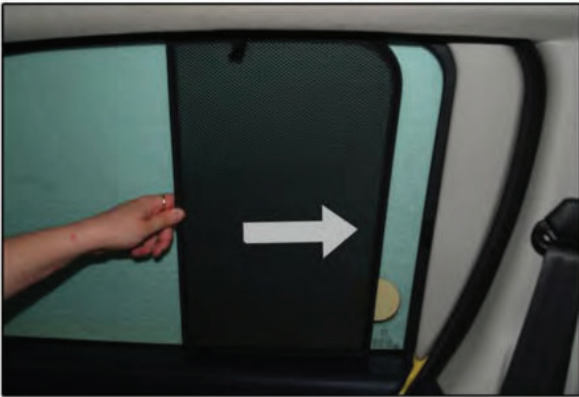

X2



Installation

PEUGEOT 1007 3DR

PEU-1007-3-A



TAILGATE SHADE INSTALLATION

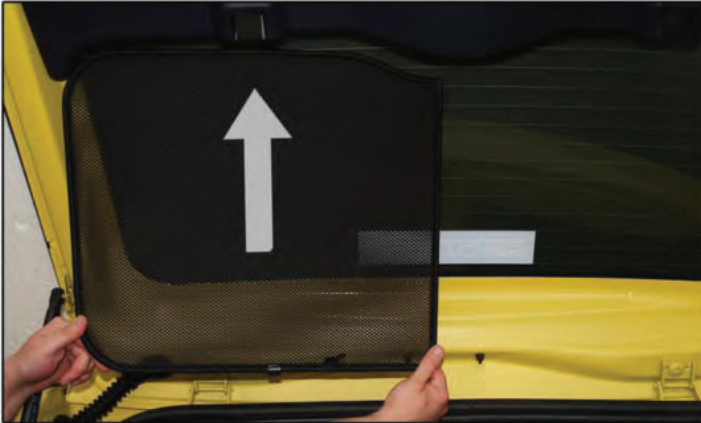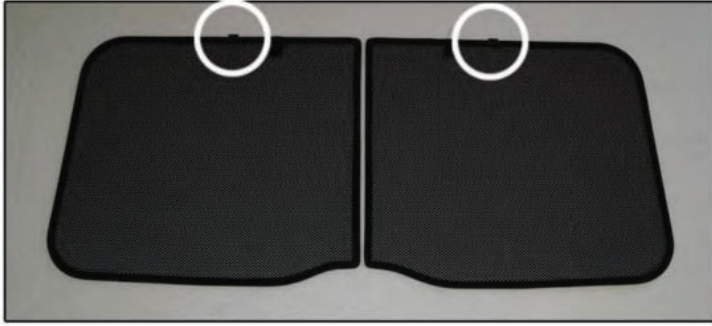

Installation

PEUGEOT 1007 3DR

PEU-1007-3-A



TAILGATE SHADE INSTALLATION



X2

Installation

PEUGEOT 1007 3DR

PEU-1007-3-A



TAILGATE SHADE INSTALLATION



X2