


Installation Manual

SKODA SUPERB 5DR
SKO-SUPE-5-C



COMPONENTS INCLUDED

SHADES

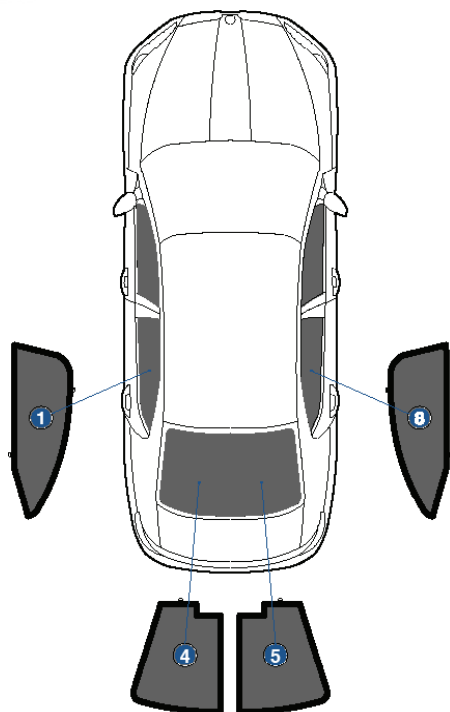

CAR
SHADES

FIXING CLIPS



CL-M12 x 2



CL-P02 x 2



CL-M11 x 6



CL-M03 x 2



CL-M14 x 2



CL-W01 x 1



CL-T01 x 1

Side Shade Installation

SKODA SUPERB 5DR
SKO-SUPE-5-C


COMPONENTS NEEDED:



-  CL-M11 x 3
-  CL-M03 x 1
-  CL-T01 x 1

STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP

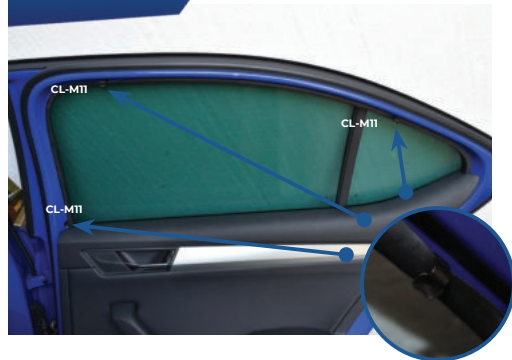

STEP #2

ATTACH CLIPS ON SHADE EDGE



STEP #3

POSITION THE SIDE SHADE



STEP #4

ATTACH SIDE SHADE BEHIND CLIPS



STEP #5

ENSURE SECURELY FITTED IN PLACE



CAR
SHADES

Rear Shade Installation

SKODA SUPERB 5DR
SKO-SUPE-5-C

COMPONENTS NEEDED:



STEP #1

CLEAN THE AREA WHERE CLIPS ARE TO BE MOUNTED (AS IN STEP 2) WITH THE SURFACE CLEANER SACHET PROVIDED



STEP #2

PRESS THE CLIPS FIRMLY INTO PLACE AND ALLOW TO DRY FOR 20 MINUTES



STEP #3

INSERT CLIPS BEHIND INTERIOR TRIM




STEP #4

REPEAT THE PROCESS ON OTHER SHADE



STEP #5

ENSURE SECURELY FITTED IN PLACE

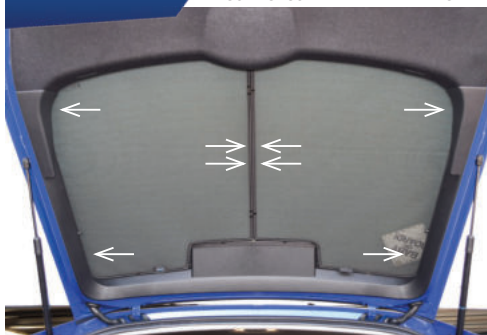

CAR
SHADES