



FROM 2008 TO 2017

Peugeot Partner
Citroën Berlingo




**READ THE GENERAL INSTALLATION
PROCEDURE CAREFULLY BEFORE
INSTALLATION**

REAR DOOR



1. Remove the panels from both rear doors. 2. Position the drilling template. The longitudinal axis of the lock body is 46 cm from the lower edge of the rear door.

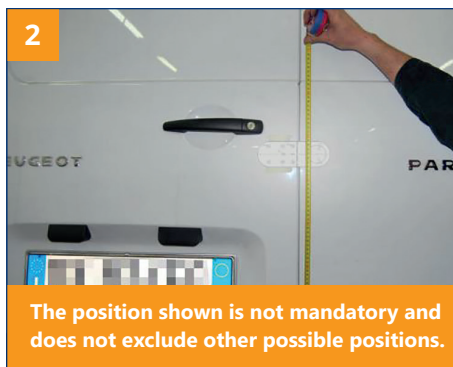

The position shown is not mandatory and does not exclude other possible positions.


Align the vertical axis (dashed line) with the edge of the rear door. Mark the 9 mm holes.*

Continue with the steps described in the general installation procedure.

SIDE DOOR



1. Remove the panels from the side door and the side panel. 2. Position the drilling template. The longitudinal axis of the lock body is 10 cm from the housing of the door guide (see detail photo).

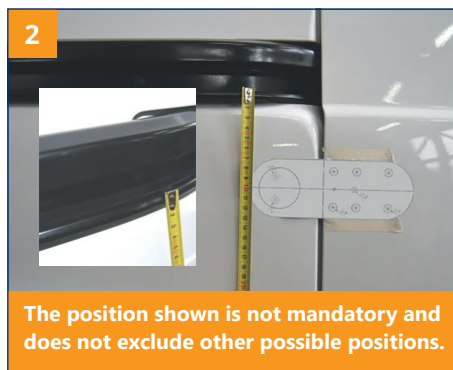

The position shown is not mandatory and does not exclude other possible positions.

Align the vertical axis (dashed line) with the edge of the side door. Mark the 9 mm holes.*

Continue with the steps described in the general installation procedure.

* Take particular care when drilling near the edge. Before drilling, check that the head of the M8 pin will fit within the edge. When drilling the hole for routing the emergency release cable, drill through the outer sheet metal only so that the cable can be inserted into the door.