

## Floor installation

Put the floor sections into the van and joint them by using screws.

You can also use adhesive to glue the floor to the van.


Please note: no glue is included in the kit!

After the floor parts have been jointed together, fix the floor to the van with the lashing cups provided.

Adjust the lashing cup height using the provided spacers and washers.

If the floor has a support piece, fix it to floor from below before installing the floor into the van.

Alutrims and aluplate (if ordered) will be installed at the Kore factory.

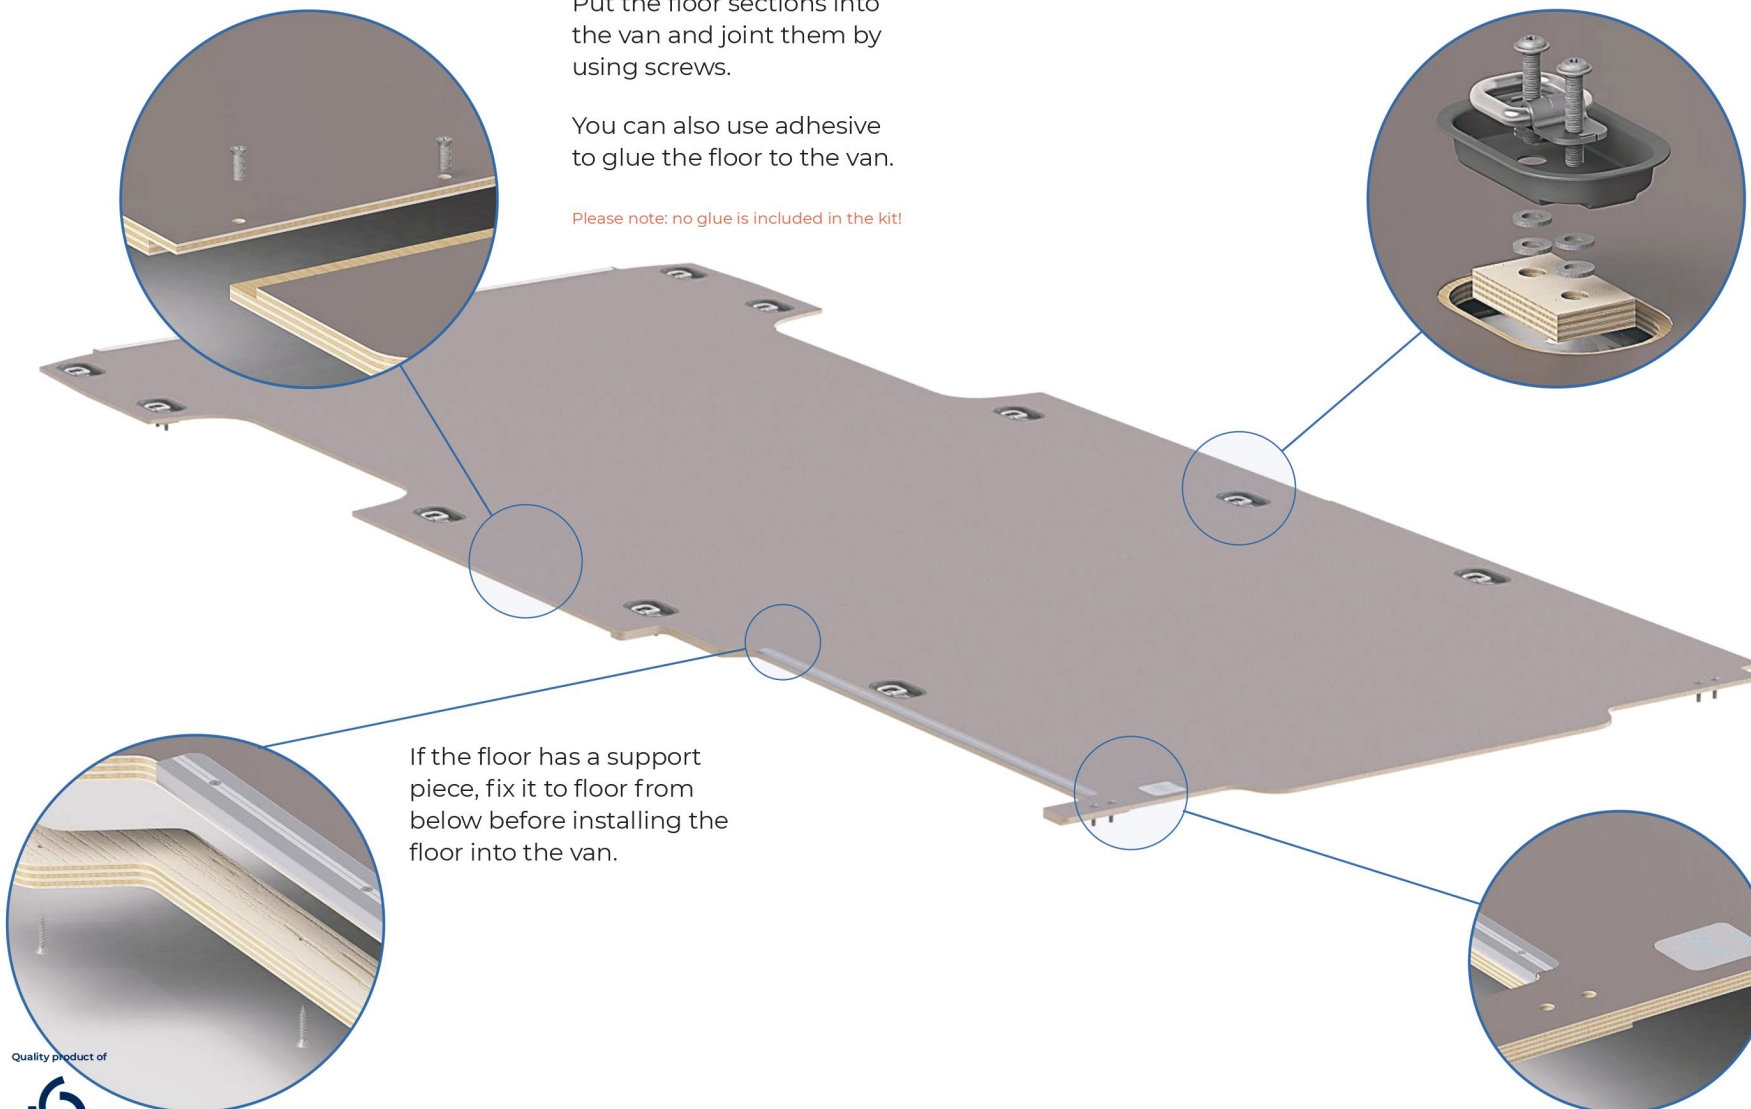

Quality product of



KOSKISEN

www.koskisen.com

### Floor installation

- » Please make sure that you have the correct parts and accessories for your van model.
- » Use compatible tools to assembly all the accessories.
- » Use only original Kore accessories for your floor.
- » Install in accordance with the floor drawing.
- » Remove the original lashing cups.
- » If support pieces for the floor are provided, attach those in the correct places before installing the floor.
- » If a support piece for the threshold is provided, fix it to the floor from below before installing the floor section into the van.
- » If you are also installing plastic Kore wheel arch covers, place those over the wheel arches before installing the floor.
- » Place the floor sections into the van, starting from the front.
- » You may also use adhesive to fix the floor to the van. **Please note that no glue for the floor is included!**
- » Secure the floor section joint(s) with the provided screws.
- » Place the support pieces and washers under the lashing cups. Carefully adjust the number of washers to prevent the floor from bending. Make sure you are using enough washers to fill the gap.
- » Install the lashing cups and lashing rings and bolt down. If there are bolts provided with the floor, replace the original bolts with the new Kore bolts.
- » If you need more support, please contact your distributor or the Kore Service Center.