



Tx15, 20

SQ 2



Ferrure



Push pin




Depending on your vehicle and the associated Kit,
not all hardware will be used


3.5 x 25
T15




SFS 4.8 x 25
SQ2

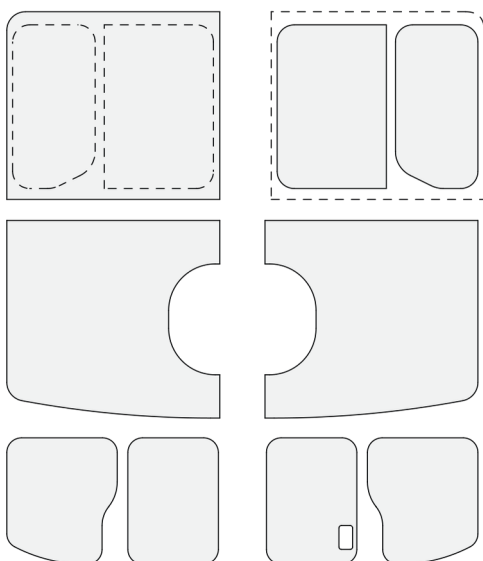


version depending on the vehicle

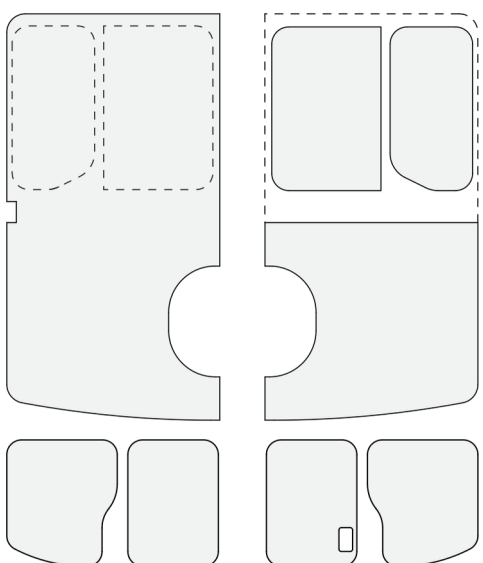







L1






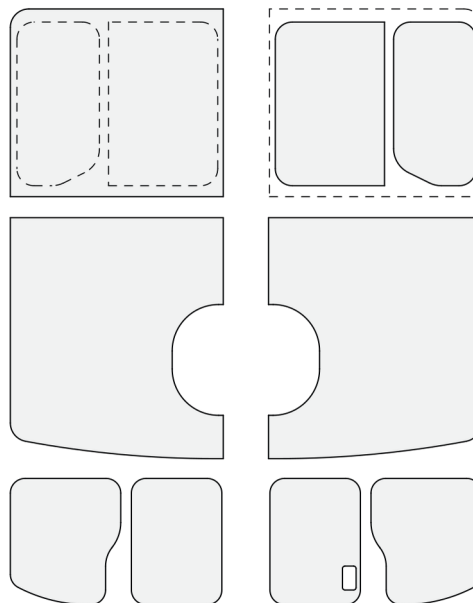


L2

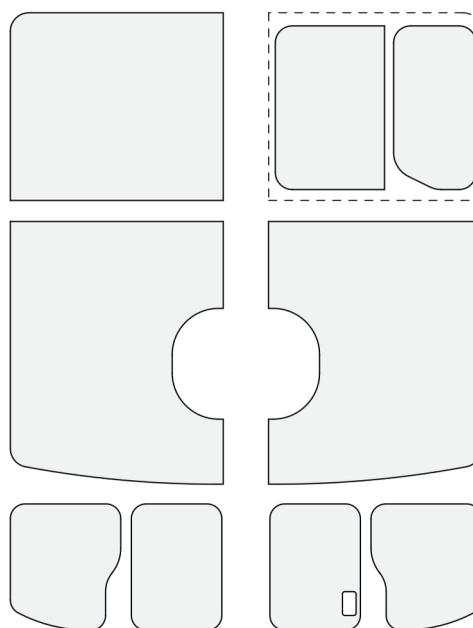

L3

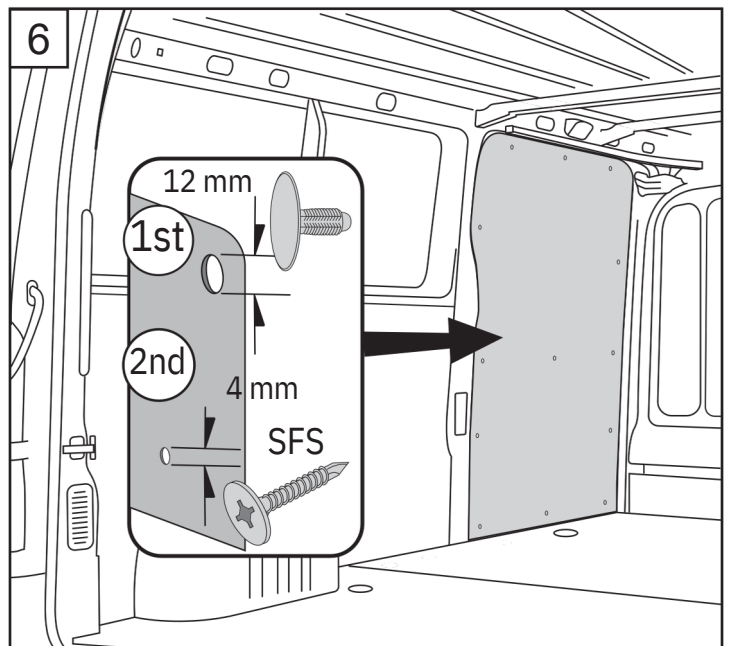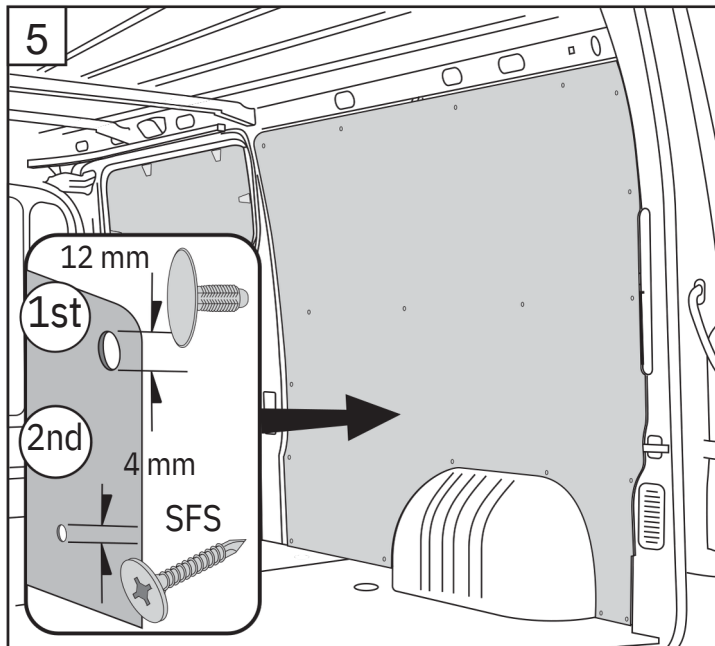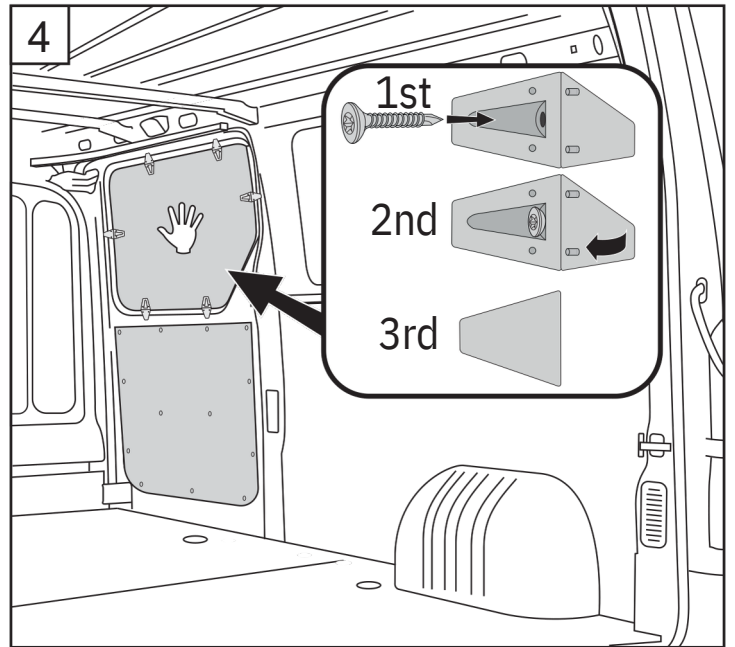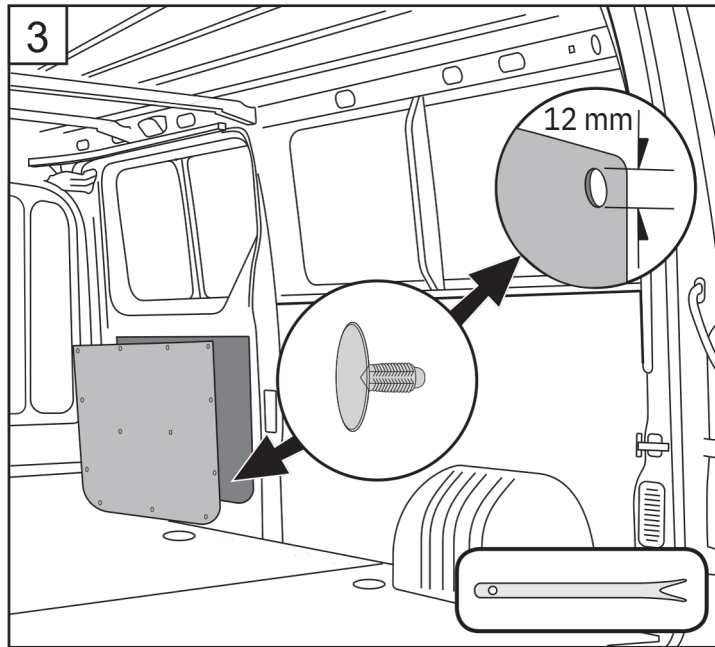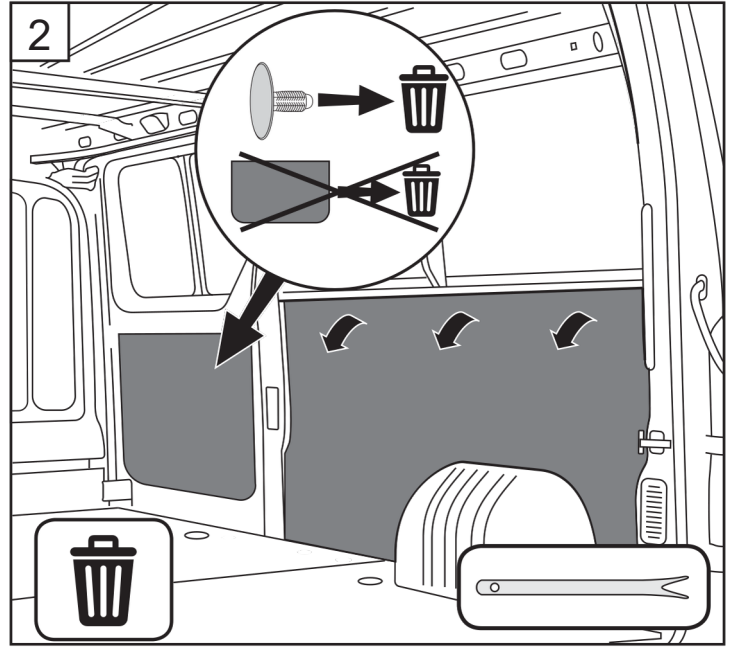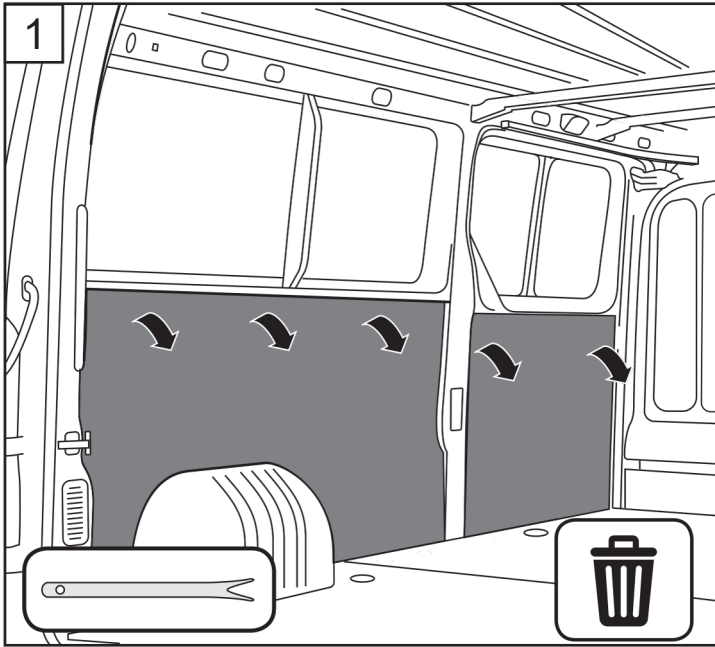

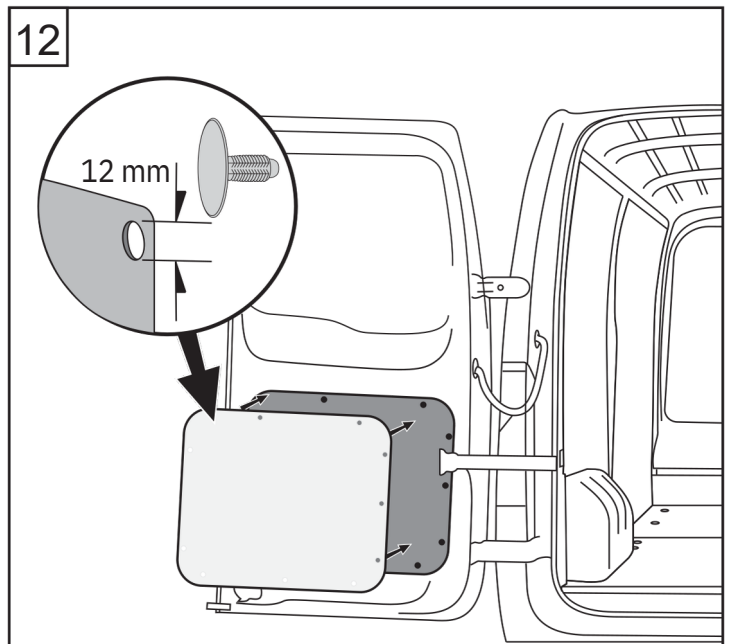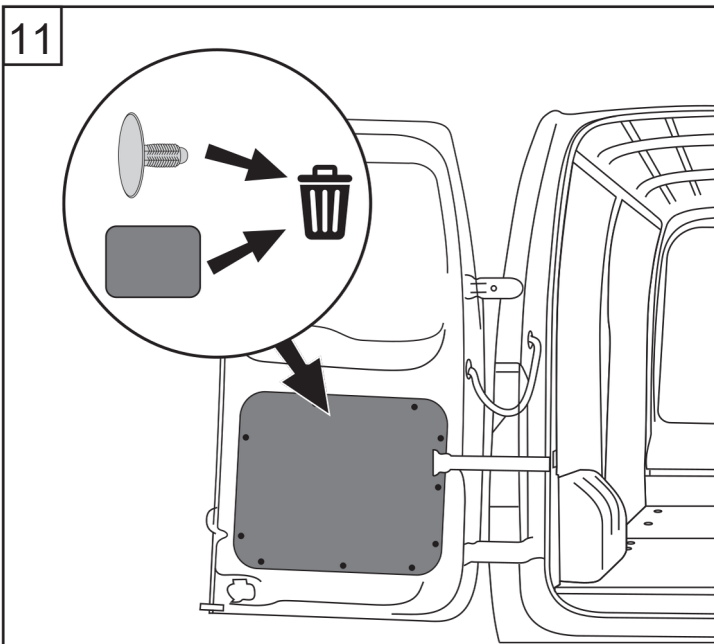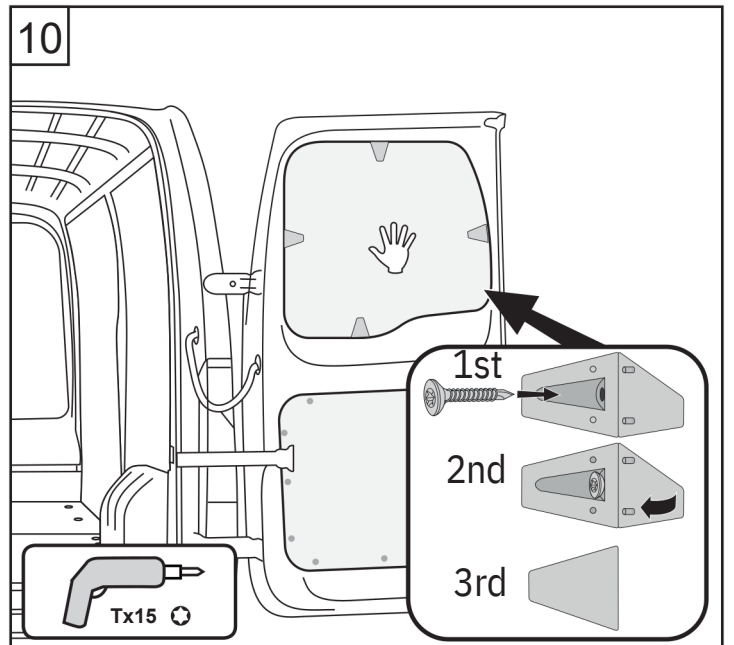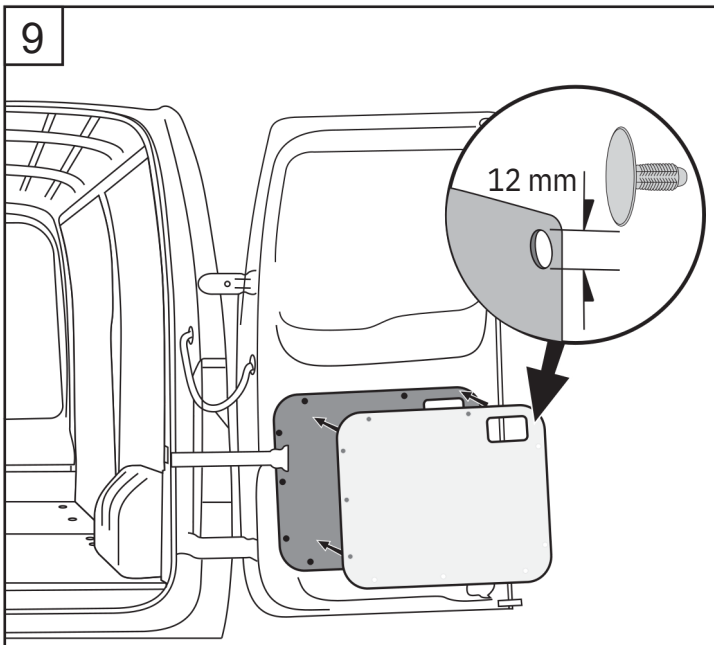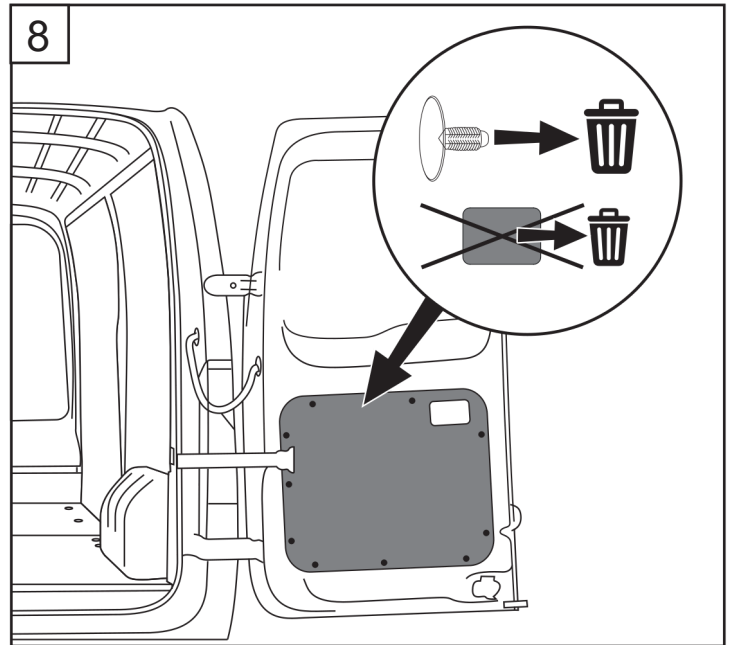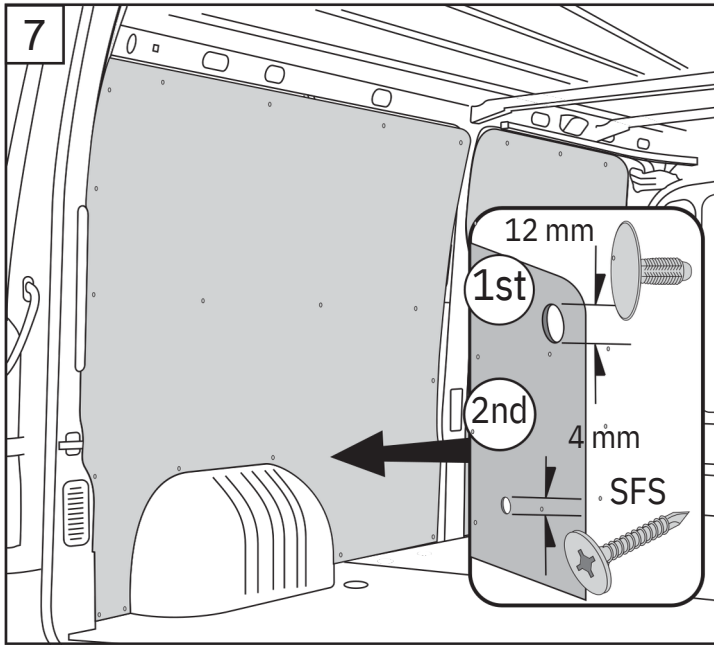

13

