

INSTALLATION MANUAL USE AND MAINTENANCE

CARGOBLOCK® ND

**Commercial vehicle load
compartment door protection**

Codice Ean **8056814562748**

Application:
Renault Master IV





Renault Master

A - INTRODUCTION

Objective of the Handbook

This manual is intended to provide detailed guidelines and essential information for the correct installation of the CargoBlock ND anti-theft system on your vehicle. It is recommended to scrupulously follow all the procedures indicated, which are essential to ensure a quick and optimal installation. **Warning** Before proceeding with the installation, it is essential to check that the rear and side doors are correctly aligned and that the images in this manual match those of the vehicle on which the system is to be installed. ST Automotive accepts no responsibility for any damage to the vehicle resulting from incorrect installation or failure to follow instructions.

B - GENERAL INFORMATION

Installing CargoBlock ND

The installation of CargoBlock ND has been rigorously tested on vehicles following the assembly instructions illustrated in the attached manual. **Warranty Registration** To activate the product warranty, it is mandatory to register on the website: <https://web.starblock.it/garanzia-prodotto/>

C -CARATTERISTICHE TECNICHE

CargoBlock ND rappresenta la protezione innovativa per le porte dei vani di carico dei veicoli commerciali, progettato per un'installazione senza fori o modifiche strutturali. Realizzato con piastre in acciaio inox preformate e pre-forate, assicura la massima affidabilità.

Grazie al suo design avanzato e alla tecnologia all'avanguardia, **CargoBlock ND** è pratico e semplice da installare. Viene fornito con piastre di fissaggio dedicate per ogni modello di veicolo, consentendo l'installazione sui punti di fissaggio originali delle serrature, senza necessità di ulteriori fori o modifiche.

CargoBlock ND è dotato della serratura proprietaria

StarBlock®, che incorpora tecnologia avanzata e una chiave a profilo induplicabile.

D – CONTENTS OF THE PACK

- 1 Welcome kit
- 2 Set of reflective stickers for rear and side door
- 2 Glass window stickers
- 2 Keys + 1 Emergency Key
- 2 Keychains



Fixings:



1 x M6x25 Stud

1 x M8x25 Stud


Equipment required for installation :



30" torxwrench



40" torxwrench

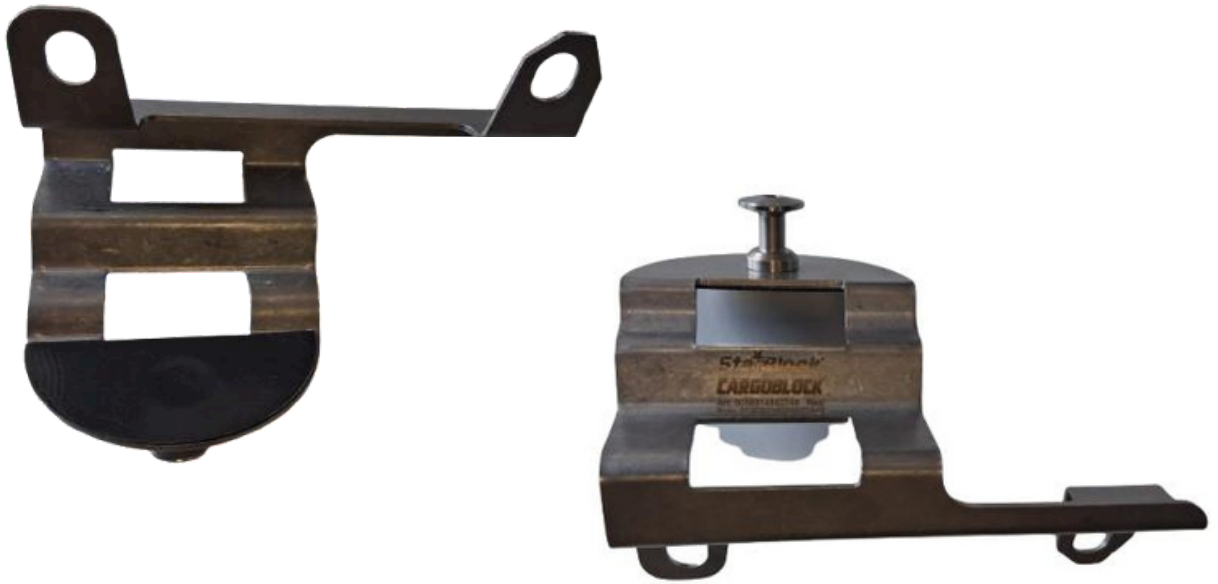

1 - Rear door plate on the side



2-Rear door plate right side



3- Side sliding door plate



4- Side door fixing plate

E – INSTALLATION GUIDE [Rear Door]



Remove the torx screw at the top that secures the lock;



Screw the supplied stud to prevent the lock from detaching, and then unscrew the other two torx screws at the bottom;

E – INSTALLATION GUIDE [Rear Door]



Place the plate at the locking holes;



Secure the plate with the two torx pins supplied, avoiding tightening them completely to allow the final adjustment of the plate; finally unscrew the stud and tighten the torx screw;

E – INSTALLATION GUIDE [Rear Door]




Unscrew the two torx screws securing the hook;



Place the supplied plate at the hook fixing holes. Make sure that when inserting the plate, the gasket does not get pinched between the edges of the door and the plate;

E – INSTALLATION GUIDE [Rear Door]

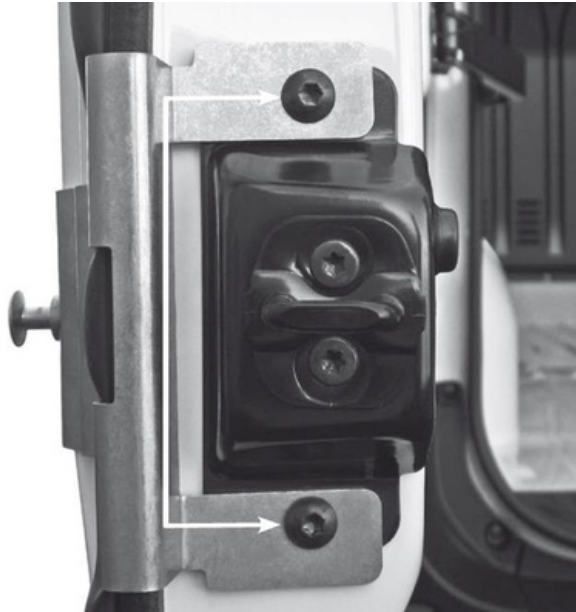

Secure the plate using the original torx screws, avoiding tightening them completely to allow final adjustment.;



Bring the two ports closer together and check that the plates are aligned. Once the correct alignment has been verified, proceed with the tightening of all the torx screws of the hook and lock;

E – INSTALLATION GUIDE [Rear Door]




Completed installation of the CargoBlock ND on the rear door of the vehicle.

E – INSTALLATION GUIDE [Side Door]




Remove the torx screw that secures the side door lock;

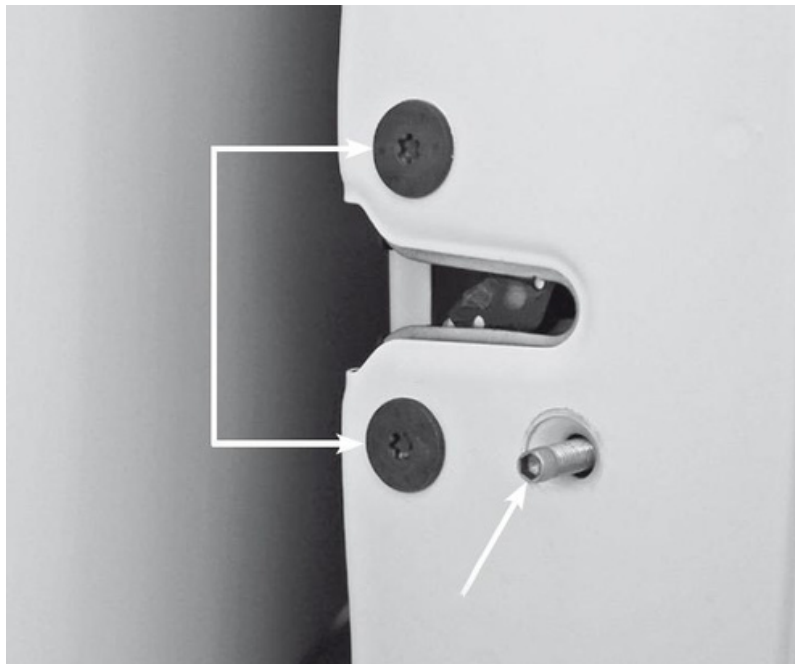


Screw the supplied stud to prevent the lock from detaching. Then unscrew the two torx screws that secure the lock;

E – INSTALLATION GUIDE [Side Door]

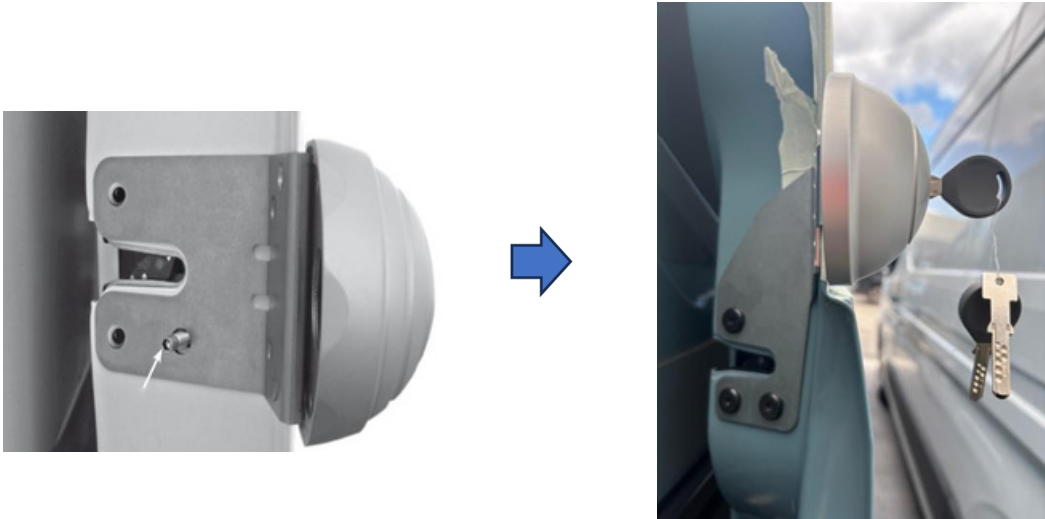


Place the side door plate at the lock fixing holes;

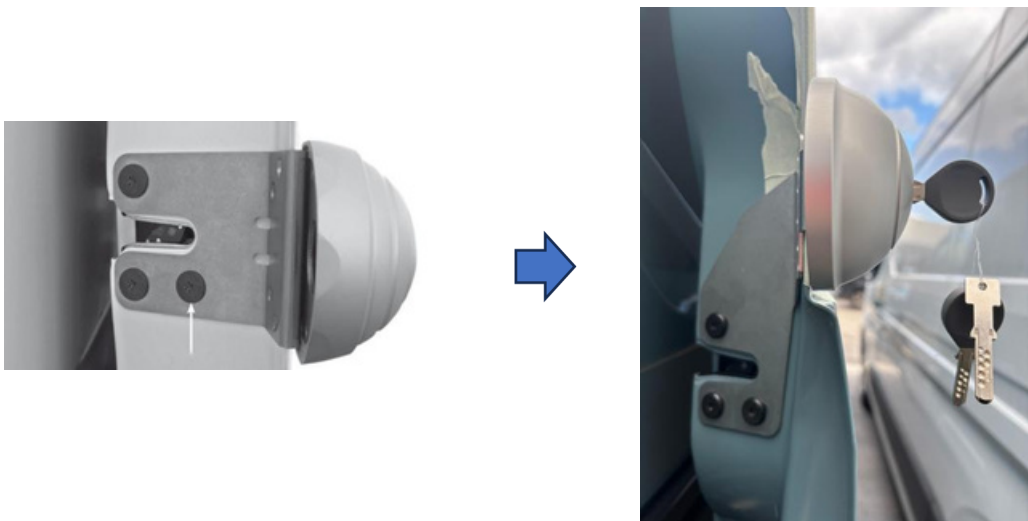


Secure the plate with two supplied torx screws. Remove the stud and tighten the supplied torx screw avoiding fully tightening the torx screws to allow for final adjustment;

E – INSTALLATION GUIDE [Side Door]

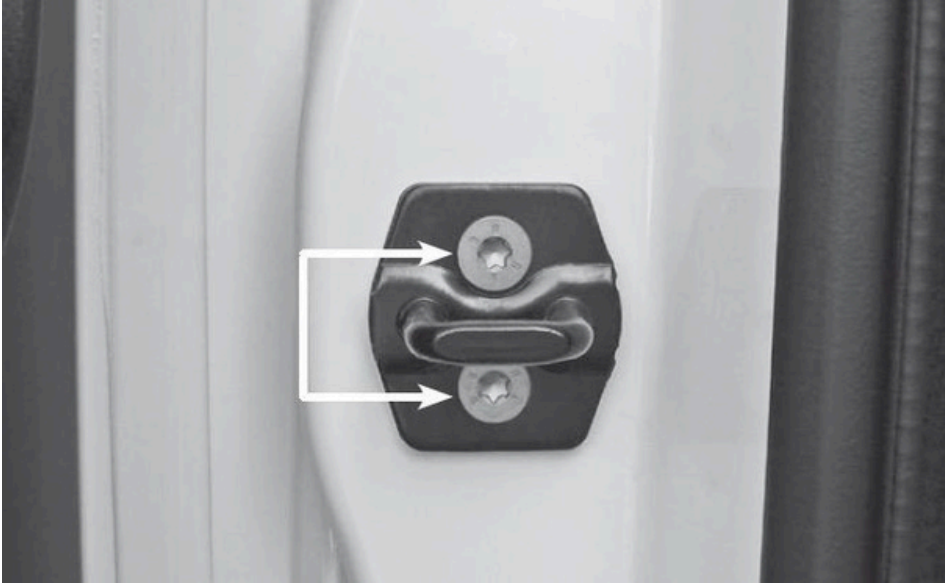


Unscrew the two torx screws securing the hook;

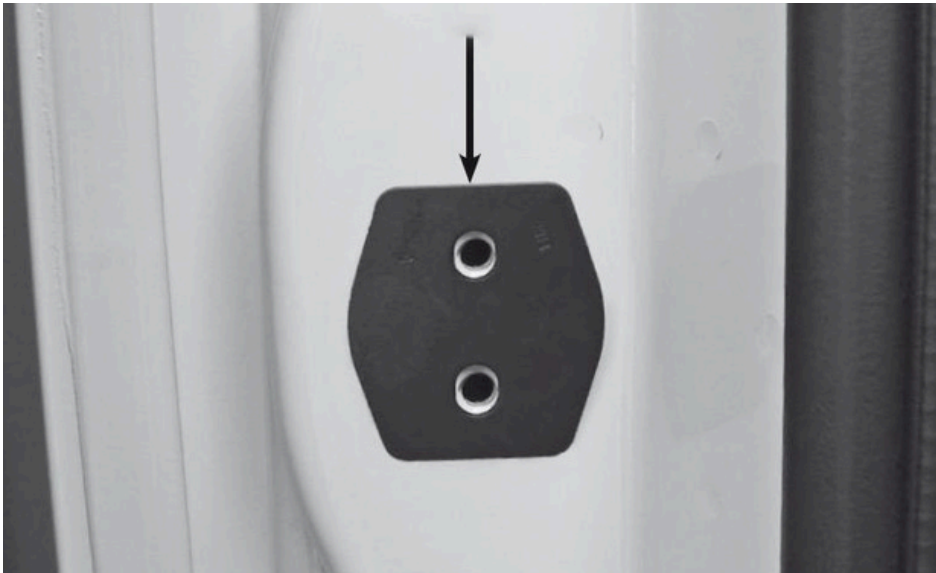

Remove the spacer located behind the lock hook;

E – INSTALLATION GUIDE [Side Door]

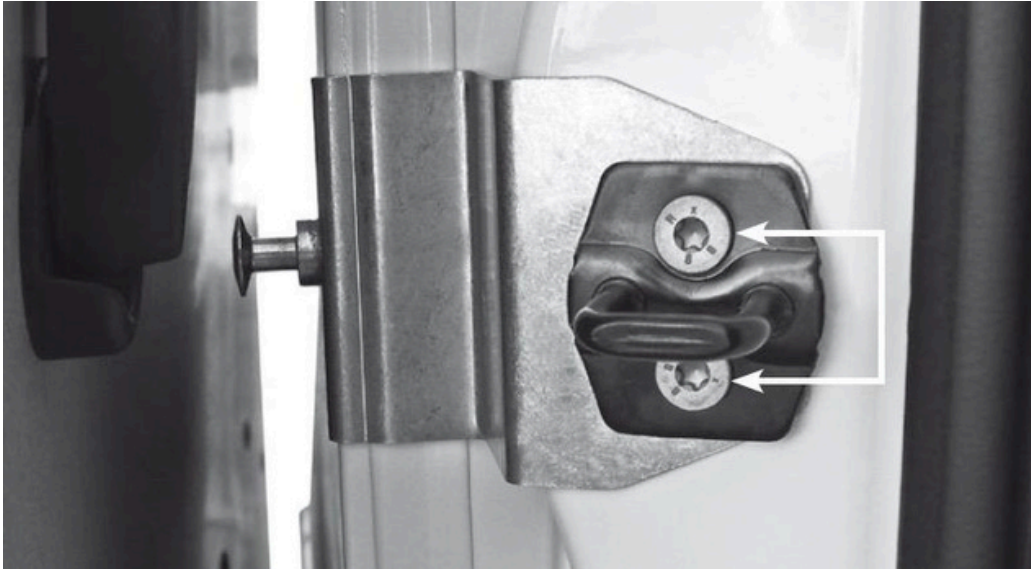

Place the plate at the hook fixing holes. Replace the hook on the plate by securing it with the torx screws, and avoiding tightening them completely to allow final adjustment;



Bring the two ports closer together and check that the plates are aligned. Once the correct alignment has been verified, proceed with the tightening of all the torx screws of the hook and lock;

E – INSTALLATION GUIDE [Side Door]



Completed installation of the CargoBlock ND on the side door of the vehicle.

F – USE AND MAINTENANCE

HOW TO USE CARGOBLOCK

1. Opening CargoBlock ND:

Insert the key into the lock on the rear or side doors. Any side of insertion is useful.

Turn the wrench 90° clockwise. In this position, the key cannot be pulled out of the lock.

2. Closing CargoBlock:

Close the vehicle doors perfectly.

Turn the key counterclockwise.

Then remove the key from the lock.

CARGOBLOCK MAINTENANCE

1. Periodic cleaning:

Remove any dust deposits from the product and the lock.

Apply a dry lubricating spray into the lock and mechanism.

2. Maintenance Frequency:

It is recommended to perform maintenance every six months.

Carry out maintenance more frequently when used in particularly dusty, sandy or dirty environments.

3. Additional Protection:

If you use your vehicle on muddy roads, we recommend using the anti-mud device to secure the lock.



ST AutomotiveSrl
Ss96 Km 119
70026 Modugno (BA)
T.+39 080 2143503
info@starblock.it



Rev.6 June 27 - 8056814562748 New
Renault Master



starblock.it