

# MONTAGEANLEITUNG

sun-10417abc · Mercedes-Benz T-Klasse 2021- SunClip Auto Sonnenschutz



DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

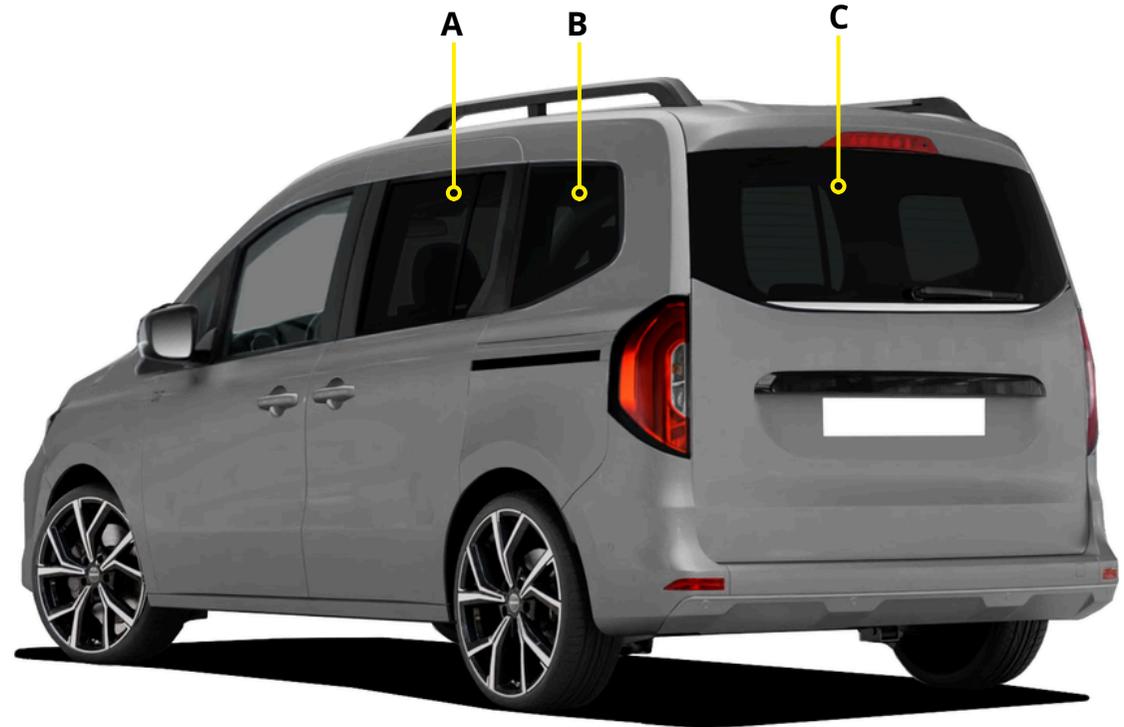

2x A



10x SC6-40



2x B



4x SC8-20




1x C



4x SC8-20





1x

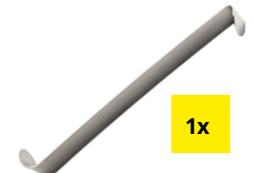





# MONTAGEANLEITUNG

sun-10417abc · Mercedes-Benz T-Klasse 2021- SunClip Auto Sonnenschutz

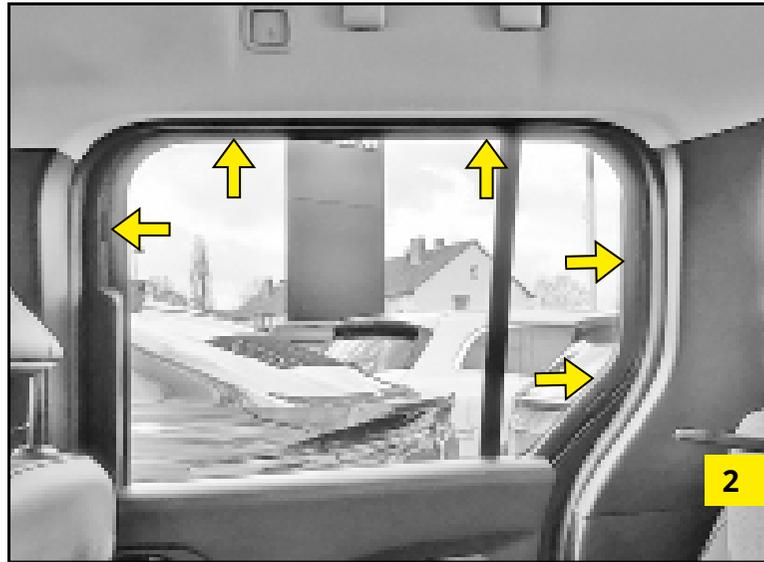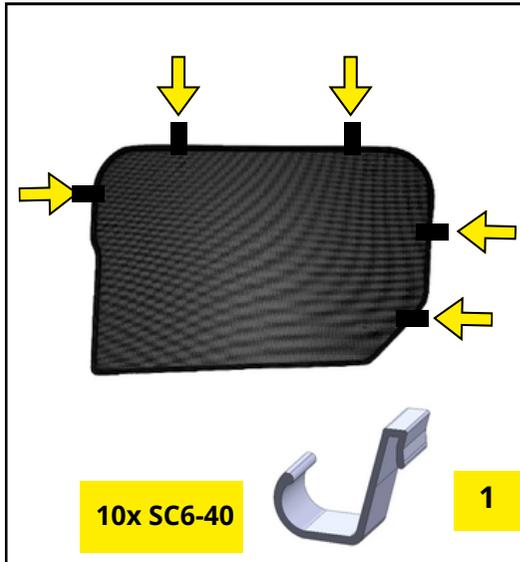

# MONTAGEANLEITUNG

sun-10417abc · Mercedes-Benz T-Klasse 2021- SunClip Auto Sonnenschutz

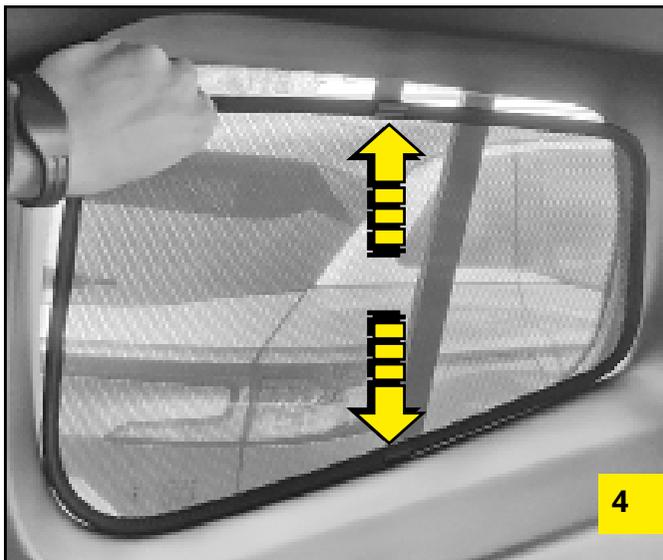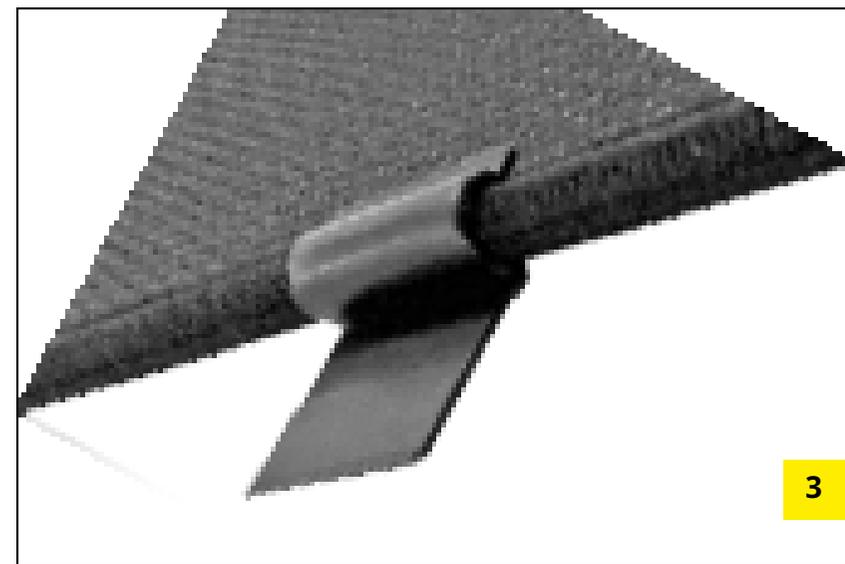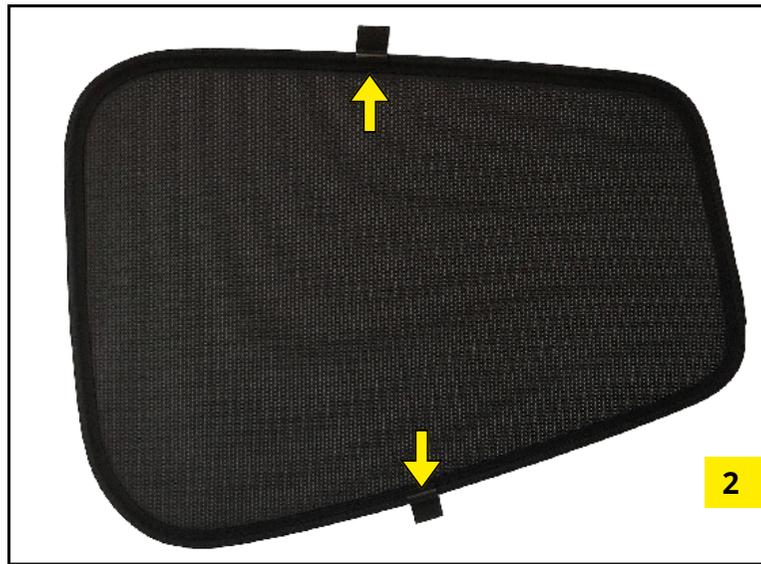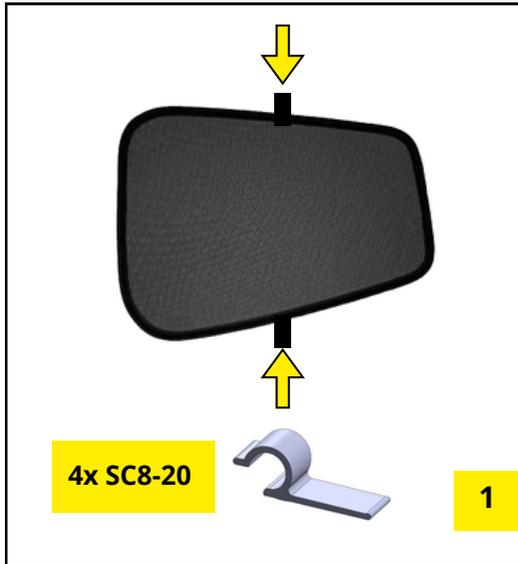

# MONTAGEANLEITUNG

sun-10417abc · Mercedes-Benz T-Klasse 2021- SunClip Auto Sonnenschutz

